



Wiring and Connector Diagrams

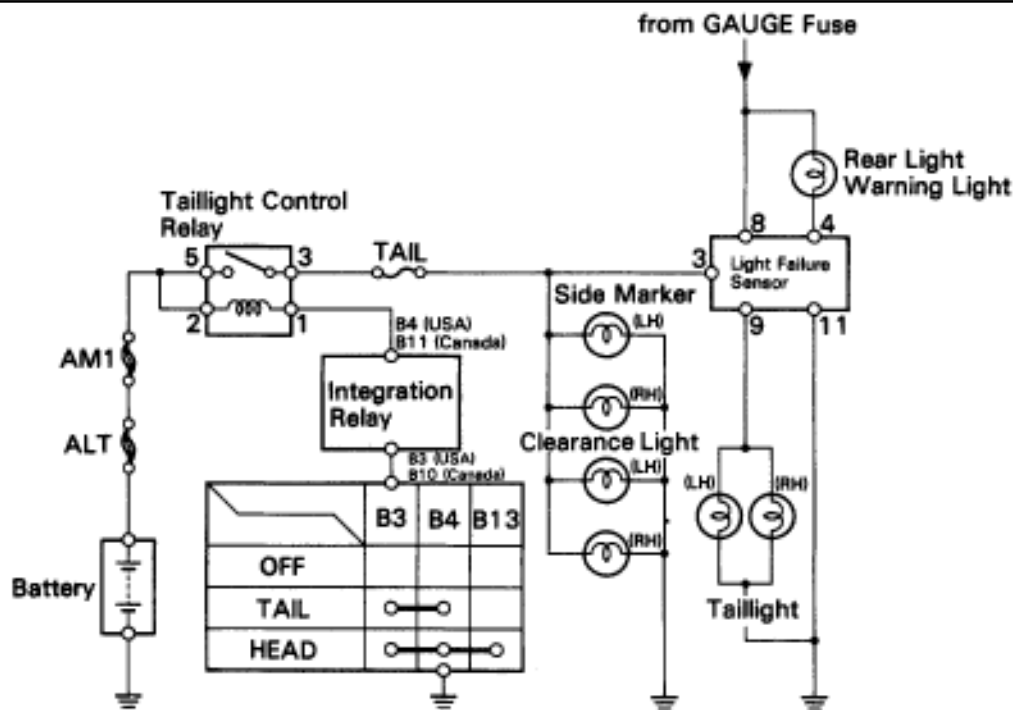

BE6228

Light Control Switch
(Combination Switch)

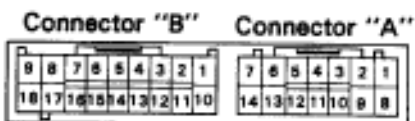


BE6218

Taillight Control Relay




BE4049

 Integration Relay
Connector "A"



BE6219

 Light Failure Sensor



8-12-2

Connector "B"



(USA)

BE6091



(CANADA)

BE6220