

Parts Replacement (Cornering Light)


REPLACEMENT OF FRONT TURN SIGNAL LIGHT

1. REMOVE FRONT TURN SIGNAL LIGHT

- (a) Disconnect negative (–) terminal from the battery.

CAUTION: Work must be started after approx. 20 seconds or longer from the time the ignition switch is turned to the "LOCK" position and negative (–) terminal cable is disconnected from the battery.

- (b) Remove front under cover. (See page [BO-92](#))
(c) Remove a screw and two nuts.
(d) Remove cornering light from bumper.
(e) Disconnect connector.

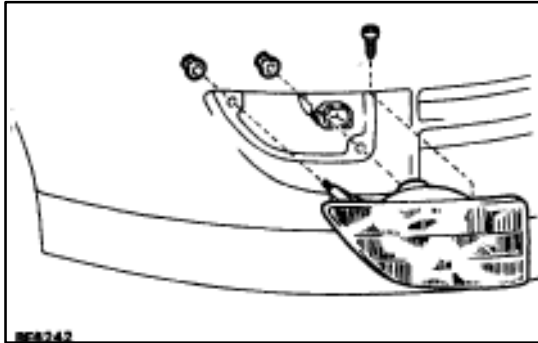

2. INSTALL FRONT TURN SIGNAL LIGHT

For installation follow the removal procedure in reverse.

(Front Turn Signal Light)

REPLACEMENT OF FRONT TURN SIGNAL LIGHT

(See page [BE-37](#))

HINT: Replacement of Headlight (LO-Beam)

(Rear Combination Light)

(See page [BE-56](#))