

## Troubleshooting

### Turn Signal and Hazard Warning Light System

You will find the cause of trouble more easily using the table shown below. In this table, the numbers indicate the order priority of the causes in trouble. Check each part in the order shown. If necessary, replace the parts.

See page	BE-4, 21	BE-4, 20	BE-26	BE-68	BE-68	BE-46	-	BE-6
Part name	HAZ-HORN Fuse	TURN Fuse	Ignition Switch	Hazard Warning Switch	Turn Signal Flasher	Turn Signal Switch	Wire Harness	Bulb
Trouble								
"Hazard" and "Turn" do not light up.				1	2		3	
The flashing frequency is abnormal.					2		3	1
Hazard warning light does not light up. (Turn is normal.)	1						2	
Hazard warning light does not light up in one direction.				1			2	
*1 Turn signal does not light up.		2	1			3	4	
*2 Turn signal does not light up.		1				2	3	
Turn signal does not light up in one direction.						1	2	
Only one bulb does not light up.							2	1

\*1: Combination Meter, Wiper and Washer do not operate.

\*2: Combination Meter, Wiper and Washer are normal.