



LOCATION OF CONNECTORS



Location of Connectors in Engine Compartment

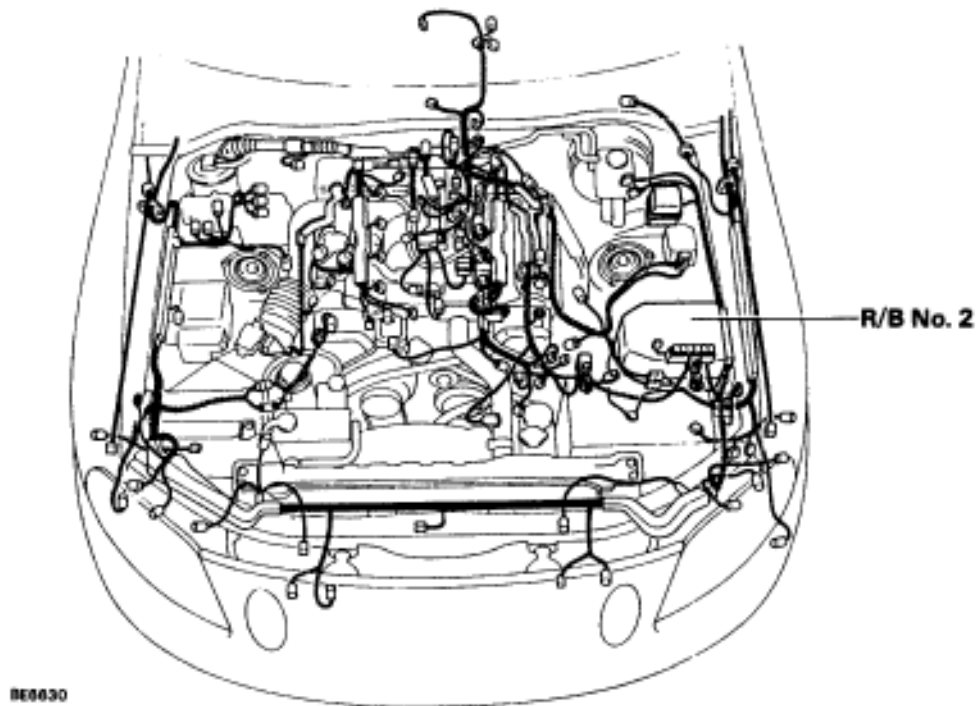


R/B No. 2

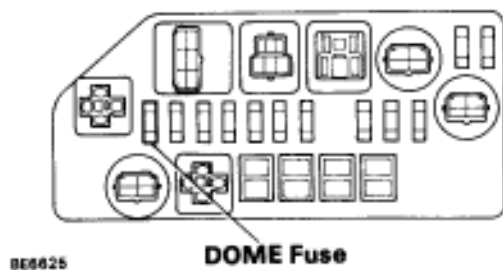


Location of Connectors in Instrument Panel

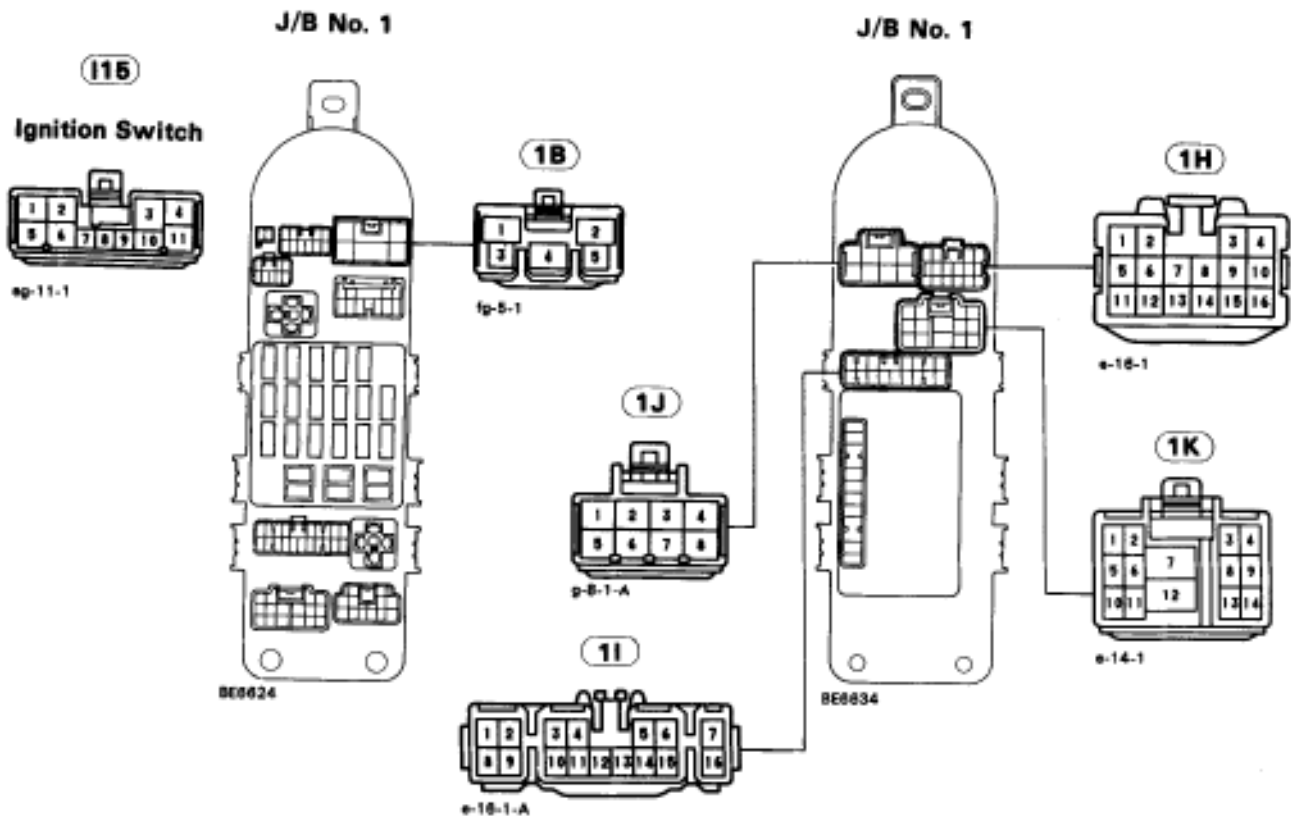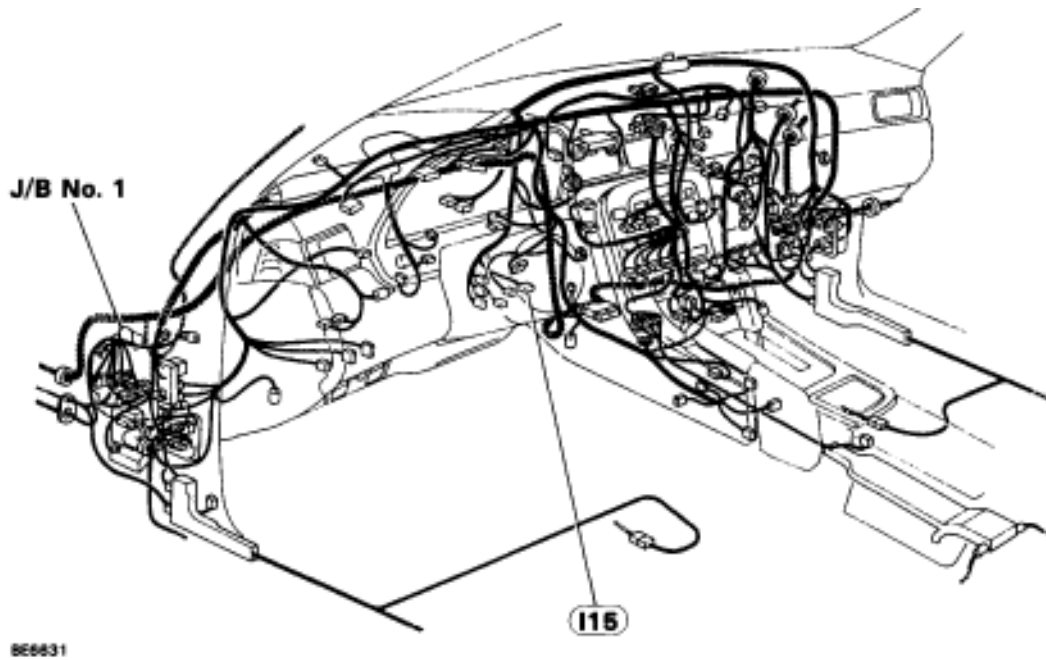


Location of Connectors in Body

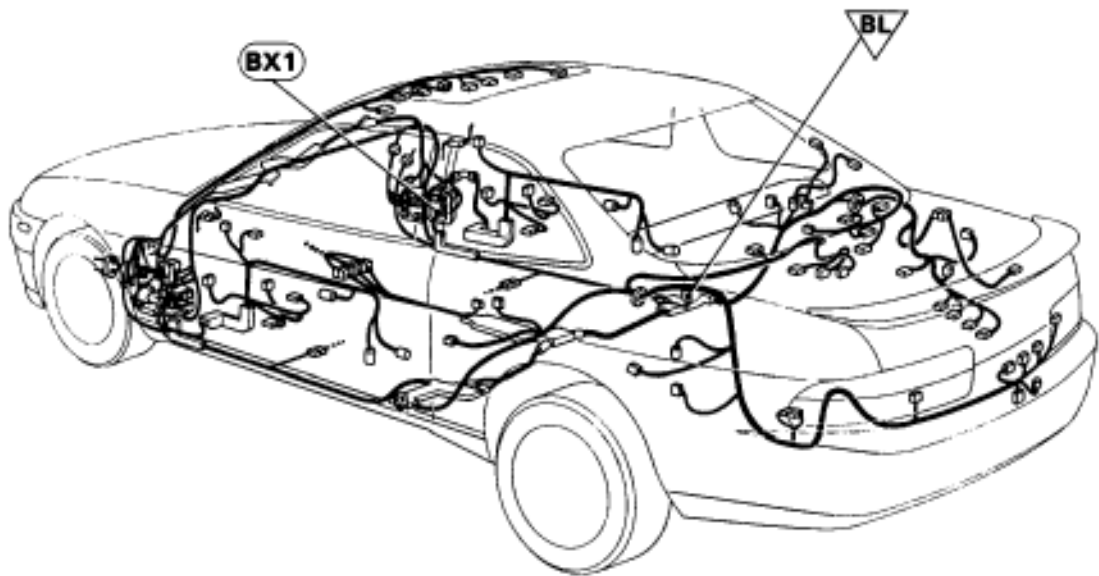

BE6632

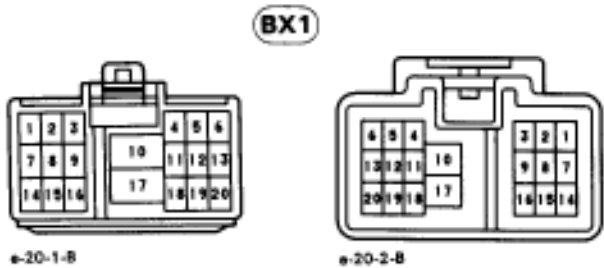

Location of Connectors in Seat

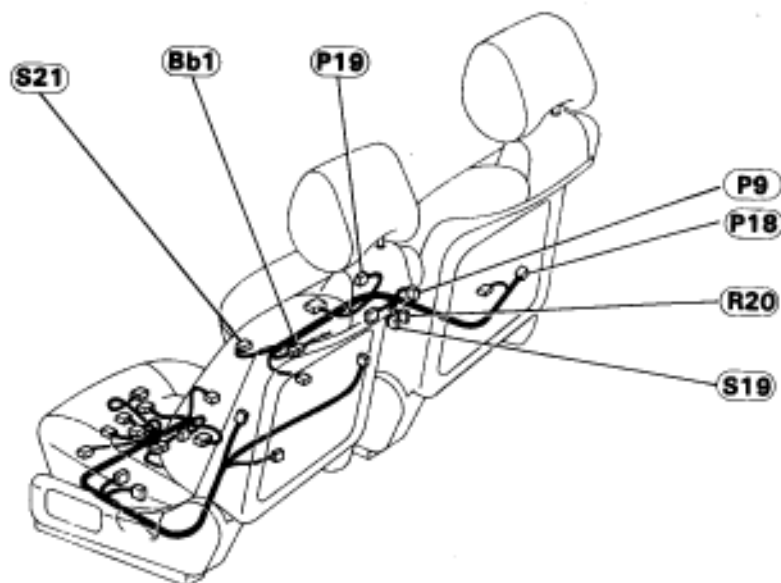**P9****Power Seat Switches**

 
e-6-2

P18**Reclining Motor**

e-2-1

P19**Slide Motor**

H-2-1

R20**Reclining Front Limit Switch**

e-4-1

R20**Reclining Rear Limit Switch**

e-4-1

S19**Slide Limit Switch**


e-2-1-G

S21**Slide Position Sensor**

e-3-1

Bb1

eg-6-1

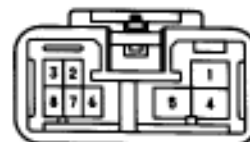

eg-6-2