

Symptom	Suspect Area	See page
Walk-in function and return function do not operate. (However, they operate when using the manual switch).	ECU Power Source Circuit	BE-32 4
Only walk-in operation is not functioning.	Slide Motor Power Source Circuit	BE-32 6
Only return operation is not functioning.	Slide Motor Circuit	BE-32 8
Does not slide even when the manual switch is operated.	Position Sensor Circuit	BE-33 0
Does not recline even when the manual switch is operated.	Slide Switch Circuit	BE-33 4
Seat returns to rear most position during return operation.	Buckle Switch Circuit	BE-33 8
	Limit Switch Circuit	BE-34 0
	Reclining Switch Circuit	BE-34 4
	Passenger's Seat ECU	IN-32