


Slide Motor Circuit


— CIRCUIT DESCRIPTION —

The passenger's seat ECU control the slide motor.

— DIAGNOSTIC CHART —

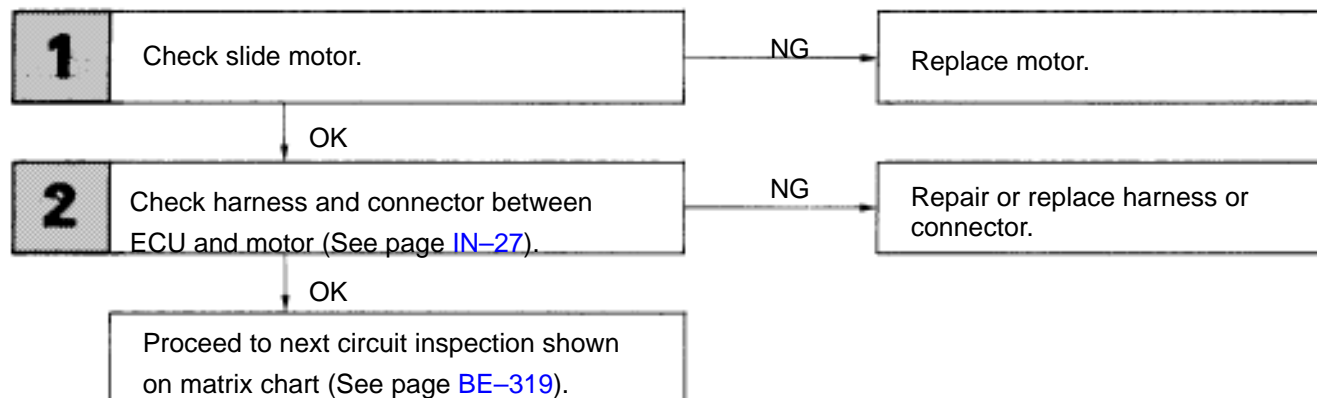


WIRING DIAGRAM

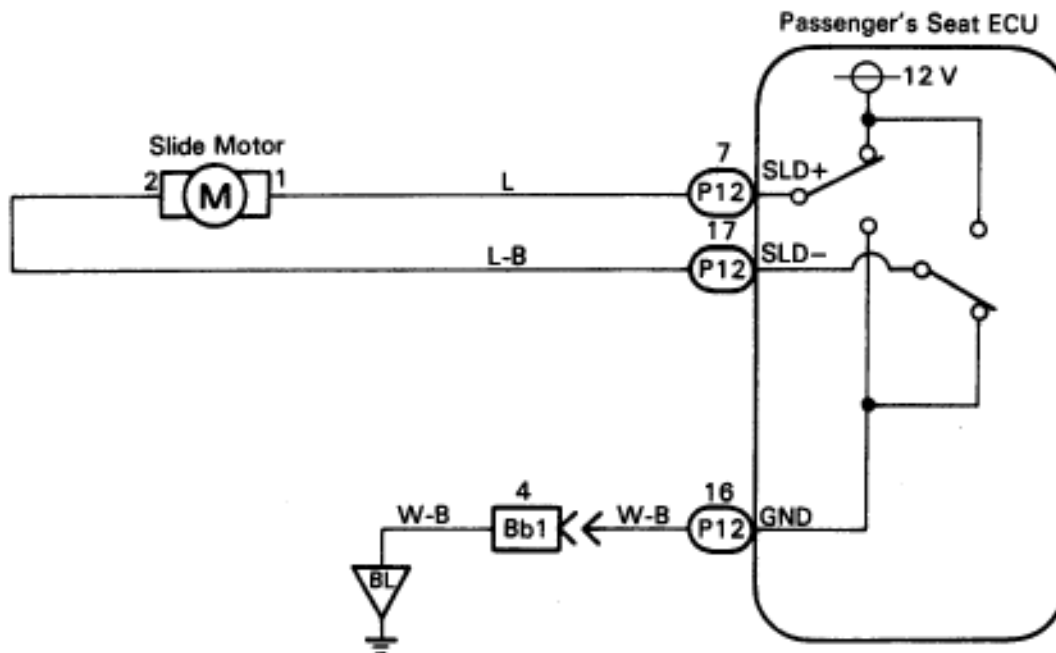

INSPECTION PROCEDURE

1 Check Slide Motor.

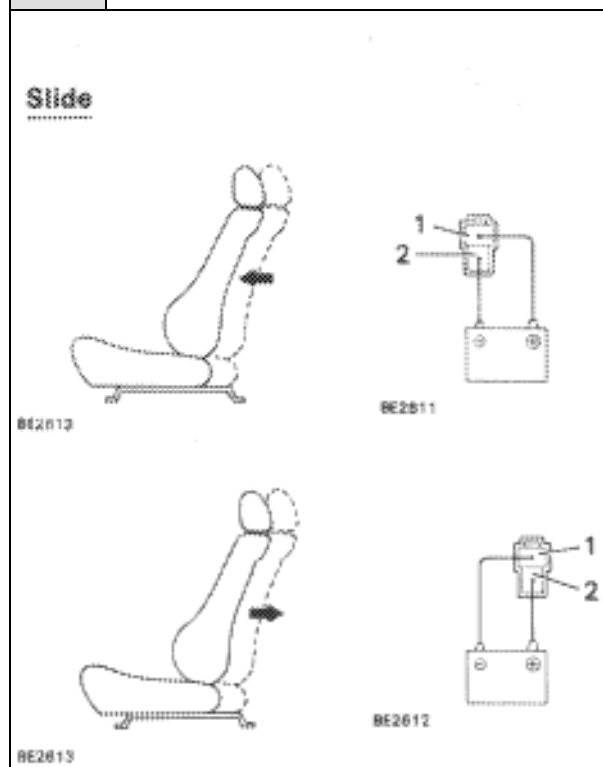

- P** (1) Remove Seat
(2) Disconnect slide motor connector.
- C** Check seat movement when battery voltage is applied to slide motor.
- Connect positive \oplus (negative \ominus) terminal to terminal 1 of slide motor connector and negative \ominus (positive \oplus) terminal to terminal 2.

OK

Terminal	1	2
Movement		
Forward	\oplus	\ominus
Back	\ominus	\oplus

OK

NG

Replace motor.

2 Check for open and short in harness and connector between ECU and motor (See page IN-27).

OK

NG

Repair or replace harness or connector.

Proceed to next circuit inspection shown on matrix chart (See page BE-319).