



LOCATION OF CONNECTORS

Location of Connectors in Engine Compartment

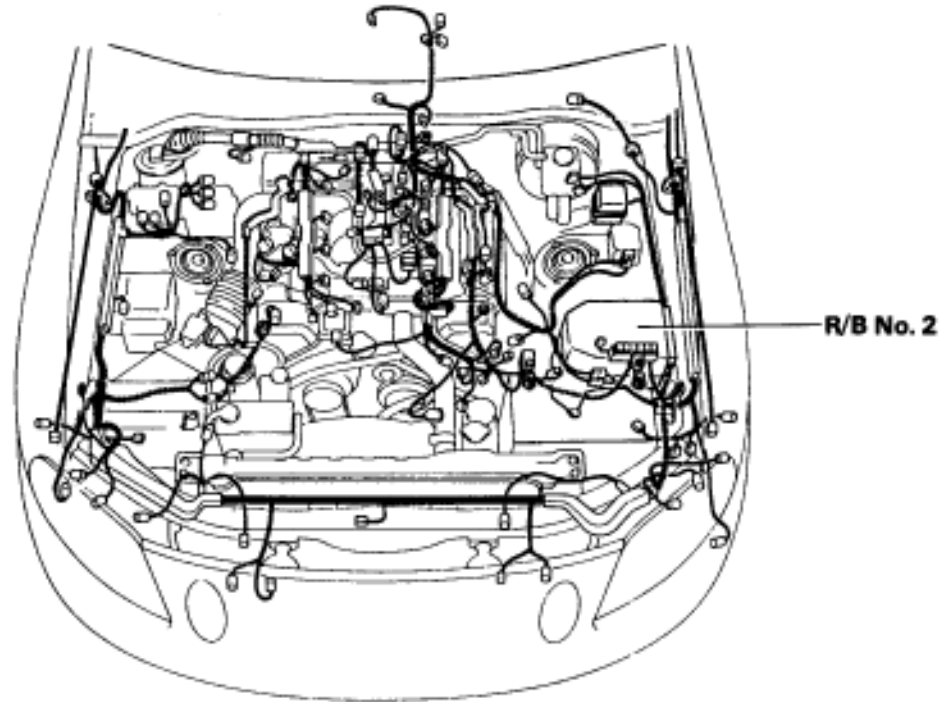


BE0030

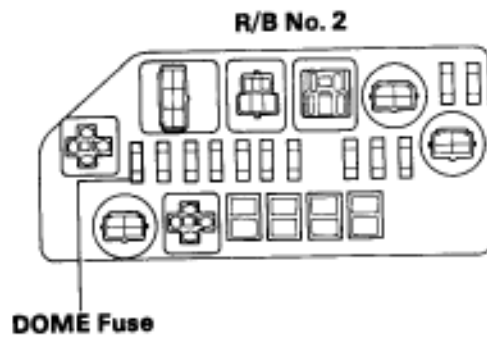

BE0025

Location of Connectors in Body

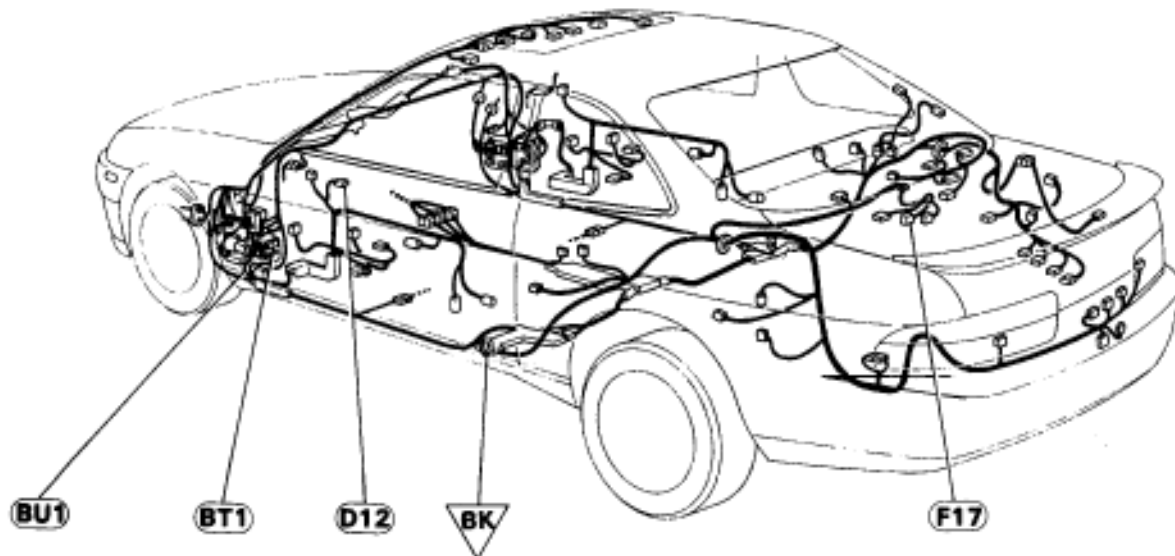

BE6632

D12

**Driving Position Memory
& Return Switches**



8-4-1-C


F17

**Front Vertical
Position Sensor**




6-3-1

BT1

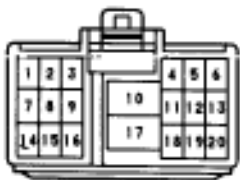

6-20-1-B

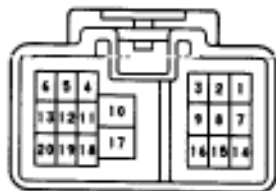

6-20-2-B

BU1




6-10-1




6-10-2


Location of Connectors in Instrument Panel

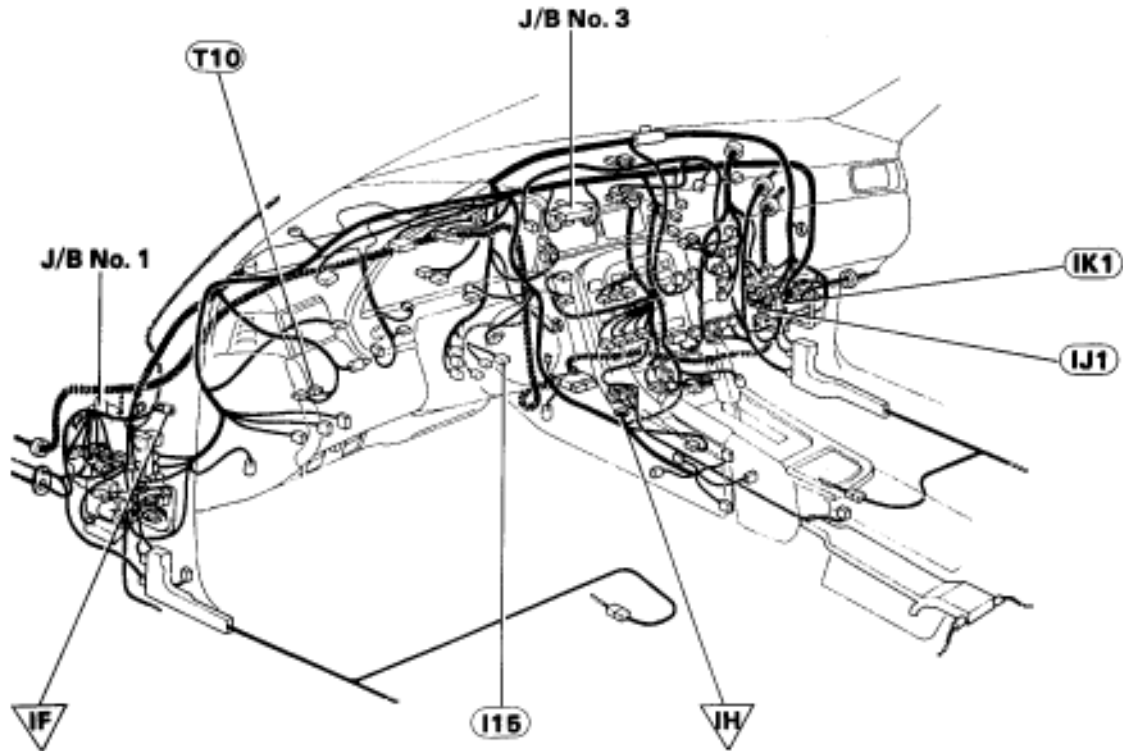

Location of Connectors in Seat

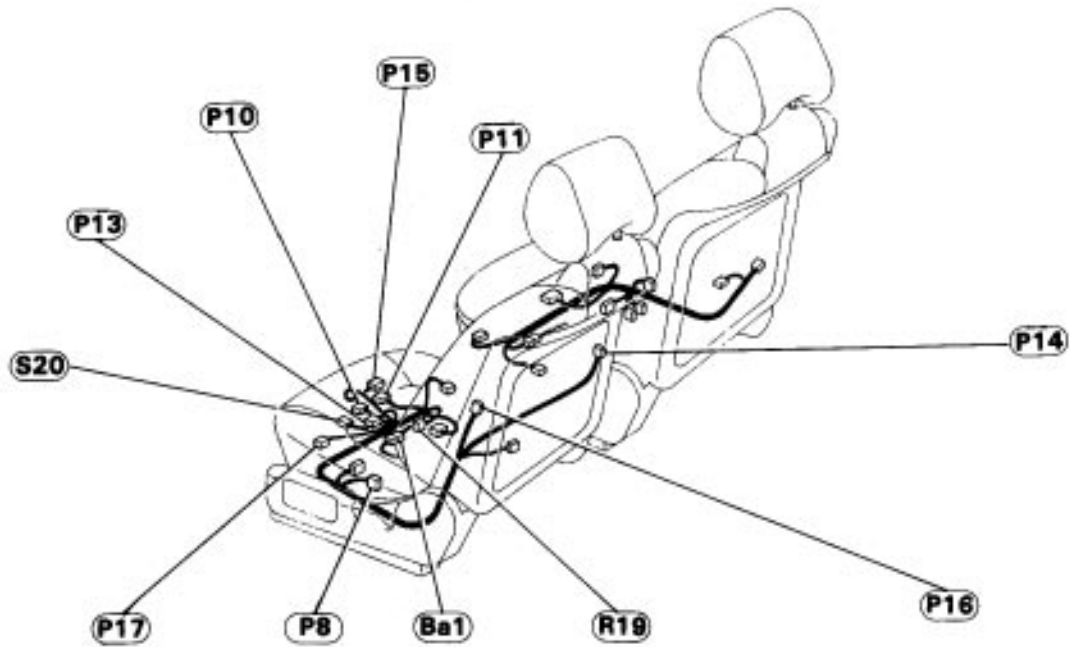

BE0033

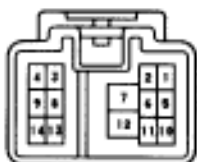P8**Power Seat Switches**

e-14-2

P10**Driver's Seat ECU**

e-16-1-A

P11

e-18-1

P13**Front Vertical Motor**

H-2-1

P14**Lumbar Support Motor**

H-2-1

P15**Rear Vertical Motor**

H-2-1

P16**Reclining Position Sensor**

e-6-1-E

P16**Reclining Motor**

e-6-1-E

P17**Slide Motor**

H-2-1

R19**Rear Vertical Position Sensor**


e-3-1

S20**Slide Position Sensor**

e-3-1

Ba1

e-14-1

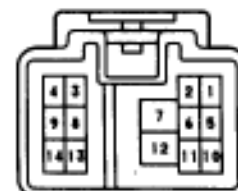

e-14-2