


— CIRCUIT DESCRIPTION


In this condition, if any of the following operations is done, the Tr in the ECU goes off and the headlight control relay switches off, thus stopping the headlights flashing:

- (1) Unlock the LH or RH door with key.
- (2) Turn the ignition switch to ACC or ON position.
- (3) Unlock the doors with the wireless door lock control system.
- (4) Wait for approximately 1 minute.

— DIAGNOSTIC CHART

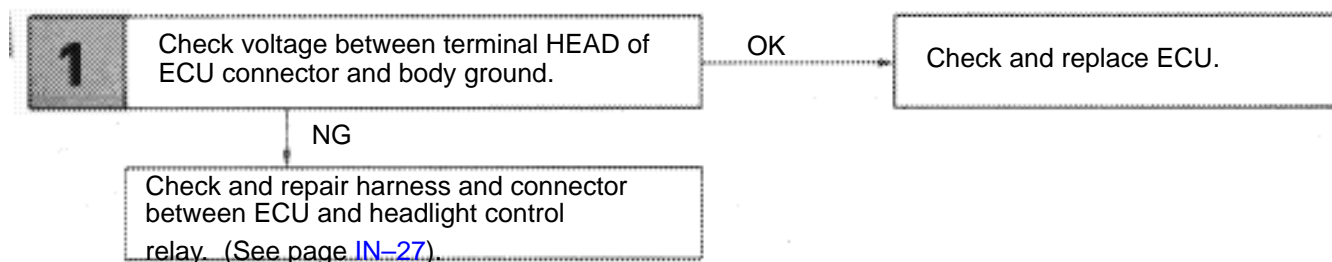


WIRING DIAGRAM

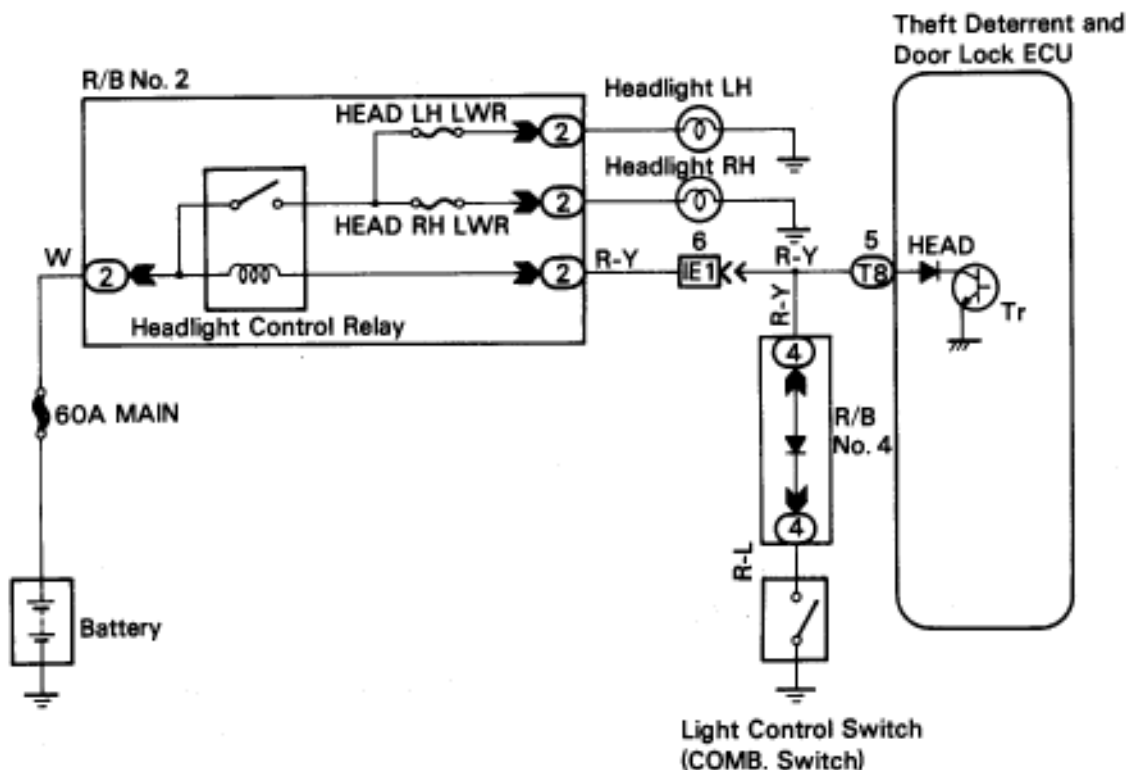

INSPECTION PROCEDURE

HINT: The flow chart below is based on the premise that the headlights light up normally whenever the light control switch is operated. If headlight operation is not normal when the light control switch is operated, proceed to troubleshooting on page [BE-51](#).

1 Check voltage between terminal HEAD of ECU connector and body ground.

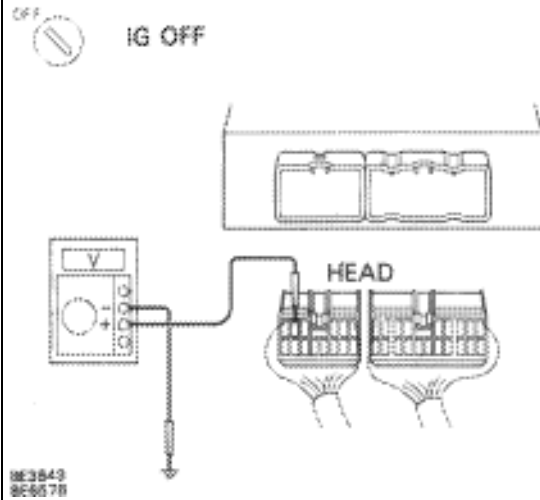

P Disconnect the ECU connector.

C Measure voltage between terminal HEAD of ECU connector and body ground.

OK Voltage: 10 – 14 V

NG

OK

Check and replace ECU.

Check and repair harness and connector between ECU and headlight control relay (See page [IN-27](#)).