


LOCATION OF CONNECTORS

Location of Connectors in Engine Compartment

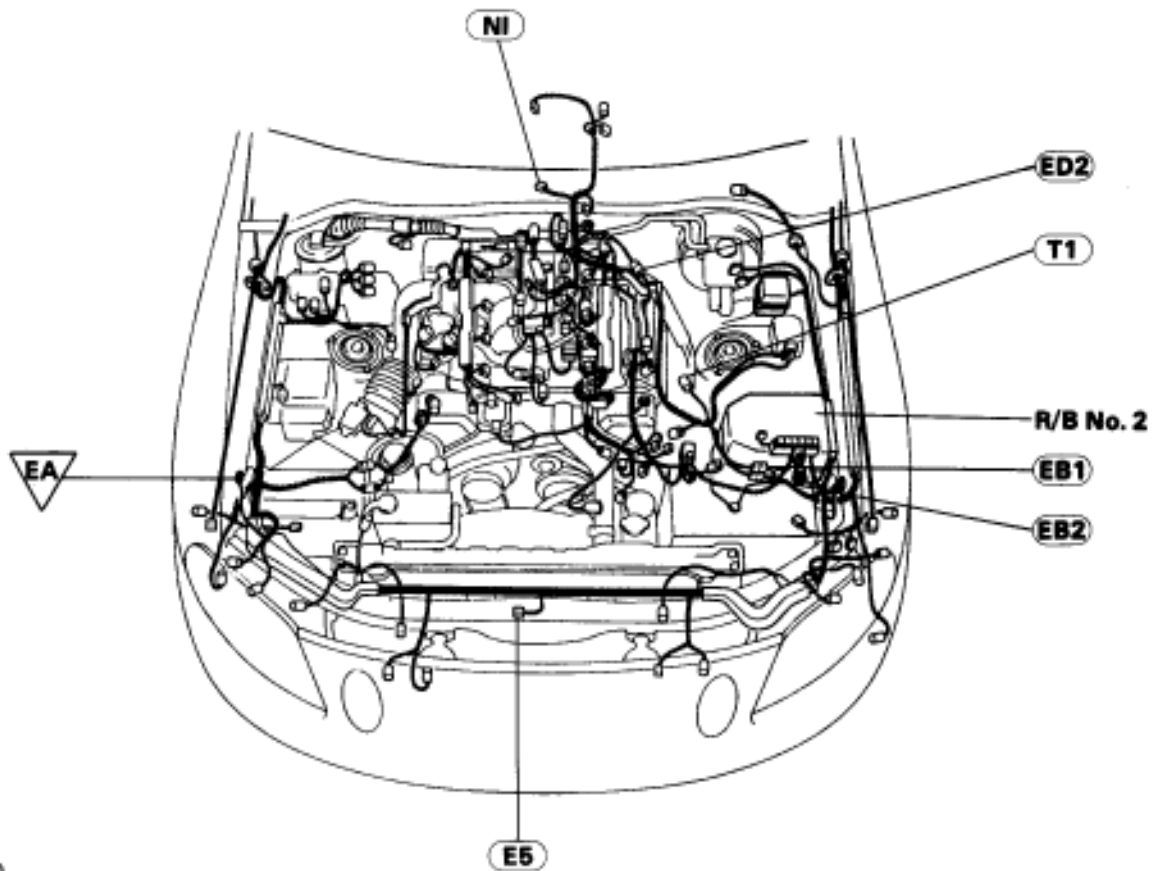

BE0830

E6

**Engine Hood Courtesy
Switch**



h-2-1

N1

**Neutral Start
Switch**



SH-9-1-A


T1

**Theft Deterrent
Horn**



1A-2-1

EB1

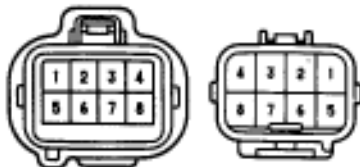

le-8-1-A

le-8-2-A

EB2



lg-3-1-A

lg-3-2-A


ED2



le-2-1-M

le-2-2-M

R/B No. 2

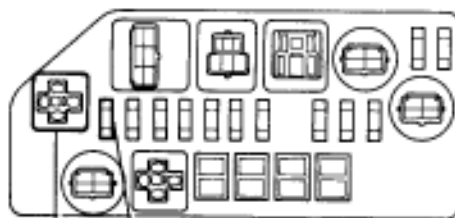


DOME Fuse

Start Relay

BE0025

Location of Connectors in Instrument Panel

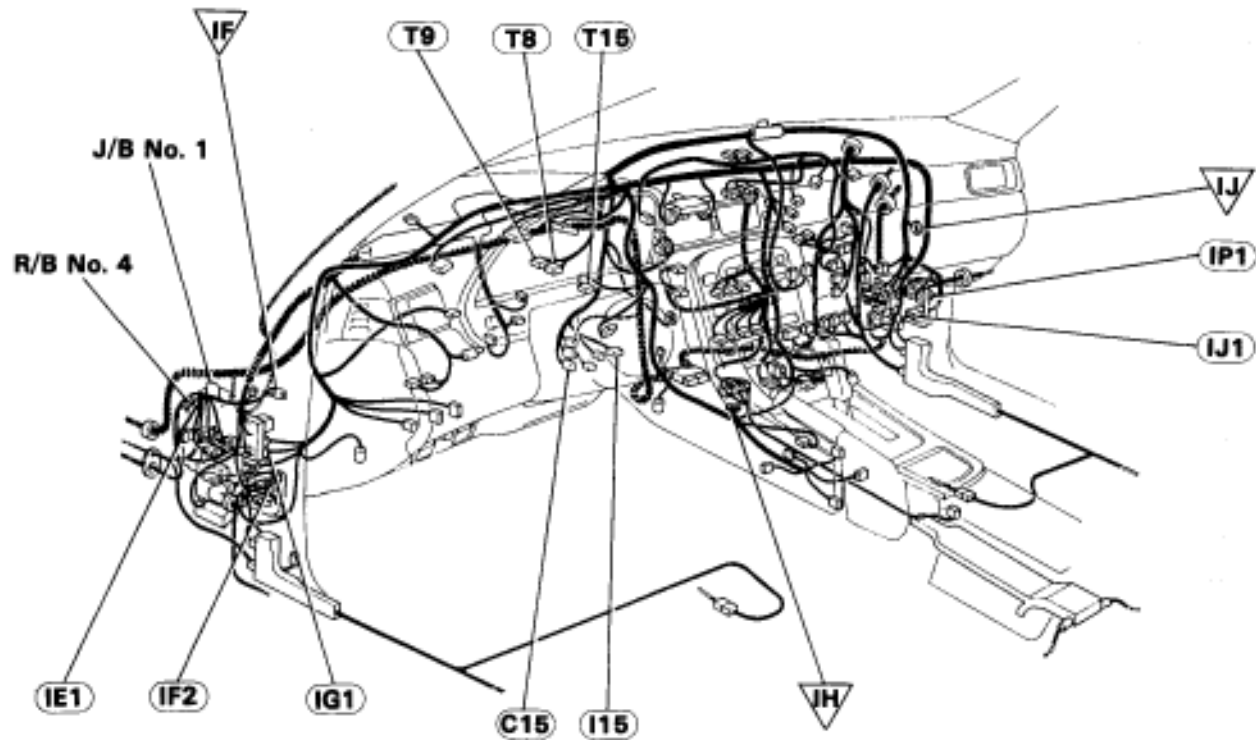

8C8831

C15**Horn Switch****I15****Key Unlock Warning Switch**

eg-11-1

T9**Theft Deterrent and Door Lock ECU**


e-20-1

T8**Theft Deterrent and Door Lock ECU**


e-14-1-A

T15**Indicator Light**


e-12-1

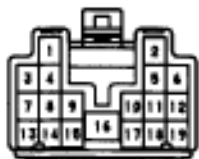IE1

eg-19-1

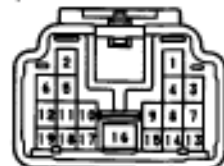

eg-19-2

 IF2


e-20-1



e-20-2

IG1


eh-23-1

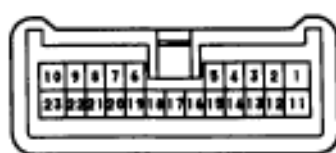


eh-23-2

IJ1


g-14-1

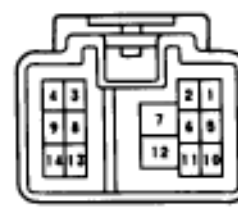


g-14-2

 IP1

e-20-1

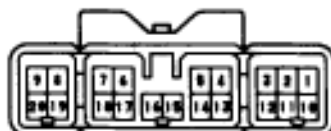


e-20-2

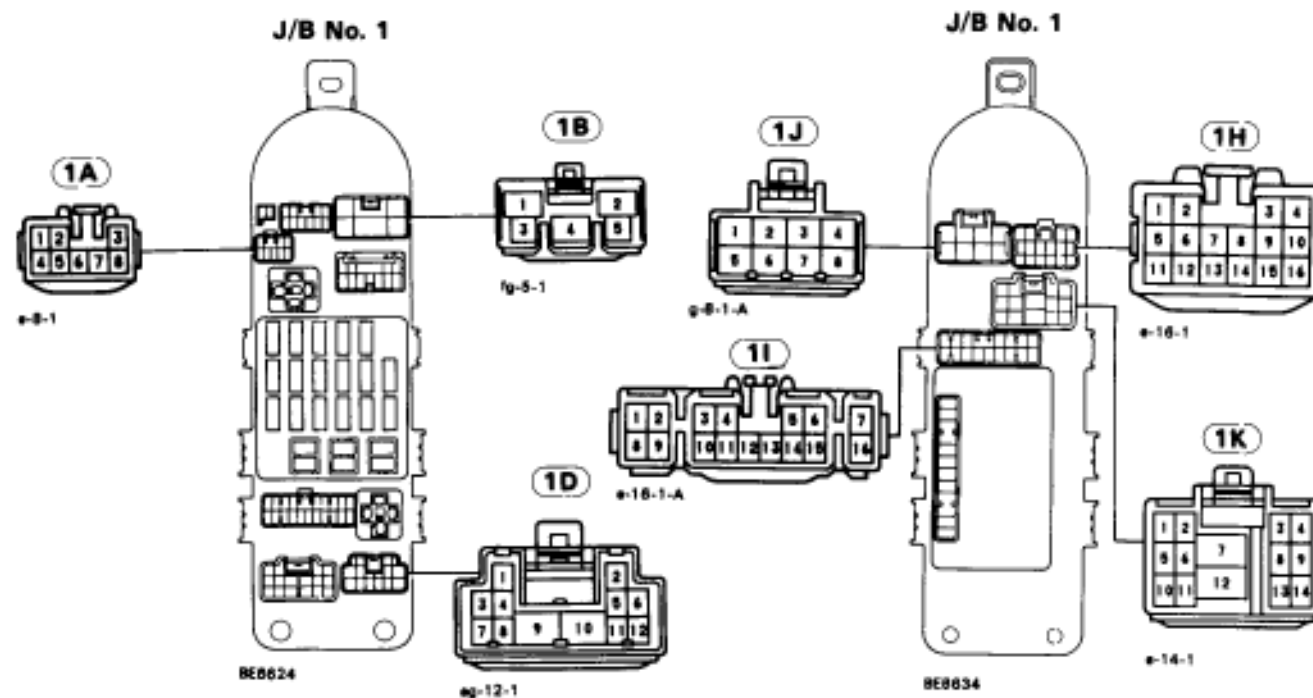

BE6636

Location of Connectors in Body

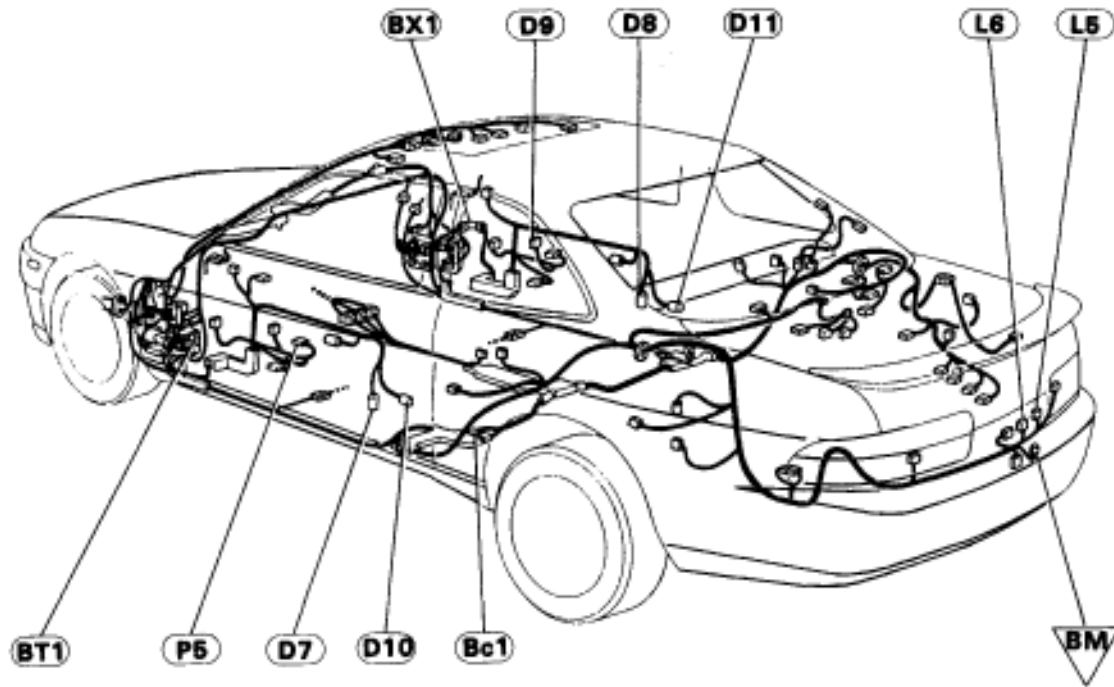

BE6632

D7 D8

**Door Key Lock and
Unlock Switch**



h-3-1

D9

**Door Lock Control
Switch (Passenger's)**



e-4-1-D

D10 D11

**Door Lock Motor and Door
Unlock Detection Switch**



h-6-1-C

L5

**Luggage Compartment Door
Key Operated Switch**



GA-2-2-C

L6

**Luggage Compartment
Door Courtesy Switch**



e-1-2


P5

**Door Lock Control
Switch (Passenger's)**




e-10-1

BT1

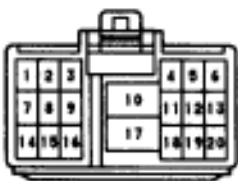

e-20-1-B

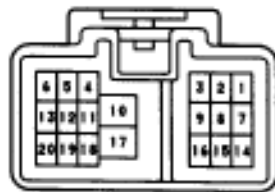


e-20-2-B



e-20-1-B

BX1

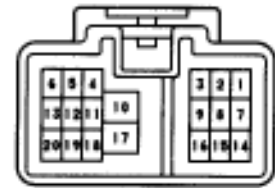

e-20-2-B

BC1



h-25-1-A



h-25-2-A