

MATRIX CHART OF PROBLEM SYMPTOMS

Proceed to the reference page shown in the matrix chart below for each malfunction symptom and troubleshoot for each circuit.

HINT: Troubleshooting of the theft deterrent system is based on the premise that the door lock control system is operating normally. Accordingly, before troubleshooting the theft deterrent system, first make certain that the door lock control system is operating normally.

Details of Problem			Inspecting Circuit *1	See page
The theft deterrent system cannot be set			1. Indicator light circuit	BE-402
			2. Luggage compartment door courtesy switch circuit	BE-418
			3. Door Unlock Detection Switch Circuit	BE-420
			4. Engine hood courtesy switch circuit	BE-422
The indicator light does not blink when system is set			Indicator light circuit	BE-402
When the system is set	When the front door is unlocked	The system does not operate	Door Unlock Detection Switch Circuit	BE-420
	When the luggage compartment door is opened by a method other than the key		Luggage compartment door courtesy switch circuit	BE-418
	When the engine hood is opened		Engine hood courtesy switch circuit	BE-422
While the system is in warning operation		Horns do not sound	Horn relay circuit	BE-406
		Theft deterrent horn do not sound	Theft deterrent horn circuit	BE-408
		Headlights do not flash	Headlight control relay circuit	BE-410
		Taillights do not flash	Taillight control relay circuit	BE-412
		The starter cut is not cut off	Starter relay circuit	BE-404
When the system is set		It is not canceled when the ignition key is turned to ACC or ON position	Ignition switch circuit	BE-414
		It still operates when the luggage compartment door is opened with the key	Luggage compartment door key operated switch circuit	BE-416
Starter does not turn after the system is canceled			Starter relay circuit	BE-404
Even when the system is not set		Horns sound	Horn relay circuit	BE-406
		Theft deterrent horn sounds	Theft deterrent horn circuit	BE-408
		Headlights stay on	Headlight control relay circuit	BE-410
		Taillights stay on	Taillight control relay circuit	BE-412

*1: If numbers are given to the circuit proceed with troubleshooting in the order indicated by those numbers.