


TERMINALS OF ECU

No.	Symbol	Terminal Name	No.	Symbol	Terminal Name
T9-1	SRLY	Ignition Switch "ST"	T9-15	UL1	Door Key Lock and Unlock Switch
T9-2	IG	Ignition Switch "ON"	T9-16	E	Ground
T9-3	ACT-	Door Lock Motor	T9-17	LSWP	Door Lock Control Switch (Lock)
T9-4	ACT+	Door Lock Motor	T9-18	UL2	Door Lock Control Switch (Unlock)
T9-6	KSW	Key Unlock Warning Switch	T9-20	+B1	Power Source
T9-7	LSWP	Door Unlock Detection Switch	T8-1	LUG	Luggage Compartment Door Key Operated Switch
T9-8	+B2	Power Source	T8-4	SH	Theft Deterrent Horn
T9-9	IND	Security Indicator Light	T8-5	HEAD	Headlight
T9-10	UL3	Door Key Lock and Unlock Switch	T8-7	ACC	Ignition Switch "ACC"
T9-11	LSWD	Door Unlock Detection Switch	T8-10	DSWL	Luggage Compartment Door Courtesy Switch
T9-12	DSWP	Door Open Detection Switch	T8-11	HORN	Horn
T9-13	DSWD	Door Open Detection Switch	T8-12	DSWH	Engine Hood Courtesy Switch
T9-14	L1	Door Key Lock and Unlock Switch	T8-13	TAIL	Taillight

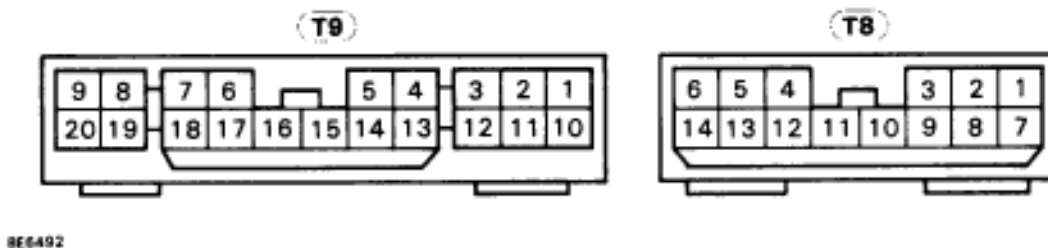

Theft Deterrent and Door Lock ECU