




## INSPECTION PROCEDURE

### 1 Check voltage between terminal 2 of theft deterrent horn connector and body ground.

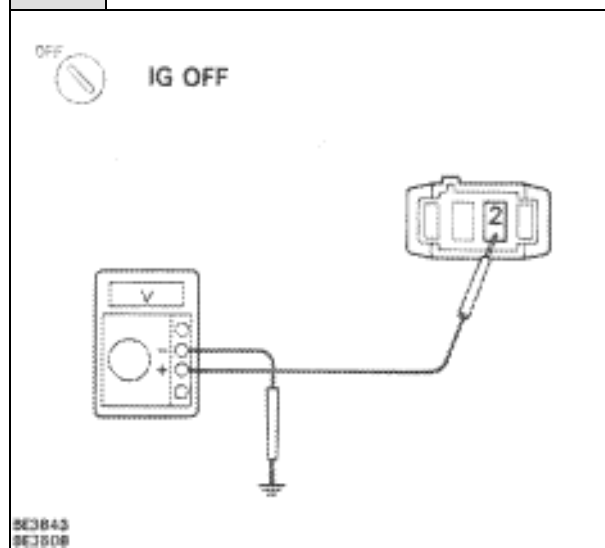

**P** Remove the theft deterrent horn and disconnect the connector.

**C** Measure voltage between terminal 2 of theft deterrent horn connector and body ground.


**OK** Voltage: 10 – 14 V

OK

NG

Check and repair harness and connector between HORN fuse and theft deterrent horn (See page [IN-27](#)).

### 2 Check theft deterrent horn.

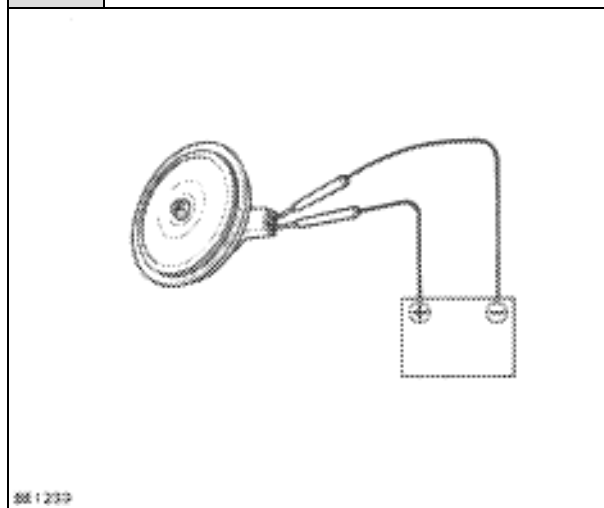

**C** Connect positive (+) lead to terminal 2 and negative (-) lead to terminal 1 of theft deterrent horn connector.

**OK** Theft deterrent horn blows.

OK

NG

Replace theft deterrent horn.

### 3 Check for open in harness and connector between ECU and theft deterrent horn (See page [IN-27](#)).

OK

NG

Check and repair harness or connector.

Check and replace ECU.