


INSPECTION OF TRANSMITTER

HINT: Perform this inspection only when transmitter is judged to be the faulty in precheck type II.

1 Transmitter battery capacity check.

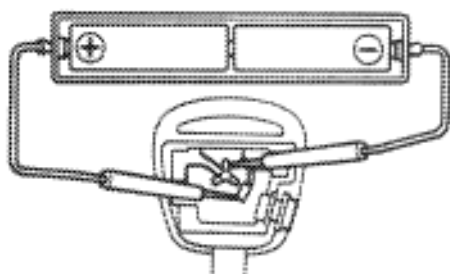

BE3864
BE3893

Hint This inspection is not directly for the purpose of checking the capacity of the transmitter battery, but is performed when remote control operation becomes difficult or impossible, in order to ascertain if this is caused by low battery capacity.

- P**
- (1) Remove the transmitter screw.
 - (2) Remove the cover.
 - (3) Remove the O-ring and battery.

- C**
- (1) Connect two new 1.5V dry-cell batteries in series. Connect the battery \oplus terminal to the battery receptacle side terminal and the battery \ominus terminal to the bottom terminal to provide 3V to the transmitter.
 - (2) In the condition (1), push the wireless door lock remote control switch on the side of the transmitter body and operate the door lock by remote control.

OK Remove control operation possible.

NG

OK

Replace the battery for transmitter (See page [BE-436](#)).

Replace transmitter and ROM in ECU
(See page [BE-435](#)).