



LOCATION OF CONNECTORS

Location of Connectors in Engine Compartment

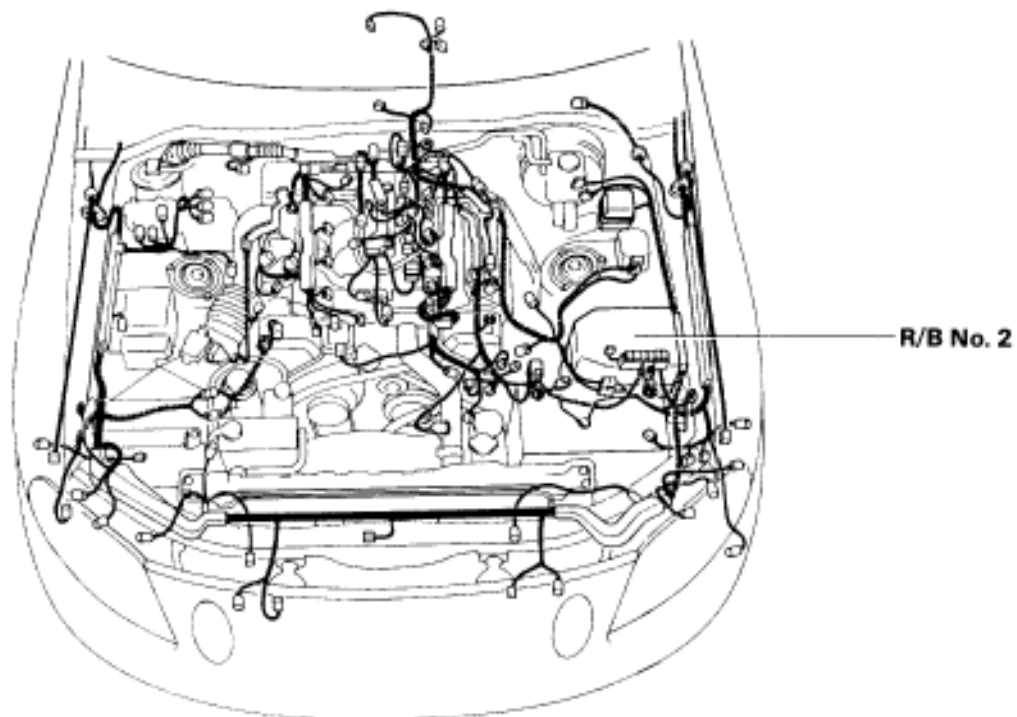


BE6630

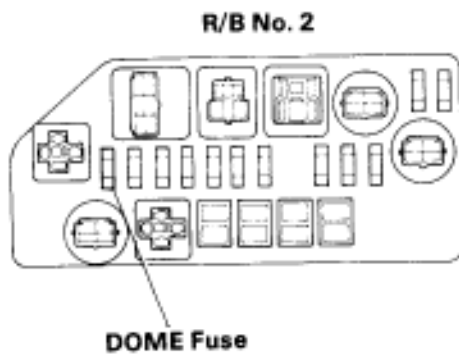

BE6625

Location of Connectors in Body

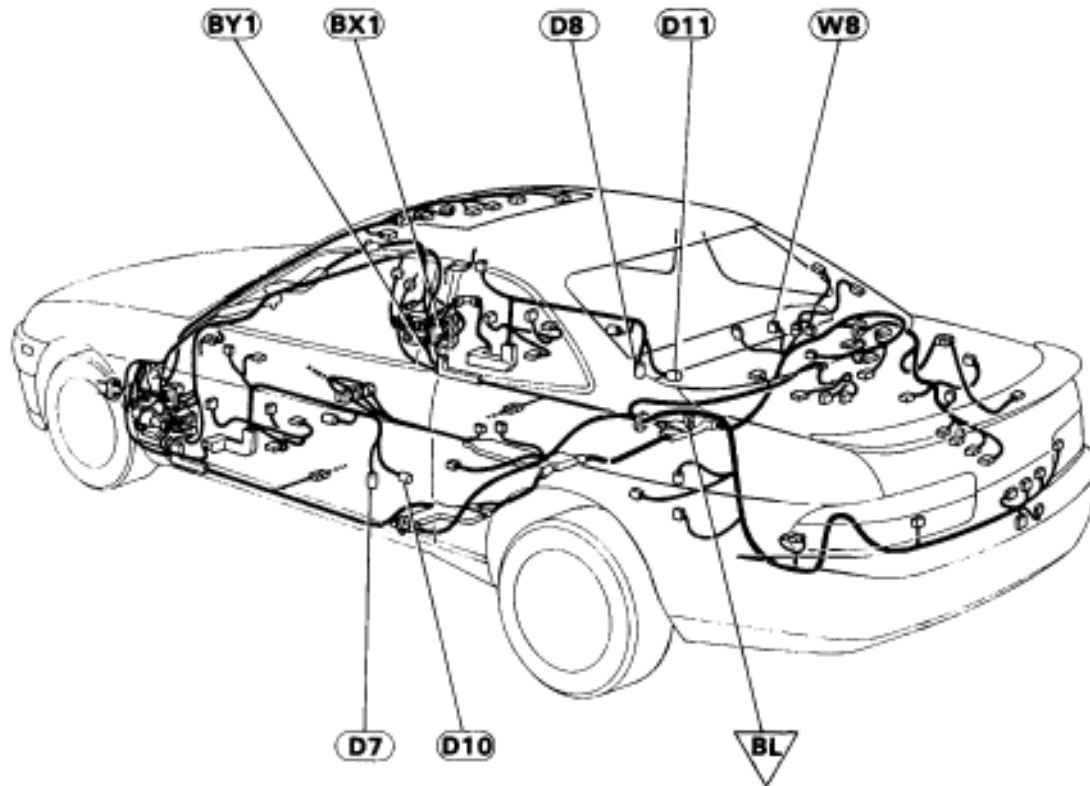

BE6632

(D7), (D8), (D10), (D11)

**Door Key Lock and
Unlock Switch LH, RH**



e-8-1-C

(W8)

Wireless Door Lock ECU




e-10-1

(BX1)

(BY1)



e-20-1-B

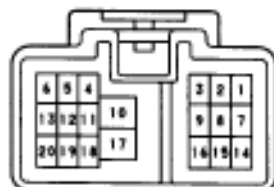

e-20-2-B




e-10-1



e-10-2

Location of Connectors in Instrument Panel

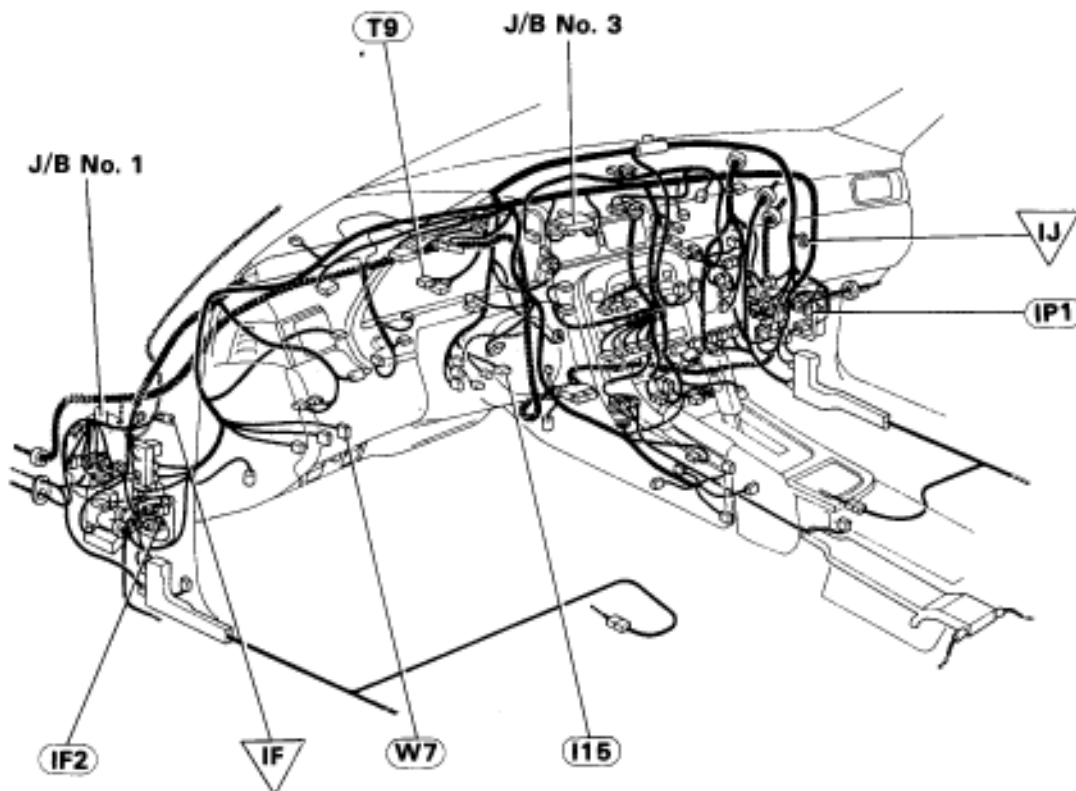

BE6631

I15
Key Unlock Warning SW



eg-11-1

T9
Theft Deterrent and
Door Lock Control ECU



e-20-1

W7
Wireless Door Lock
Main SW




Z-3-1

IF2



e-20-1

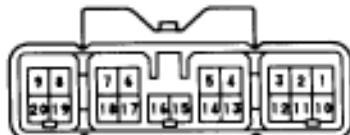


e-20-2

IP1



e-20-1

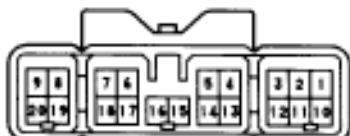

e-20-2

