


PRECHECK TYPE I

In cases where the wireless door lock control system fails to operate only at a specific locality, perform this check at that locality.

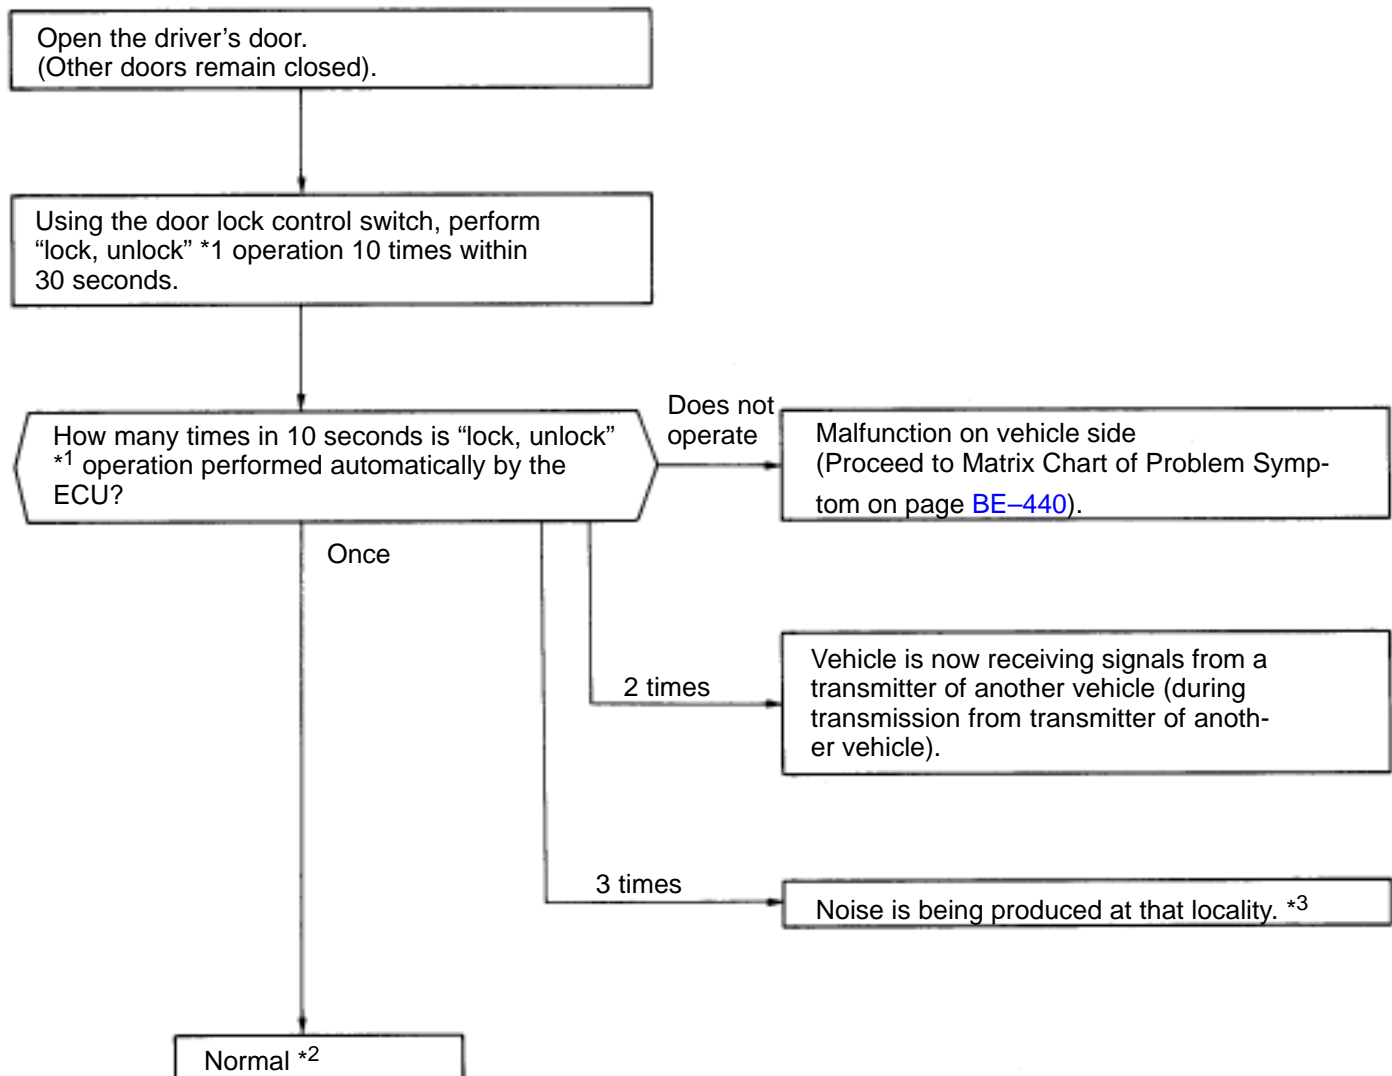

*1: Performing lock and unlock once counts as one time.

*2: If noise is not constantly produced at the locality being used and inspection is performed on an occasion when there is no noise, then it may happen that the system is judged normal.

*3: If the conclusion is that noise is produced in the locality the vehicle is used, the transmitter use is limited in that locality. Limitations on usage are described below.

HINT:

Because the transmitter uses weak electromagnetic waves, it is easily affected by noise, so remote control within the normal range becomes difficult.

To reduce the influence of noise, bring the transmitter as close as possible to the back window glass (antenna section), or touch (ground) the grooved key tip of the transmitter to the door key cylinder and then operate the transmitter switch; this should make door lock remote control operation possible.

If door lock remote control operation is still not possible, insert the key in the door key cylinder and press the transmitter switch.