
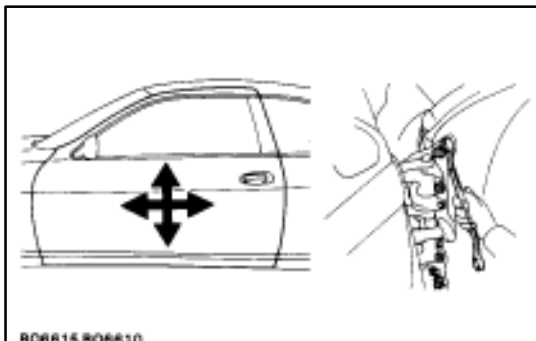


FRONT DOOR Fitting Adjustments

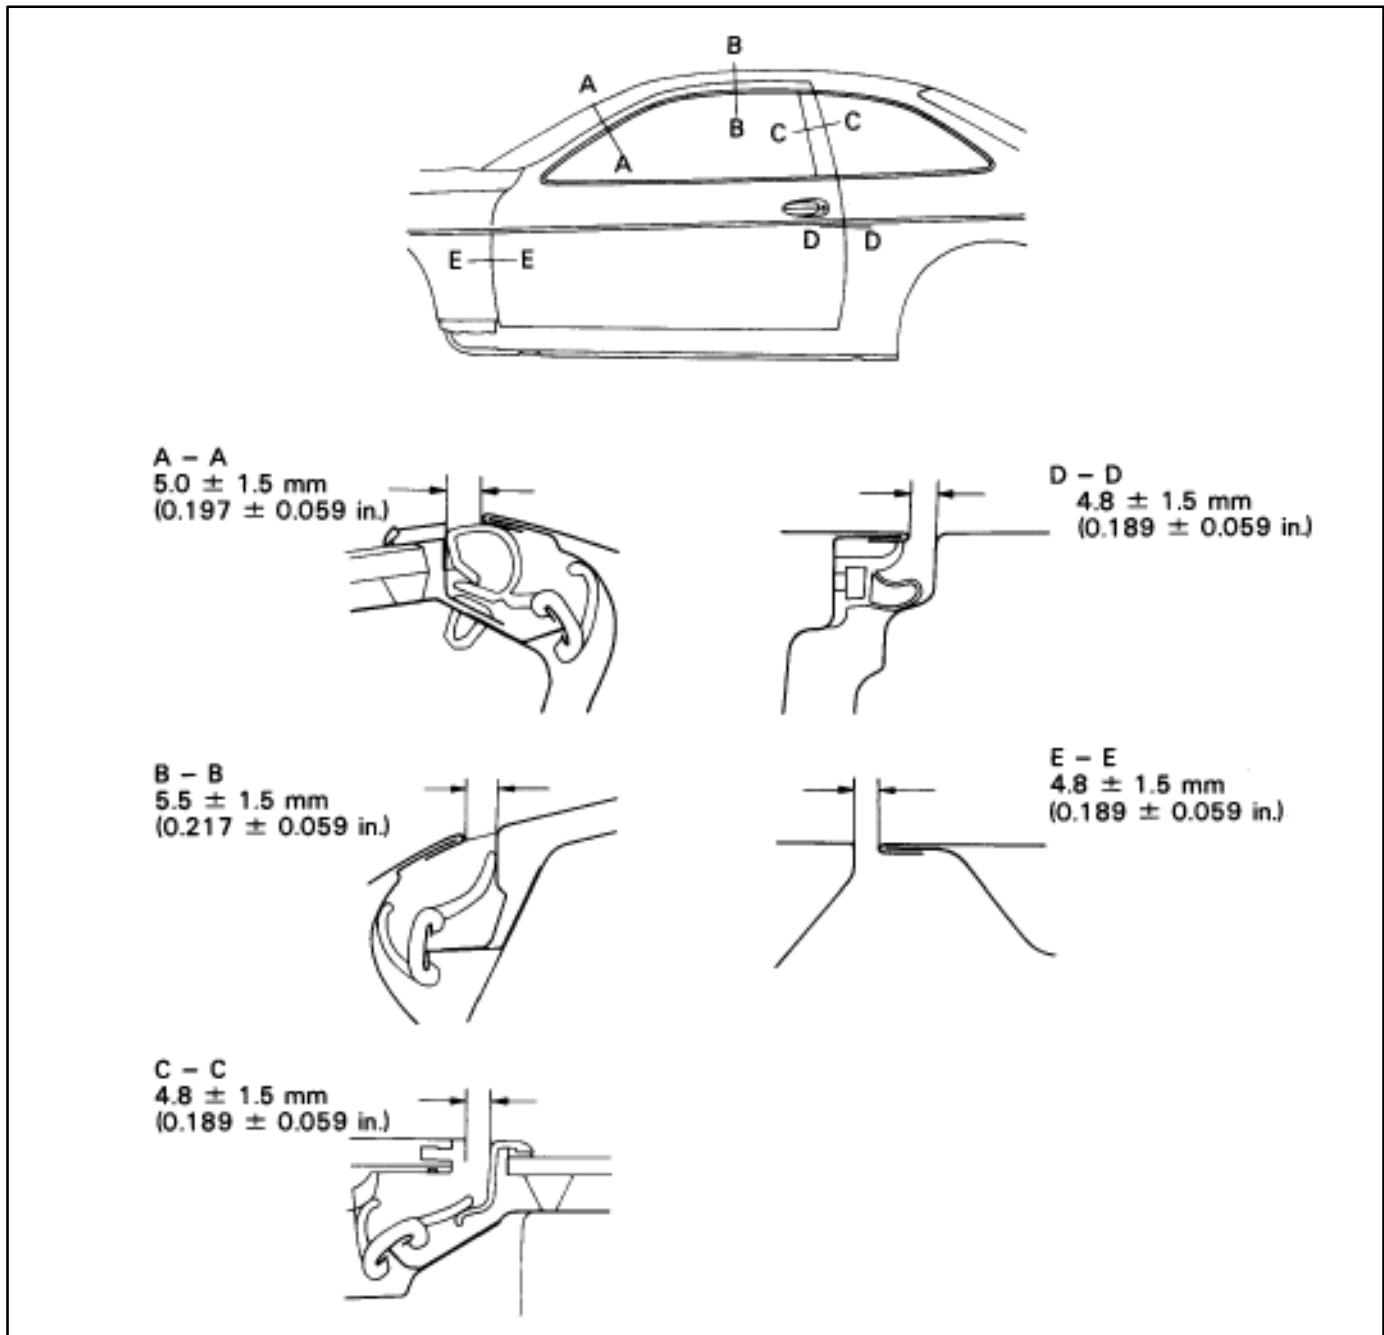


HINT: Adjust the door panel according to the following method.

[ADJUSTMENT OF FRONT DOOR]

1. ADJUST FRONT DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS


Loosen the body side hinge bolts to adjust the door panel.

HINT: Remove the pin on the body side before performing adjustment and reinstall it when finished.

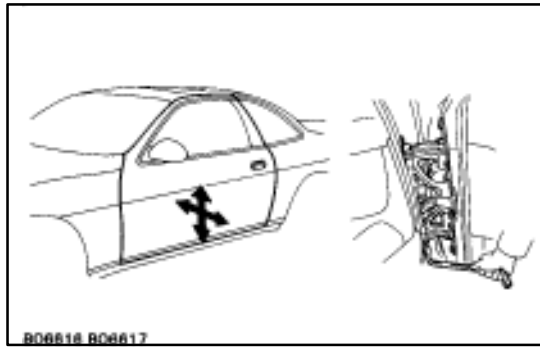

2. ADJUST FRONT DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust.

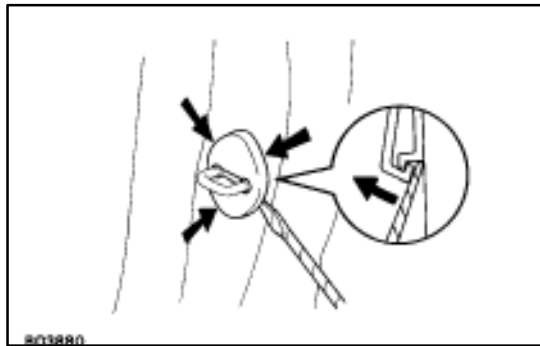


3. ADJUST FRONT DOOR LOCK STRIKER

(a) Check that the door fit and door lock linkages are adjusted correctly.

(b) Using a screwdriver, remove the striker cover.

HINT: Tape the screwdriver tip before use.

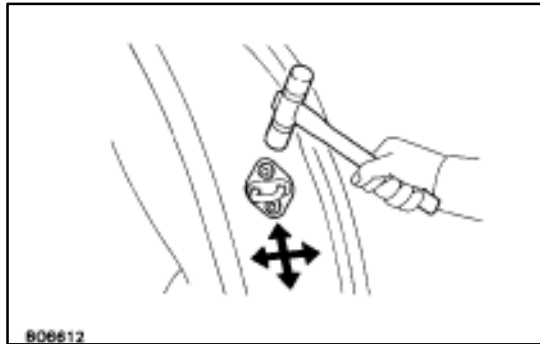

(c) Adjust the striker position by slightly loosening the striker mounting screws, and hitting the striker with a hammer. Tighten the striker mounting screws again.

(d) Install the striker cover.