
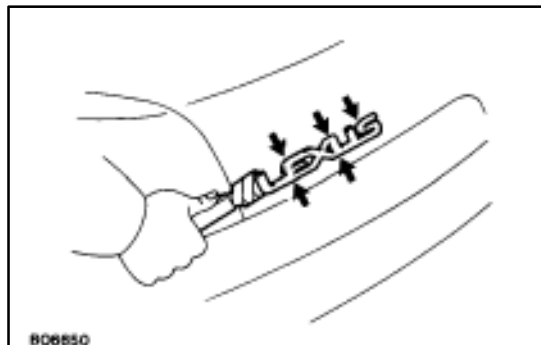
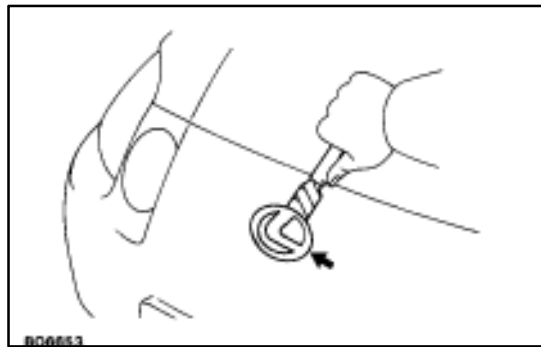


EMBLEM COMPONENTS

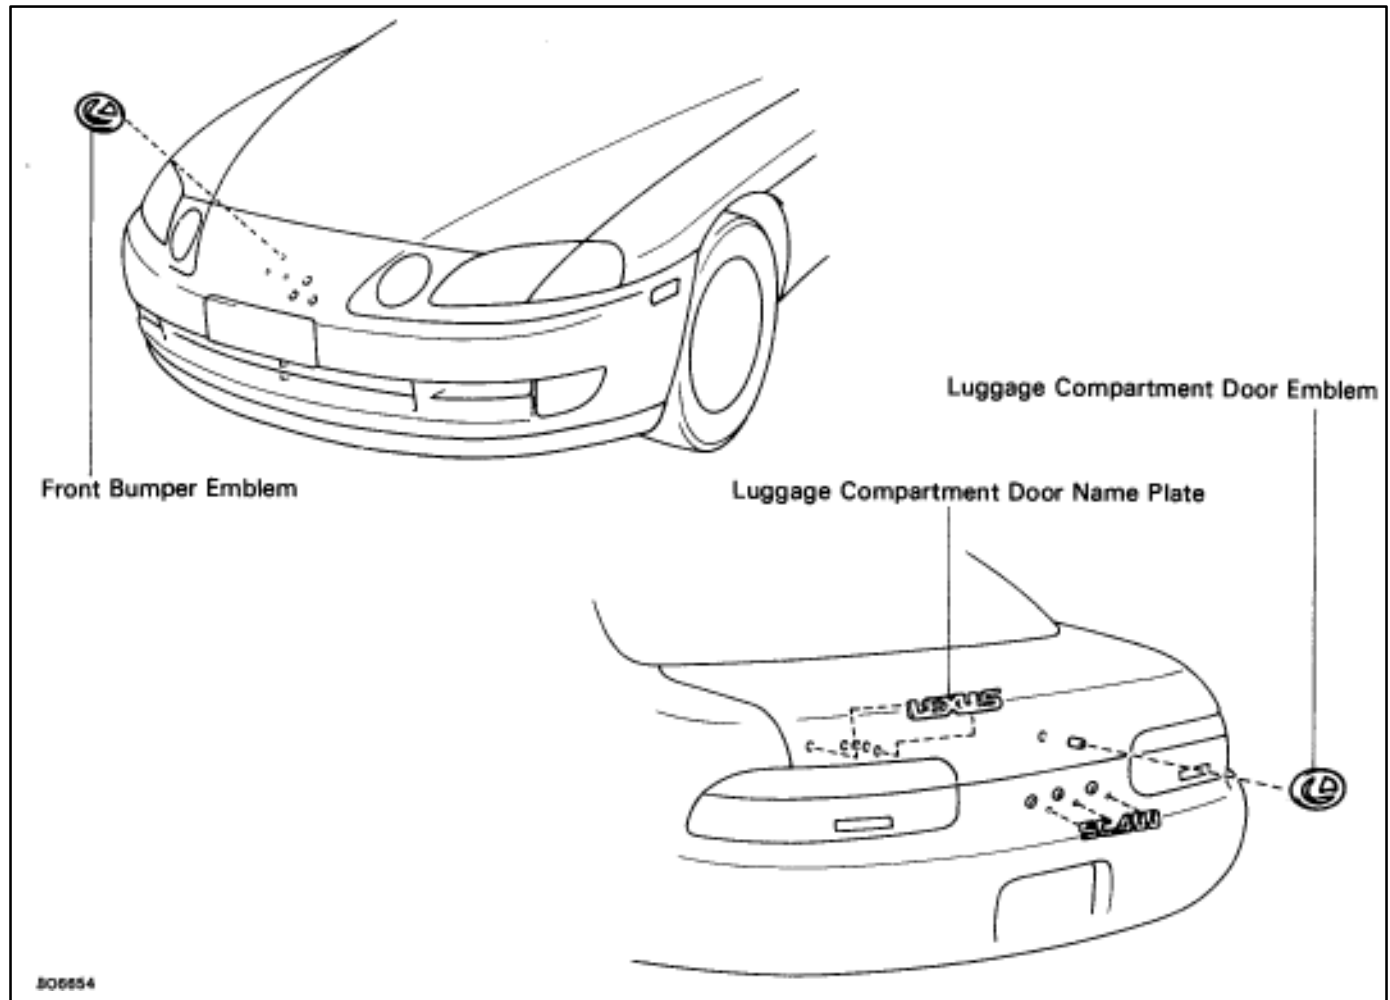

REMOVAL OF EMBLEM

1. REMOVE FRONT AND REAR BUMPER EMBLEM


- (a) Remove three nuts.
- (b) Using a scraper, pry out the plate.

2. REMOVE LUGGAGE COMPARTMENT DOOR NAME PLATE

Using a scraper, pry out the plate.

HINT:

- Tape the scraper tip before use.
- To avoid damaging the emblem, insert the scraper from various directions and gradually pry out the plate from the body.

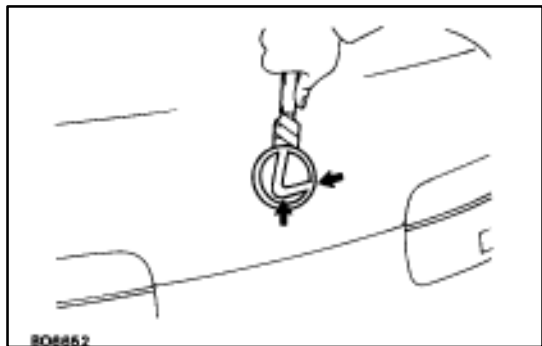


3. REMOVE LUGGAGE COMPARTMENT DOOR EMBLEM

Using a scraper, pry out the plate.

HINT:

- Tape the scraper tip before use.
- To avoid damaging the emblem, insert the scraper from various directions and gradually pry out the plate from the body.

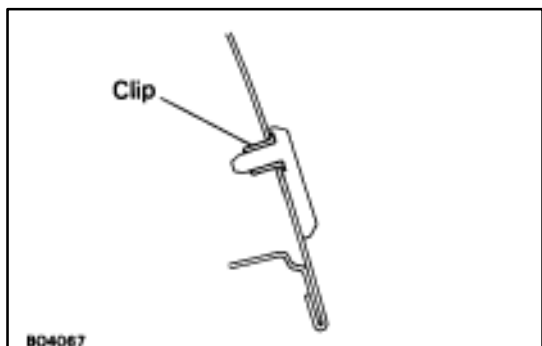

INSTALLATION OF EMBLEM


(See page [BO-95](#))

1. INSTALL LUGGAGE COMPARTMENT DOOR NAME PLATE

Push in the name plate and install it.

2. INSTALL LUGGAGE COMPARTMENT DOOR EMBLEM

- (a) Set the clip in the holes in the door.
- (b) Push in the emblem and install it.

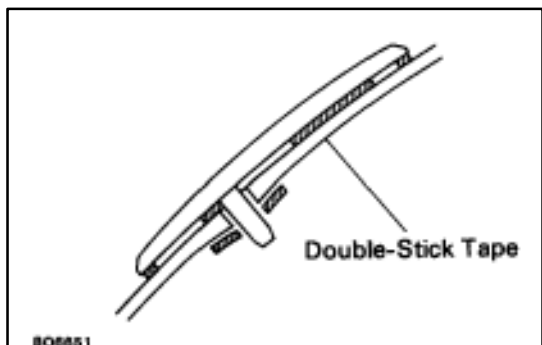

3. INSTALL FRONT AND REAR BUMPER EMBLEM

- (a) Install the double-stick tape and the emblem.
- (b) Install nuts.