



FRONT FENDER COMPONENTS

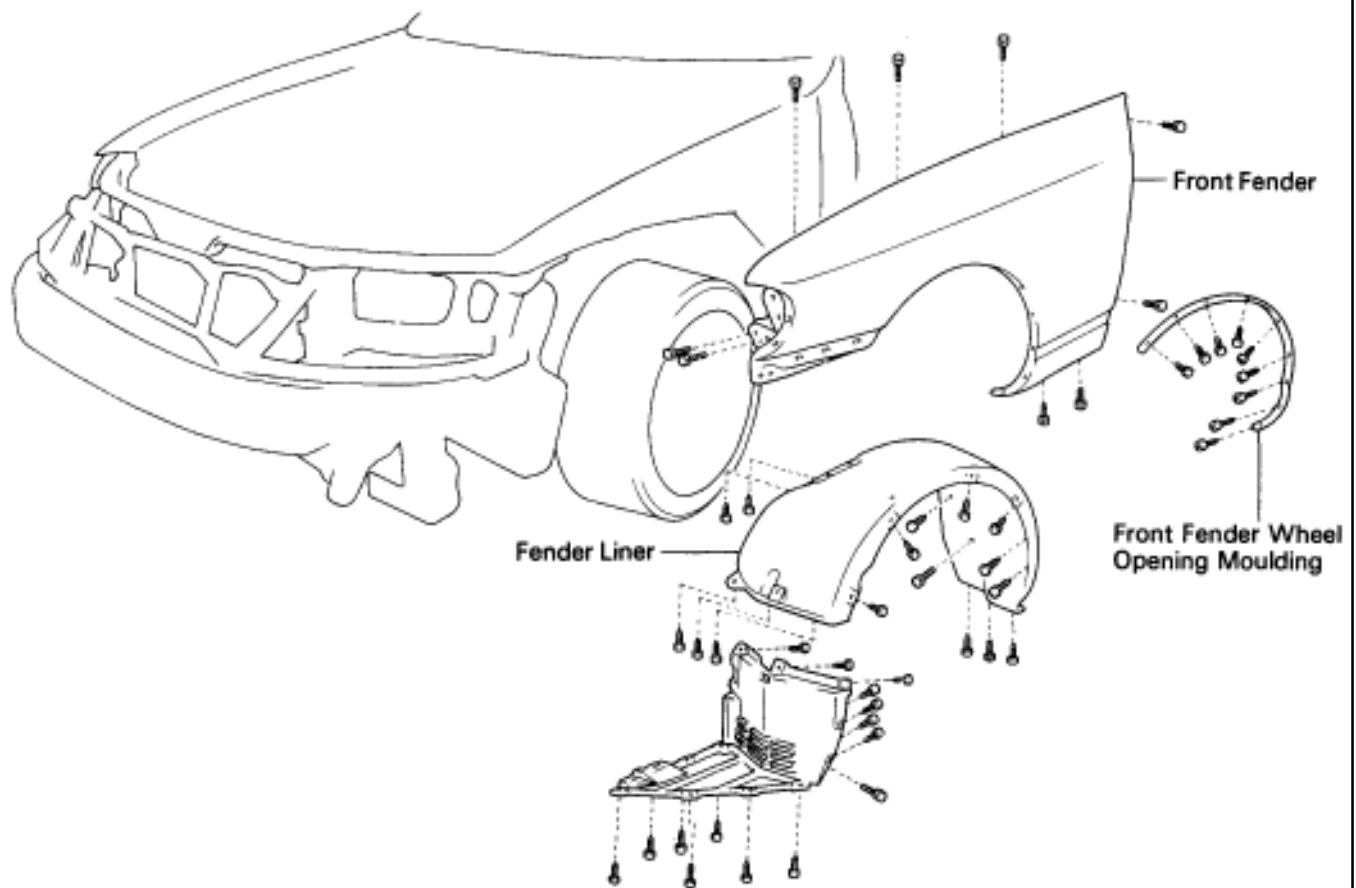

Front Bumper


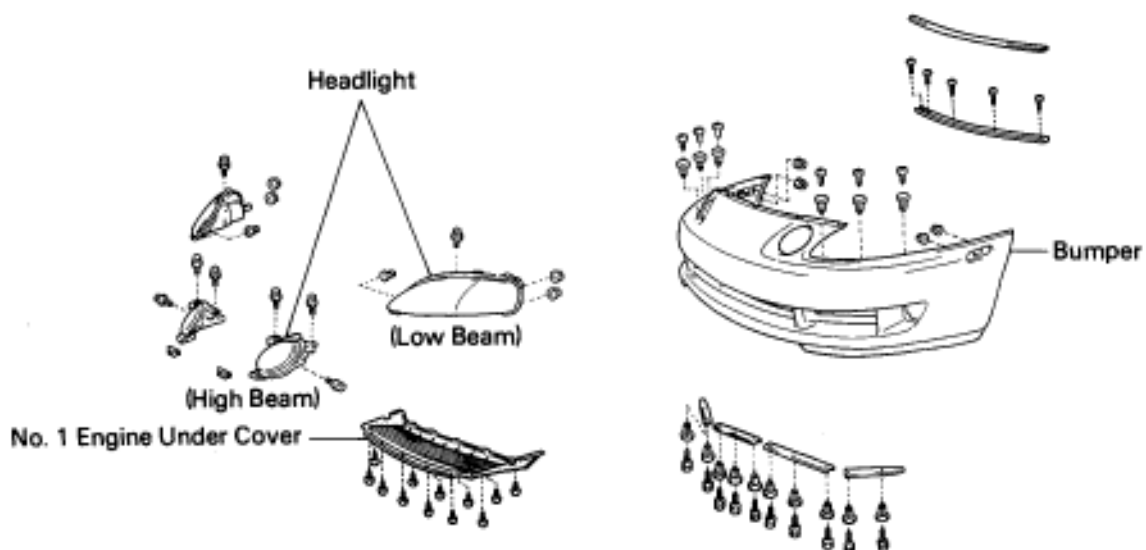


806608

REMOVAL OF FRONT FENDER


(See page [BO-92](#))

1. REMOVE FRONT BUMPER
(See page [BO-91](#))
2. REMOVE FRONT FENDER WHEEL OPENING MOULDING
(See page [BO-102](#))
3. REMOVE FENDER LINER
 - (a) Remove eight screws.
 - (b) Remove the liner with four clips.

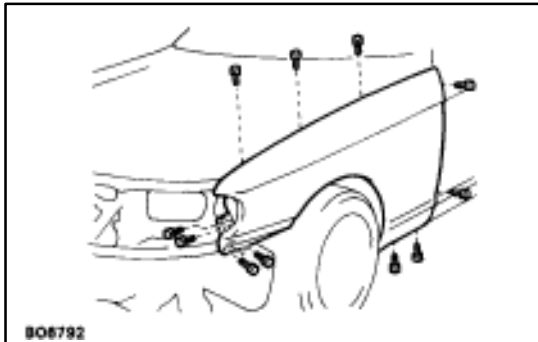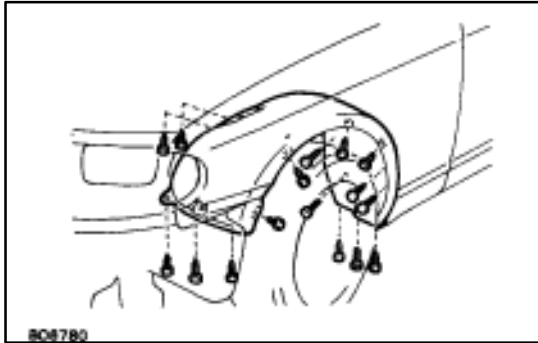

4. REMOVE FRONT FENDER
Remove eleven bolts and the fender.


CAUTION: Do not damage or shock the front airbag sensor at all.

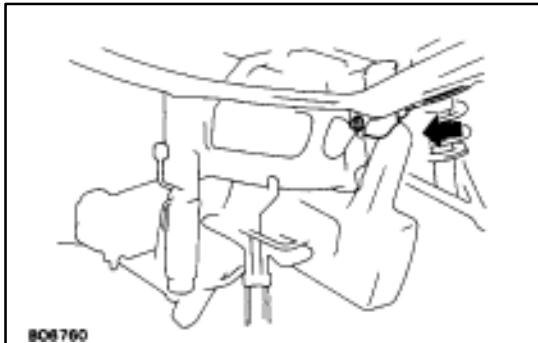

INSTALLATION OF FRONT FENDER

(See page [BO-91](#))

1. INSTALL FRONT FENDER
Install eleven bolts and the fender.

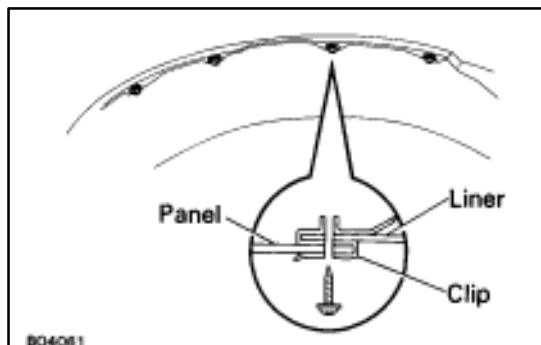**2. INSTALL FENDER LINER**

- (a) Install four clips so that the screw can be inserted in the manner shown in the drawing.
- (b) Install eight screws and the liner.

3. INSTALL FRONT FENDER WHEEL OPENING MOULDING
(See page [BO-102](#))**4. INSTALL FRONT BUMPER**
(See page [BO-14](#))