


FUEL LID

Fitting Adjustments

HINT: Adjust the fuel lid according to the following method.

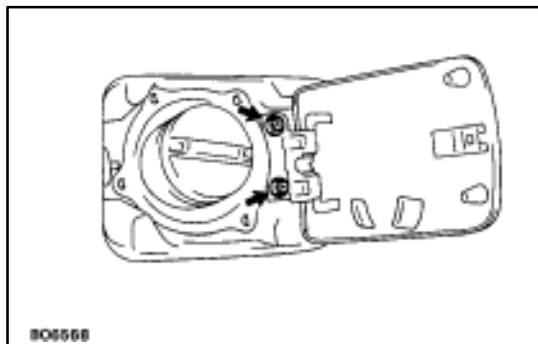


ADJUST FUEL FILLER OPENING LID

Loosen the two screws and adjust the lid as shown.

Fuel Lid

COMPONENTS

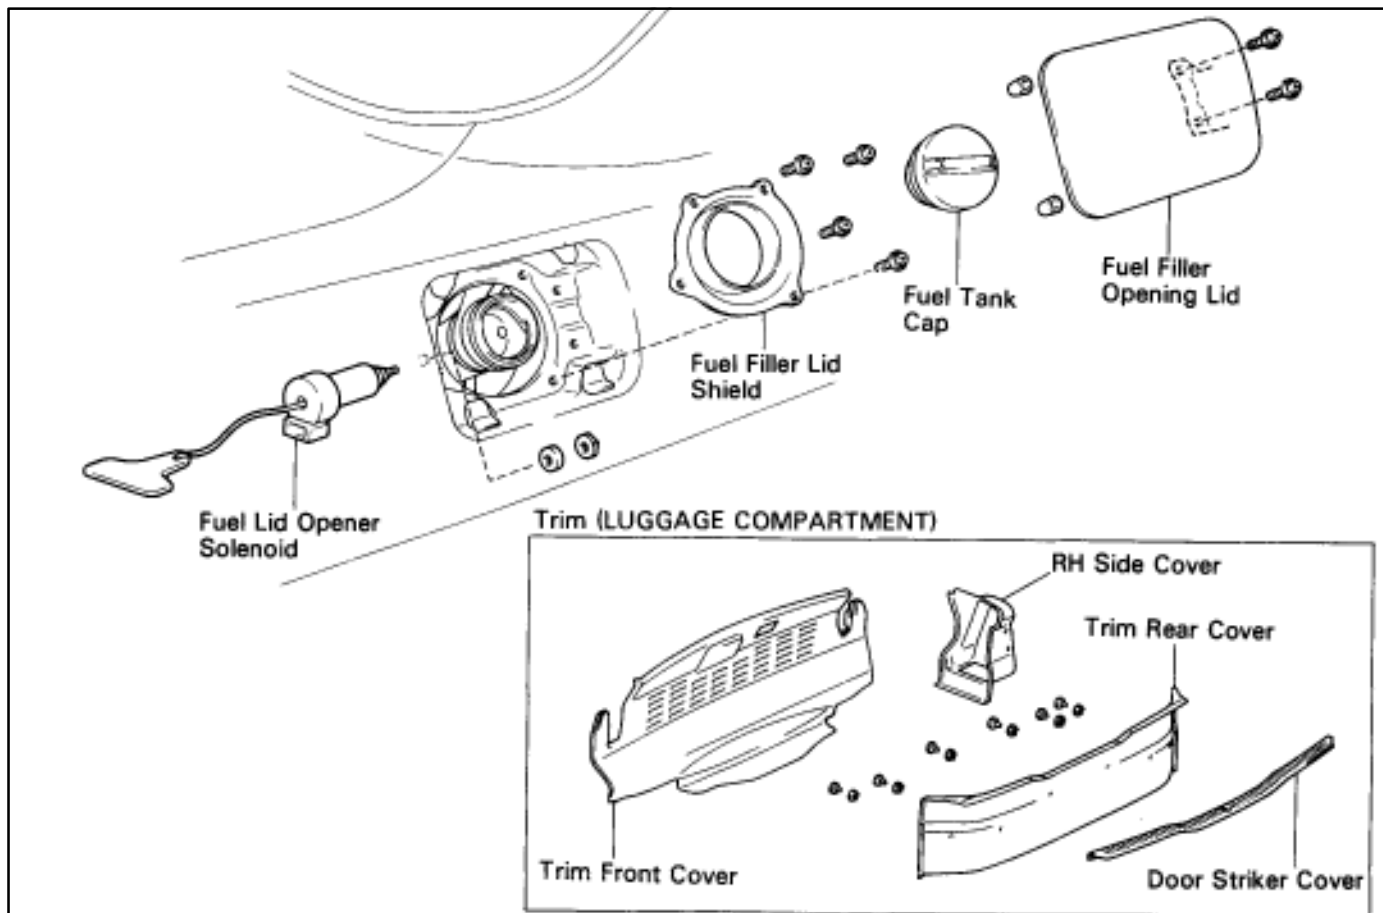


REMOVAL OF FUEL LID

(See page [BO-107](#))

1. REMOVE FOLLOWING PARTS:

- (a) Floor mat
- (b) Door striker cover (See step 2 on page [BO-78](#))
- (c) Trim rear cover (See step 3 on page [BO-79](#))
- (d) Trim front cover (See step 4 on page [BO-79](#))
- (e) RH side cover (See step 6 on page [BO-79](#))

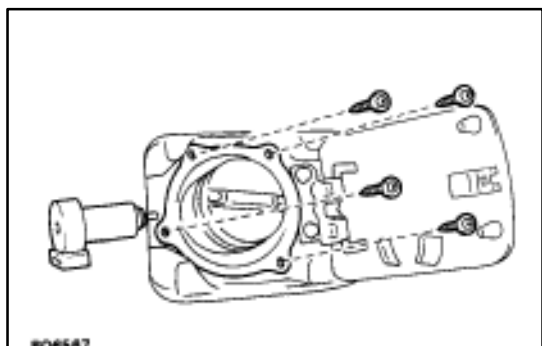


2. REMOVE FUEL FILLER LID SHIELD

- (a) Remove the nut and fuel lid opener solenoid.
- (b) Disconnect the connector from the solenoid.
- (c) Remove four screws.
- (d) Remove the fuel tank cap and the lid shield.

CAUTION: Always keep the tank cap closed when it is not required to be open. Keep all fire away during the operation.

- (e) Install the cap quickly.

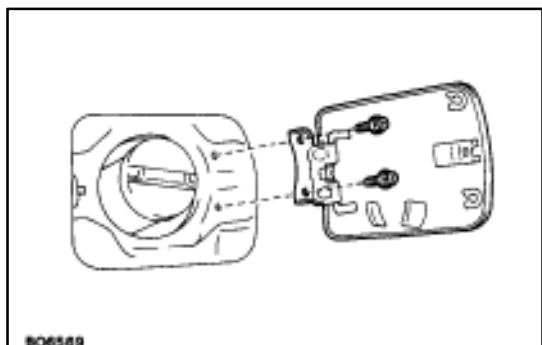

3. REMOVE FUEL FILLER OPENING LID

Remove two screws and the lid.

INSTALLATION OF FUEL LID

(See page [BO-107](#))

INSTALL FUEL LID PARTS BY FOLLOWING REMOVAL SEQUENCE IN REVERSE

HINT: When installing the fuel filler opening lid, adjust the lid.
(See page [BO-107](#))