
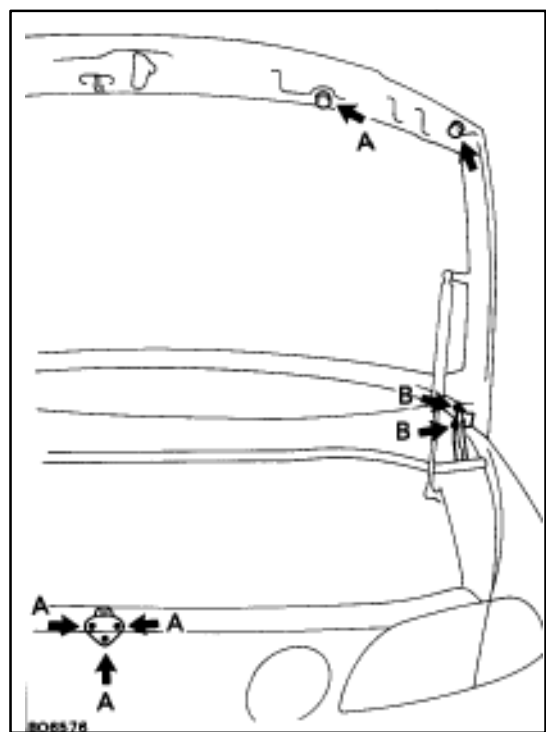


HOOD

Fitting Adjustments

1. SUBSTITUTE BOLT WITH WASHER FOR CENTERING BOLT

Since the centering bolt is used as the hood hinge set bolt, the hood cannot be adjusted with it on. Substitute the bolt with washer for the centering bolt.

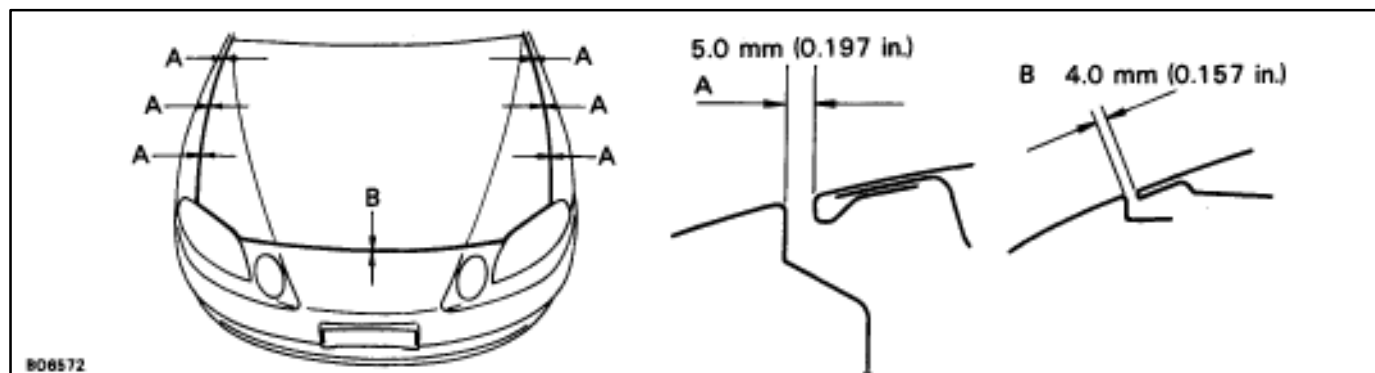

HINT: Adjust the hood according to the following method.

2. ADJUST HOOD IN FORWARD/REARWARD AND LEFT/RIGHT DIRECTIONS


Adjust the hood by loosening the B bolts.

3. ADJUST FRONT EDGE OF HOOD IN VERTICAL DIRECTION

Adjust the hood by turning the A and B cushions.

4. ADJUST HOOD LOCK

Adjust the lock by loosening the A bolts and the nut.

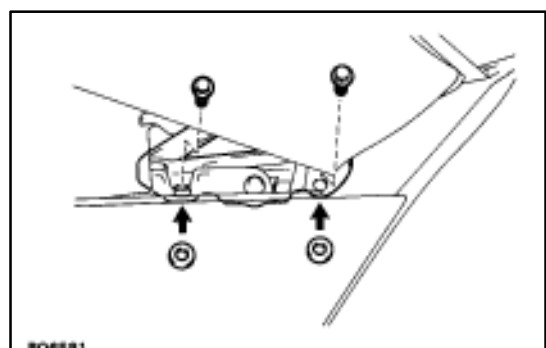

5. ADJUST REAR EDGE OF HOOD IN VERTICAL DIRECTION

- Remove the fender. (See page [BO-93](#))
- Adjust the hood by increasing or decreasing the number of shims as shown.