



Hood COMPONENTS

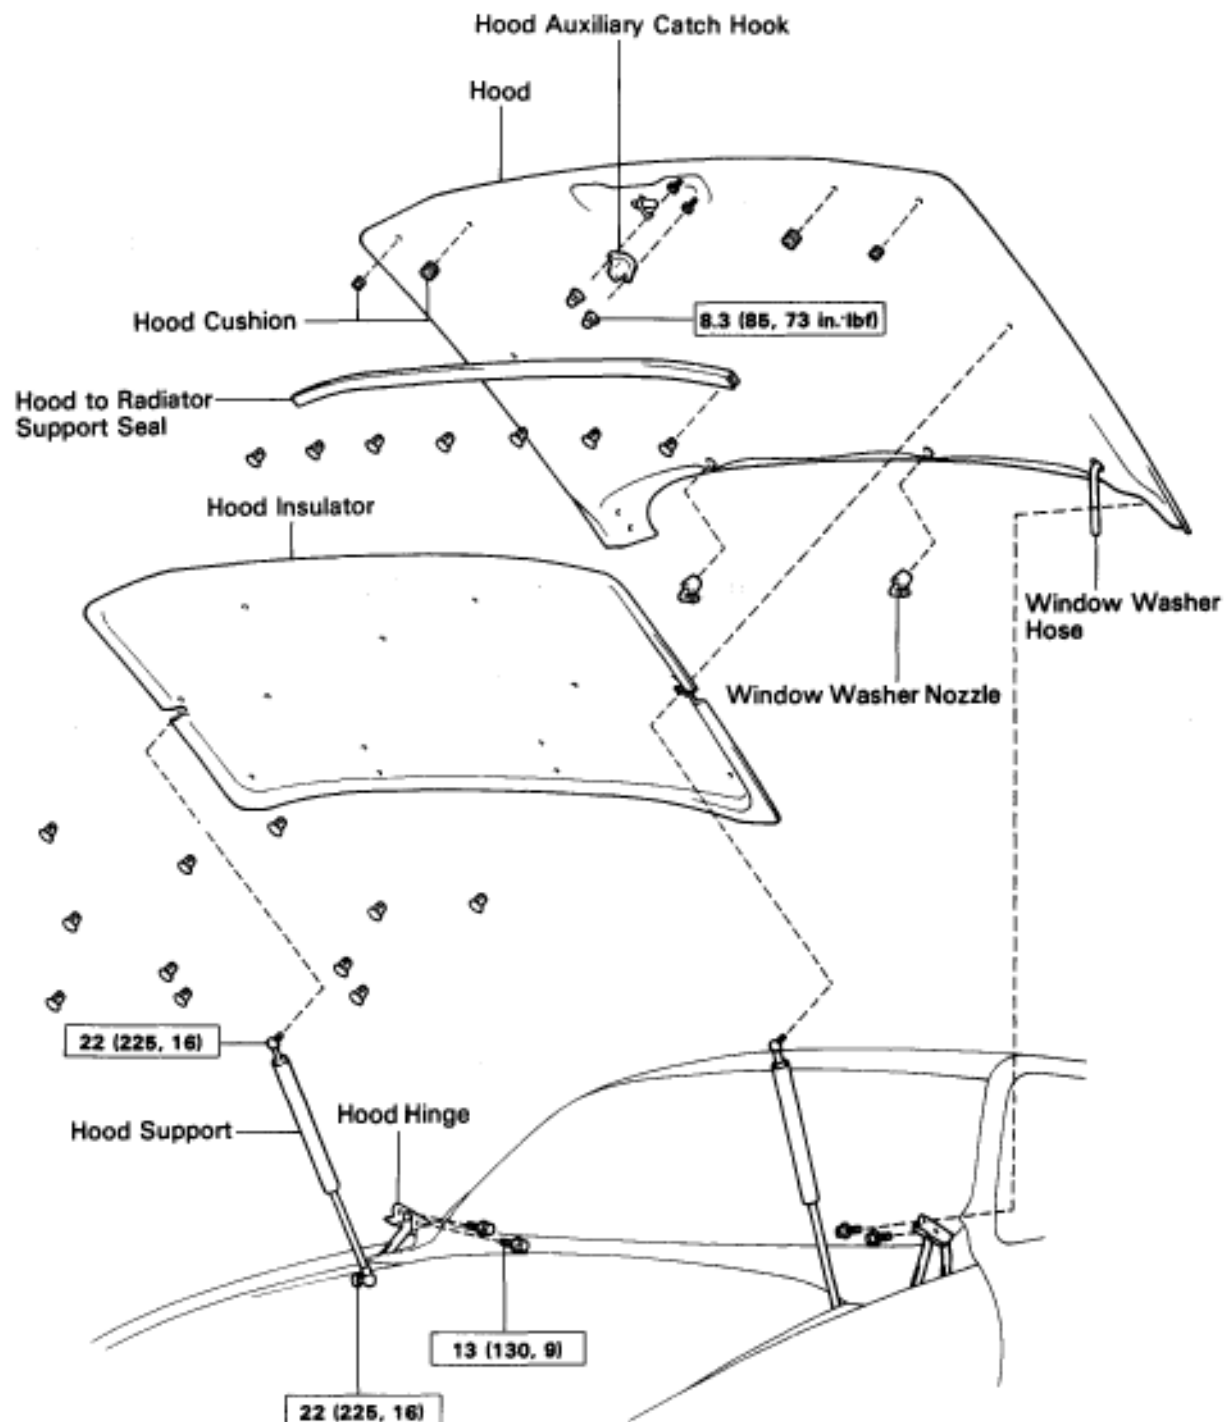

[N·m (kgf·cm, ft·lbf)] : Specified torque

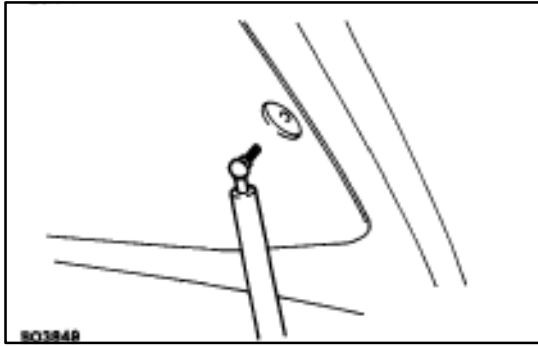


REMOVAL OF HOOD

(See page [BO-19](#))

1. REMOVE HOOD SUPPORT FROM HOOD

Remove the bolt and disconnect the support from hood.

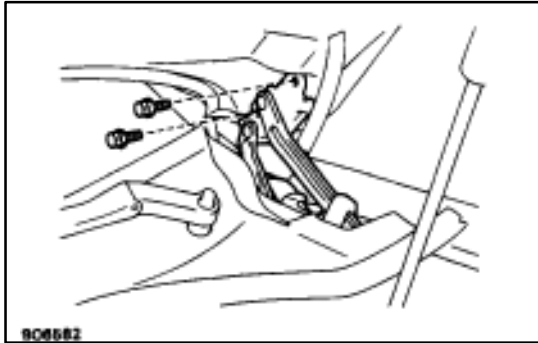

2. REMOVE HOOD

- Disconnect the windshield washer hose from the body side.
- Remove four bolts from hood hinge and remove the hood.

HINT: Be careful not to damage the body or glass with the hood end.

INSTALLATION OF HOOD

(See page [BO-19](#))

1. INSTALL HOOD

- Place the hood on the hood hinge and install four bolts temporarily.
- Connect the windshield washer hose to the body side.


2. INSTALL HOOD SUPPORT TO HOOD

Install the bolt and connect the support to hood.

Torque: 22 N·m (225 kgf·cm, 16 ft·lbf)

3. ADJUST HOOD


(See page [BO-18](#))

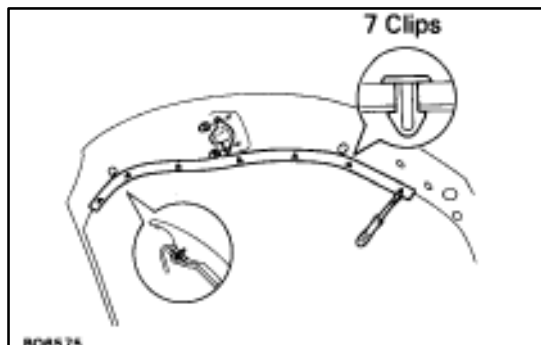


DISASSEMBLY OF HOOD

(See page [BO-19](#))


1. **REMOVE HOOD AUXILIARY CATCH HOOK**
2. **REMOVE HOOD TO RADIATOR SUPPORT SEAL**
Using a clip remover, remove clips and the seal.

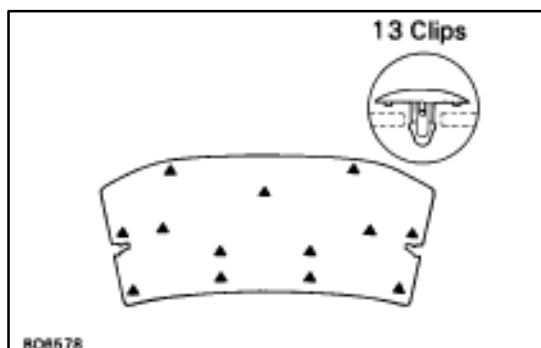

3. **REMOVE HOOD INSULATOR**
Using a clip remover, remove clips and the insulator.

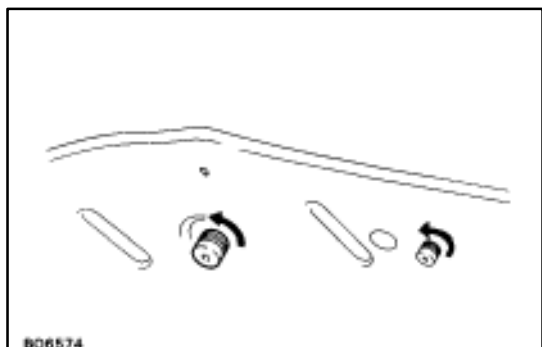

4. **REMOVE HOOD CUSHION**
Turn the cushions counterclock wise with your hand to remove it.
5. **REMOVE WINDOW WASHER HOSE**

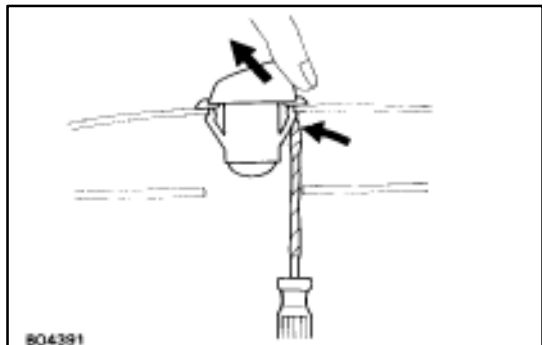

6. **REMOVE WINDOW WASHER NOZZLE**
 - (a) Remove the cover.
 - (b) Using a screwdriver, remove the nozzle.

HINT: Tape the screwdriver tip before use.

ASSEMBLY OF HOOD

(See page [BO-19](#))

ASSEMBLE HOOD PARTS BY FOLLOWING DISASSEMBLY SEQUENCE IN REVERSE