



Hood Lock Control COMPONENTS

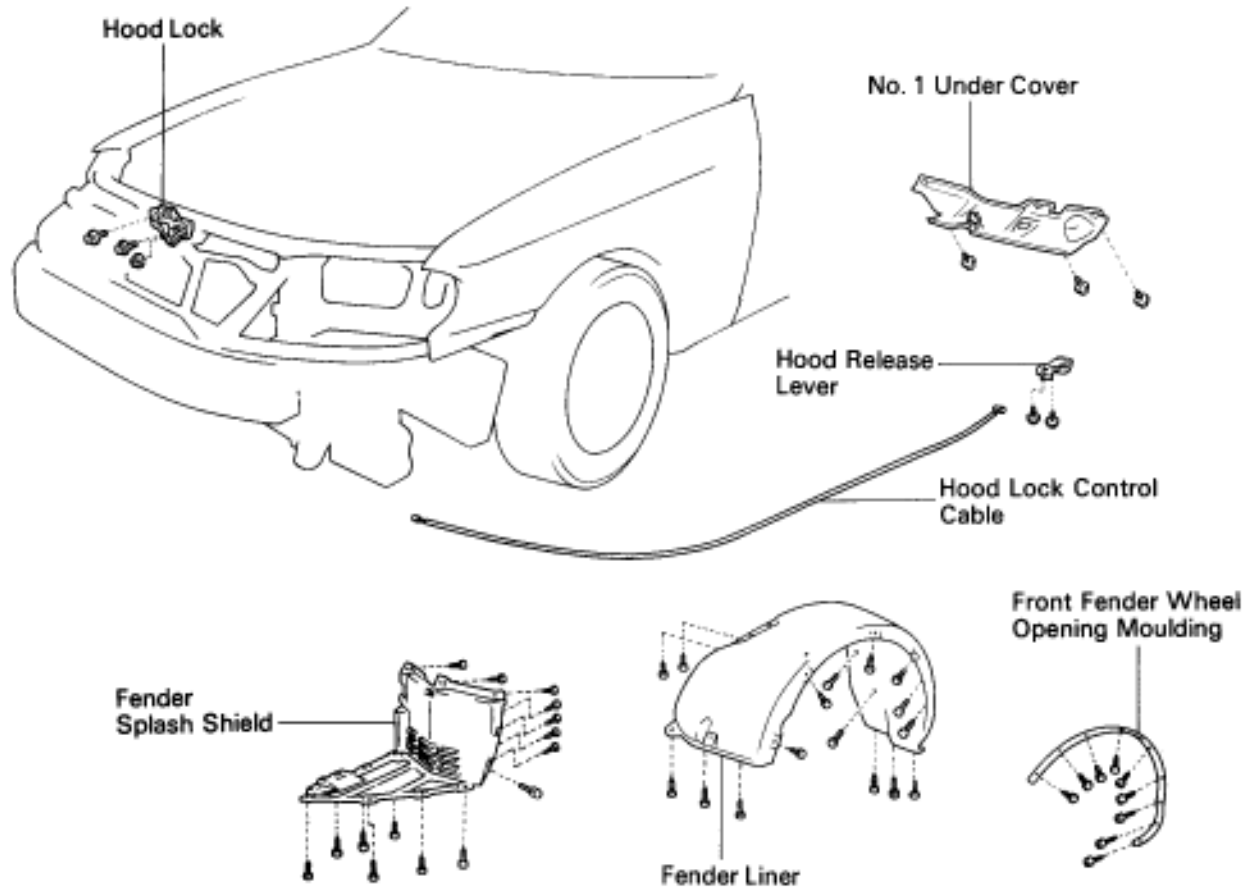

806805

Front Bumper

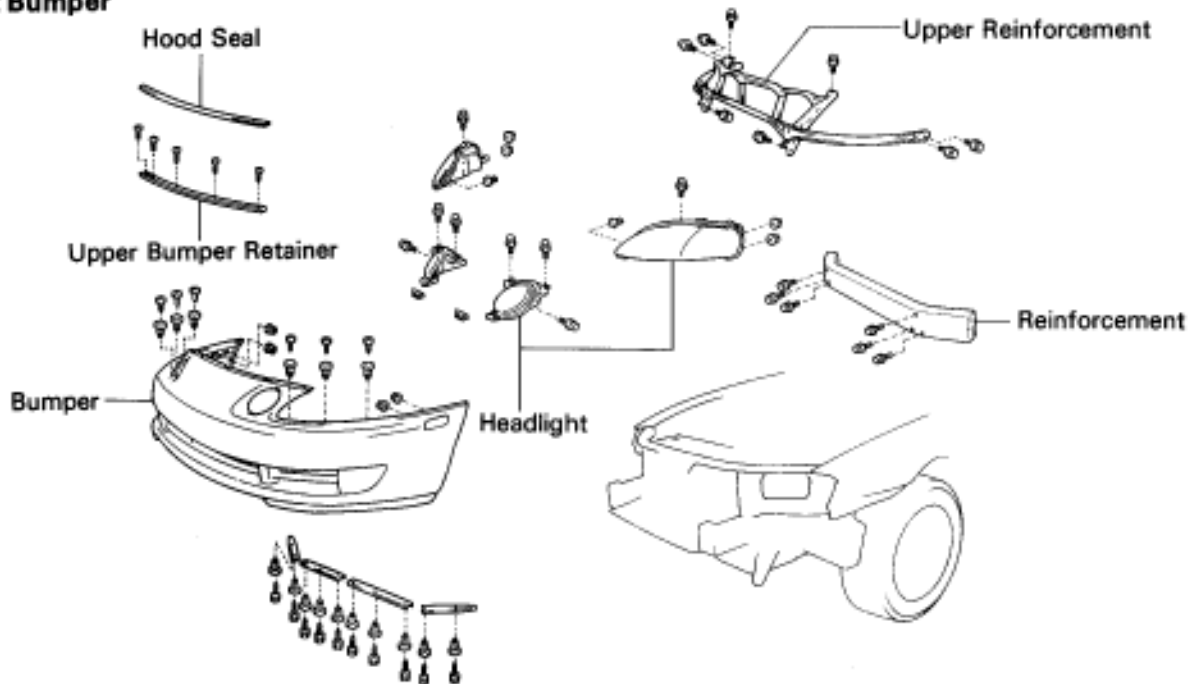

806811

REMOVAL OF HOOD LOCK CONTROL

(See page [BO-24](#))

1. REMOVE FOLLOWING PARTS:




- (a) Front bumper
- (b) LH front fender wheel opening moulding
- (c) LH fender liner
- (d) Fender splash shield
- (e) Hood release lever

2. REMOVE HOOD LOCK

- (a) Remove two bolts, the nut and the hood lock.
- (b) Disconnect the link from the lock.


3. REMOVE HOOD LOCK CONTROL CABLE

- (a) Disconnect the cable from clamps.

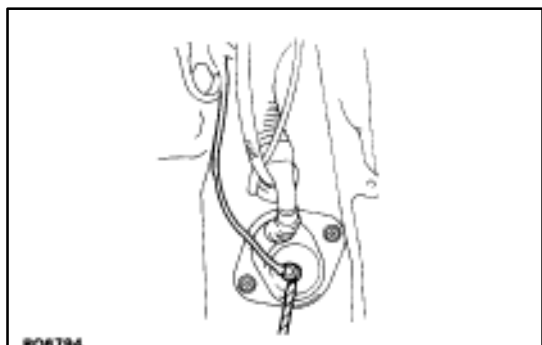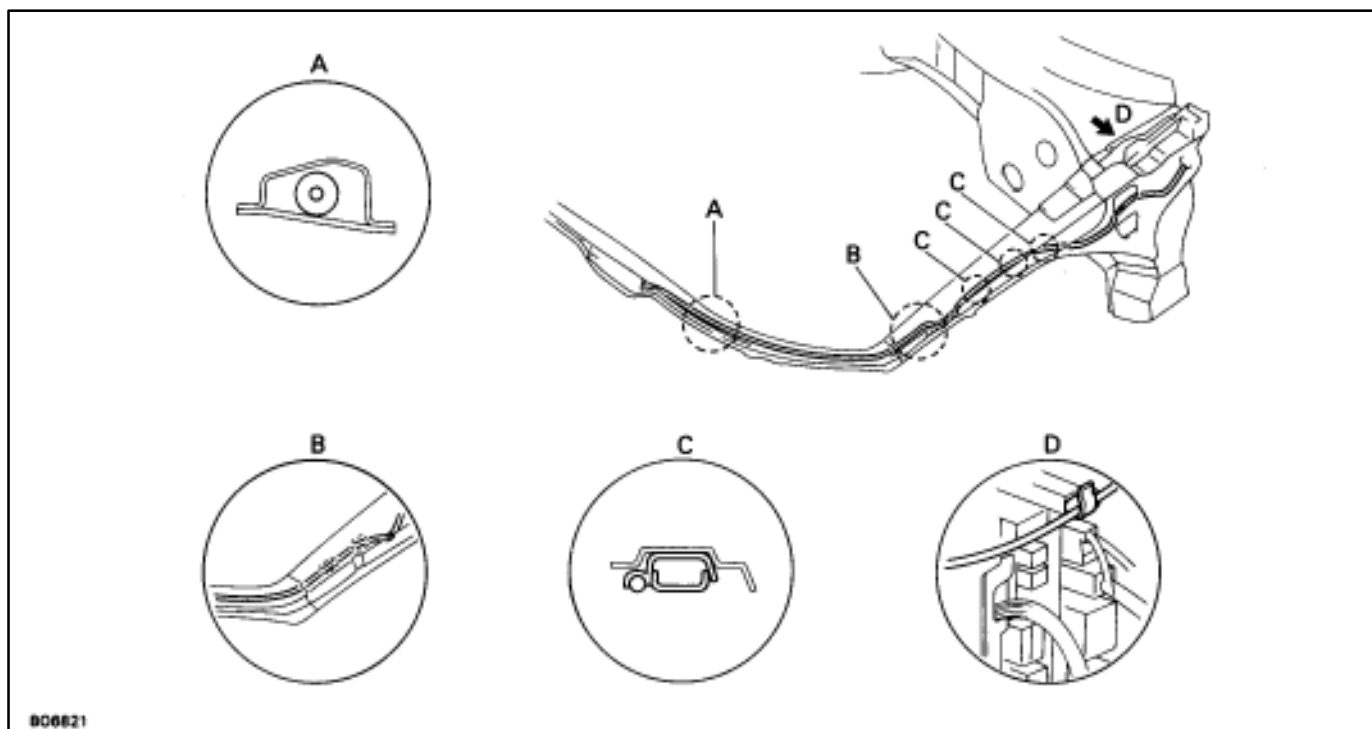
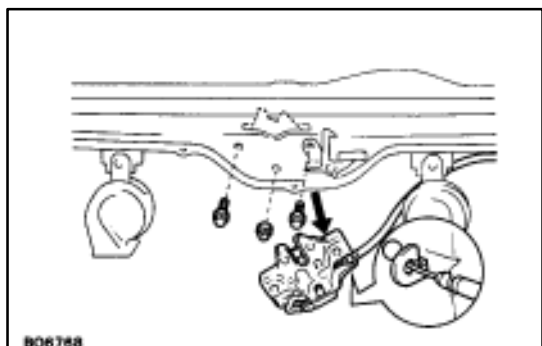


- (b) Using the screwdriver, pry out the cable stopper from grommet.

HINT: Do not damage the grommet with the screwdriver.

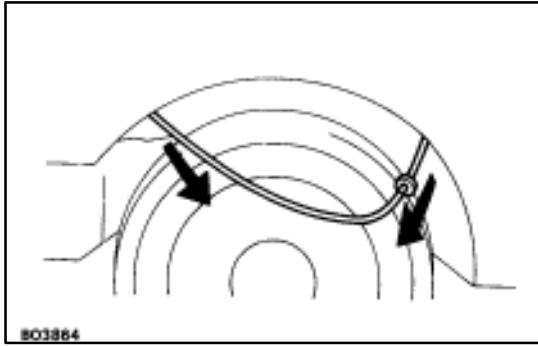

- (c) Pull the cable from front wheel housing to remove it.

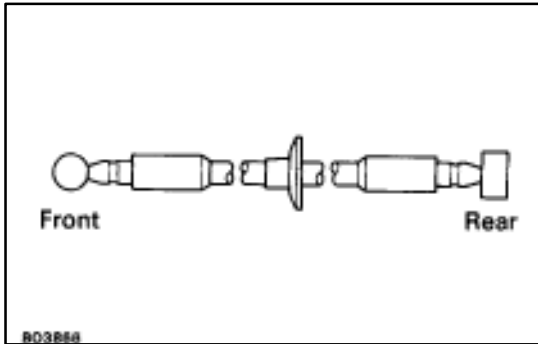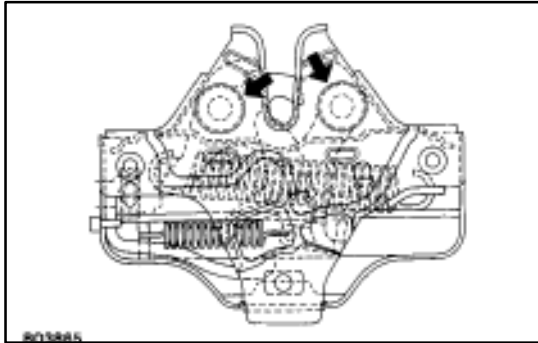

INSTALLATION OF HOOD LOCK CONTROL

(See page [BO-24](#))

1. BEFORE INSTALLING PARTS, COAT LOCK WITH MP GREASE

Apply MP grease to the sliding surface of the lock.

2. INSTALL HOOD LOCK CONTROL CABLE

- Push the rear side cable through the grommet.
- Using the screwdriver, push the cable stopper into the grommet.

HINT: Do not damage the grommet with the screwdriver.

- Clamp the cable to the junction block.
- Pass the front side cable through the upper radiator support.

3. INSTALL HOOD RELEASE LEVER

4. INSTALL HOOD LOCK TEMPORARILY

5. CHECK HOOD LOCK CONTROL FOR PROPER OPERATION

After checking for proper operation, tighten the nut and two bolts to install the lock.

6. INSTALL FOLLOWING PARTS:

- Hood release lever
- Fender splash shield
- LH fender liner
- LH front fender wheel opening moulding
- Front bumper