



Luggage Compartment Door COMPONENTS

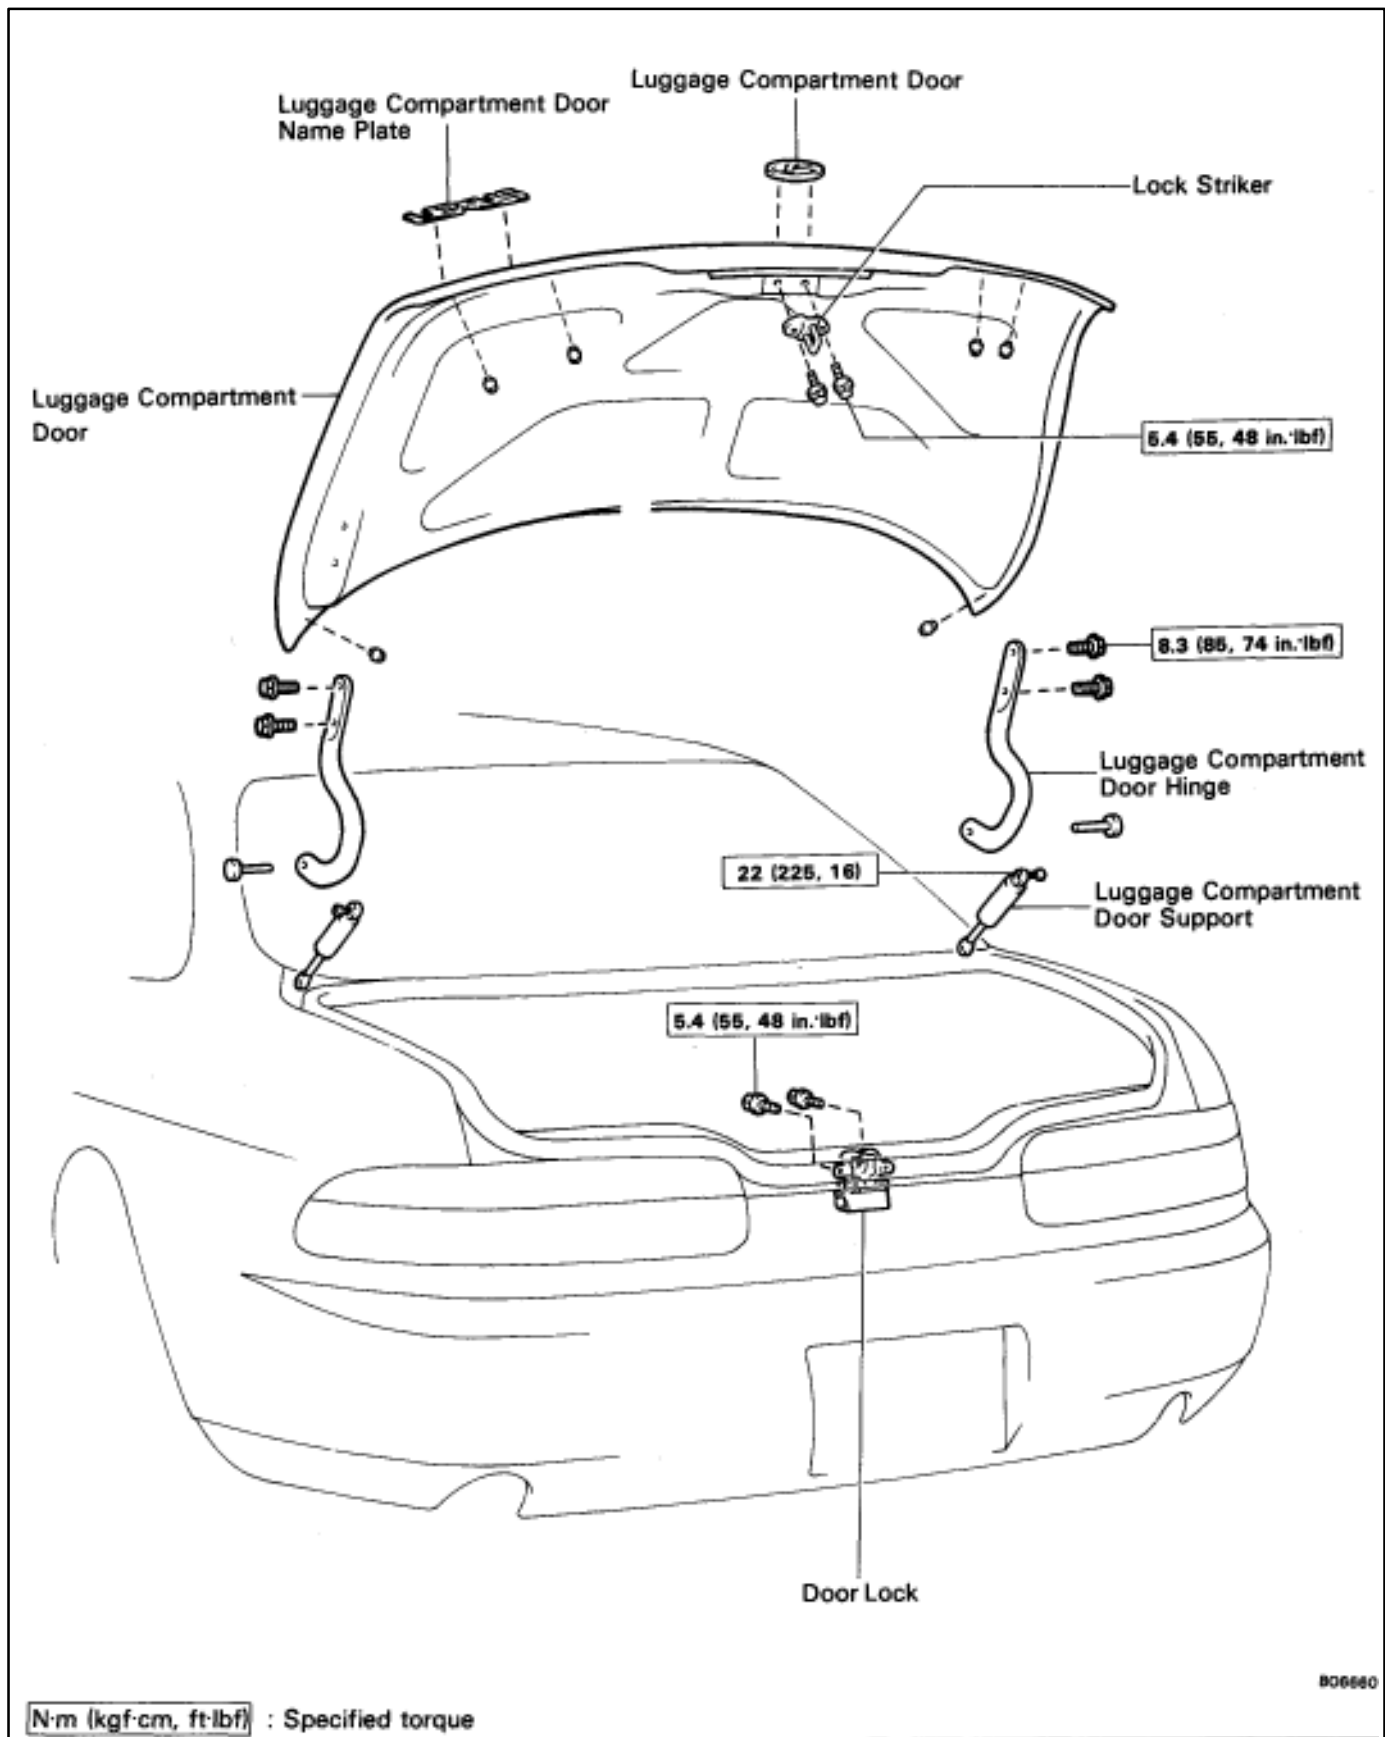


COMPONENTS (Cont'd)

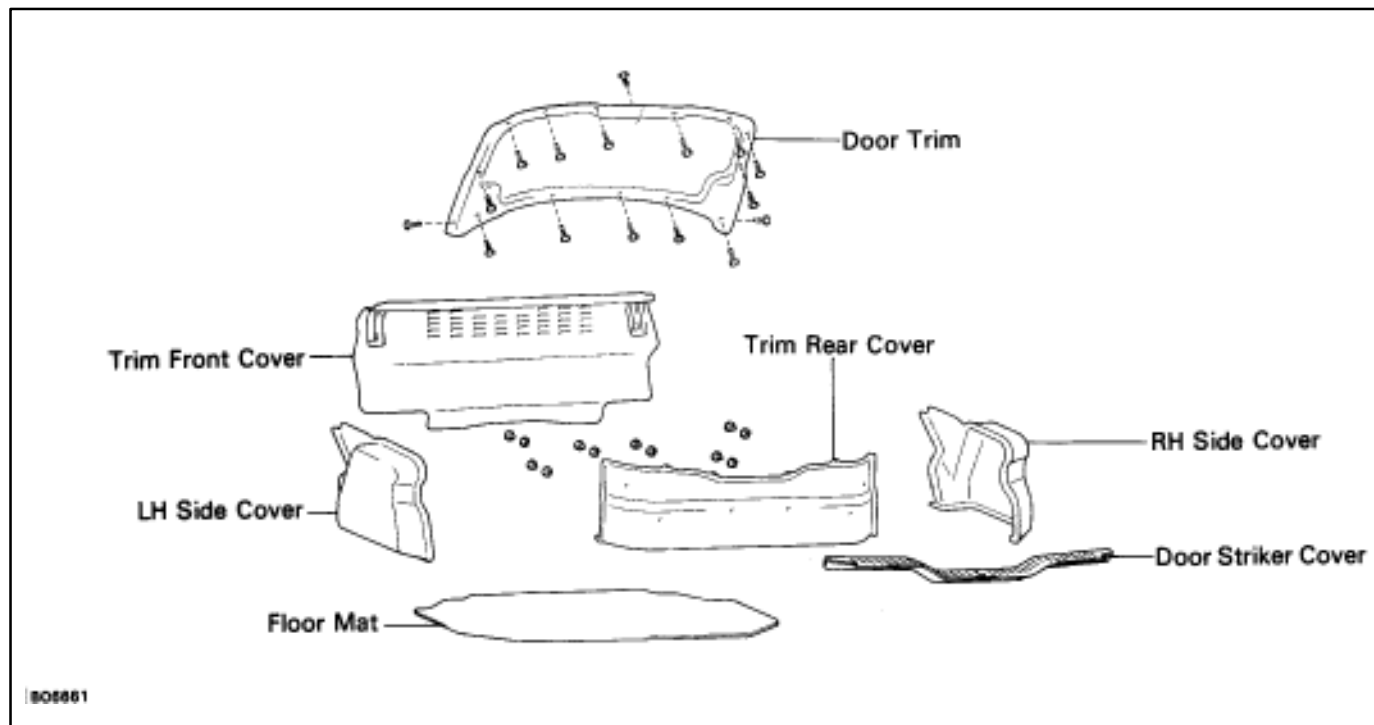

REMOVAL OF LUGGAGE COMPARTMENT DOOR


1. REMOVE FOLLOWING PARTS:
(See steps 1 to 7 on pages [BO-78](#) to 79)
 - (a) Floor mat
 - (b) Door striker cover
 - (c) Trim rear cover
 - (d) RH and LH side covers
 - (e) Trim front cover
 - (f) Door trim
2. REMOVE LUGGAGE COMPARTMENT DOOR
Remove four bolts and the door.

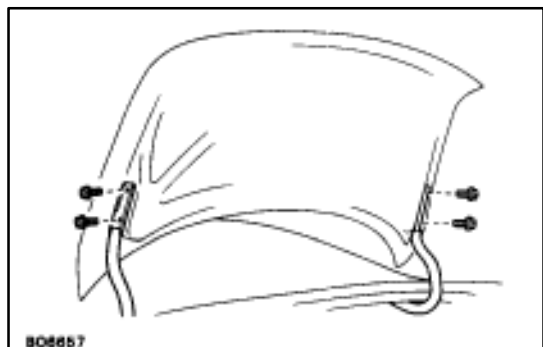


REPLACEMENT OF LUGGAGE COMPARTMENT DOOR HINGE

(See page [BO-76](#))

1. REMOVE FOLLOWING PARTS:
 - (a) Rear seat cushion and back (See steps 1 to 2 on page [BO-66](#))
 - (b) Roof side inner garnish (See step 8 on page [BO-124](#))
 - (c) Package tray trim (See step 9 on page [BO-124](#))
2. REMOVE LUGGAGE COMPARTMENT DOOR HINGE
 - (a) Remove the hinge pin.

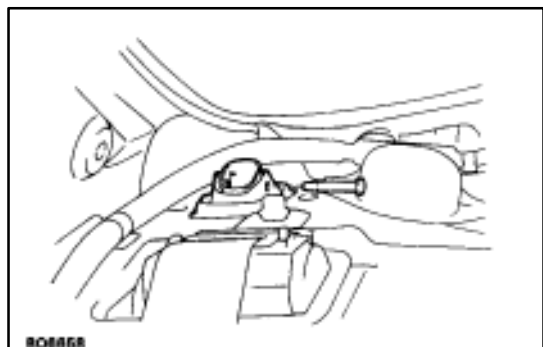

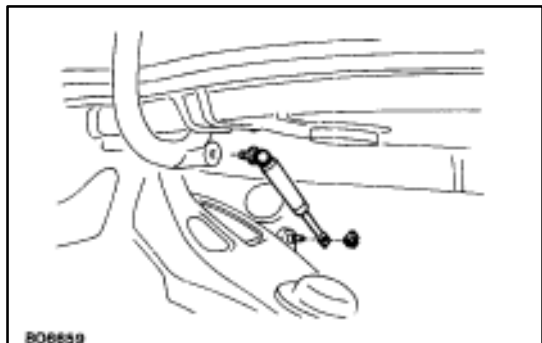

- (b) Remove the clip, loosen the bolt disconnect the door support.
- (c) Remove the door support.

3. IF NECESSARY, REPLACE DOOR SUPPORT
(See step 3 on page [BO-23](#))

INSTALLATION OF LUGGAGE COMPARTMENT DOOR

(See page [BO-76](#))

INSTALL LUGGAGE COMPARTMENT DOOR PARTS BY FOLLOWING REMOVAL SEQUENCE IN REVERSE

DISASSEMBLY OF LUGGAGE COMPARTMENT DOOR

(See page [BO-76](#))

1. **REMOVE LOCK STRIKER**
Remove two bolts and the striker.
2. **REMOVE CUSHION**
3. **REMOVE NAME PLATE AND EMBLEM**

(See page [BO-94](#))

ASSEMBLY OF LUGGAGE COMPARTMENT DOOR

(See page [BO-76](#))

ASSEMBLE THE LUGGAGE COMPARTMENT DOOR PARTS BY FOLLOWING DISASSEMBLY SEQUENCE IN REVERSE