

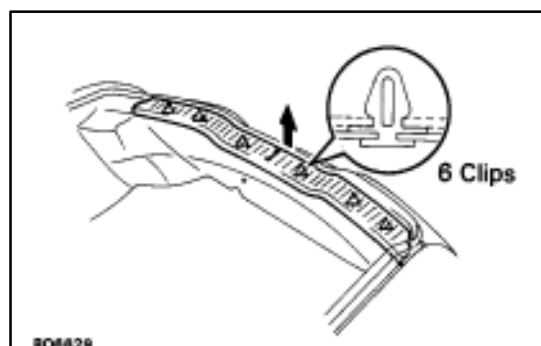


## Trim and Weatherstrip COMPONENTS

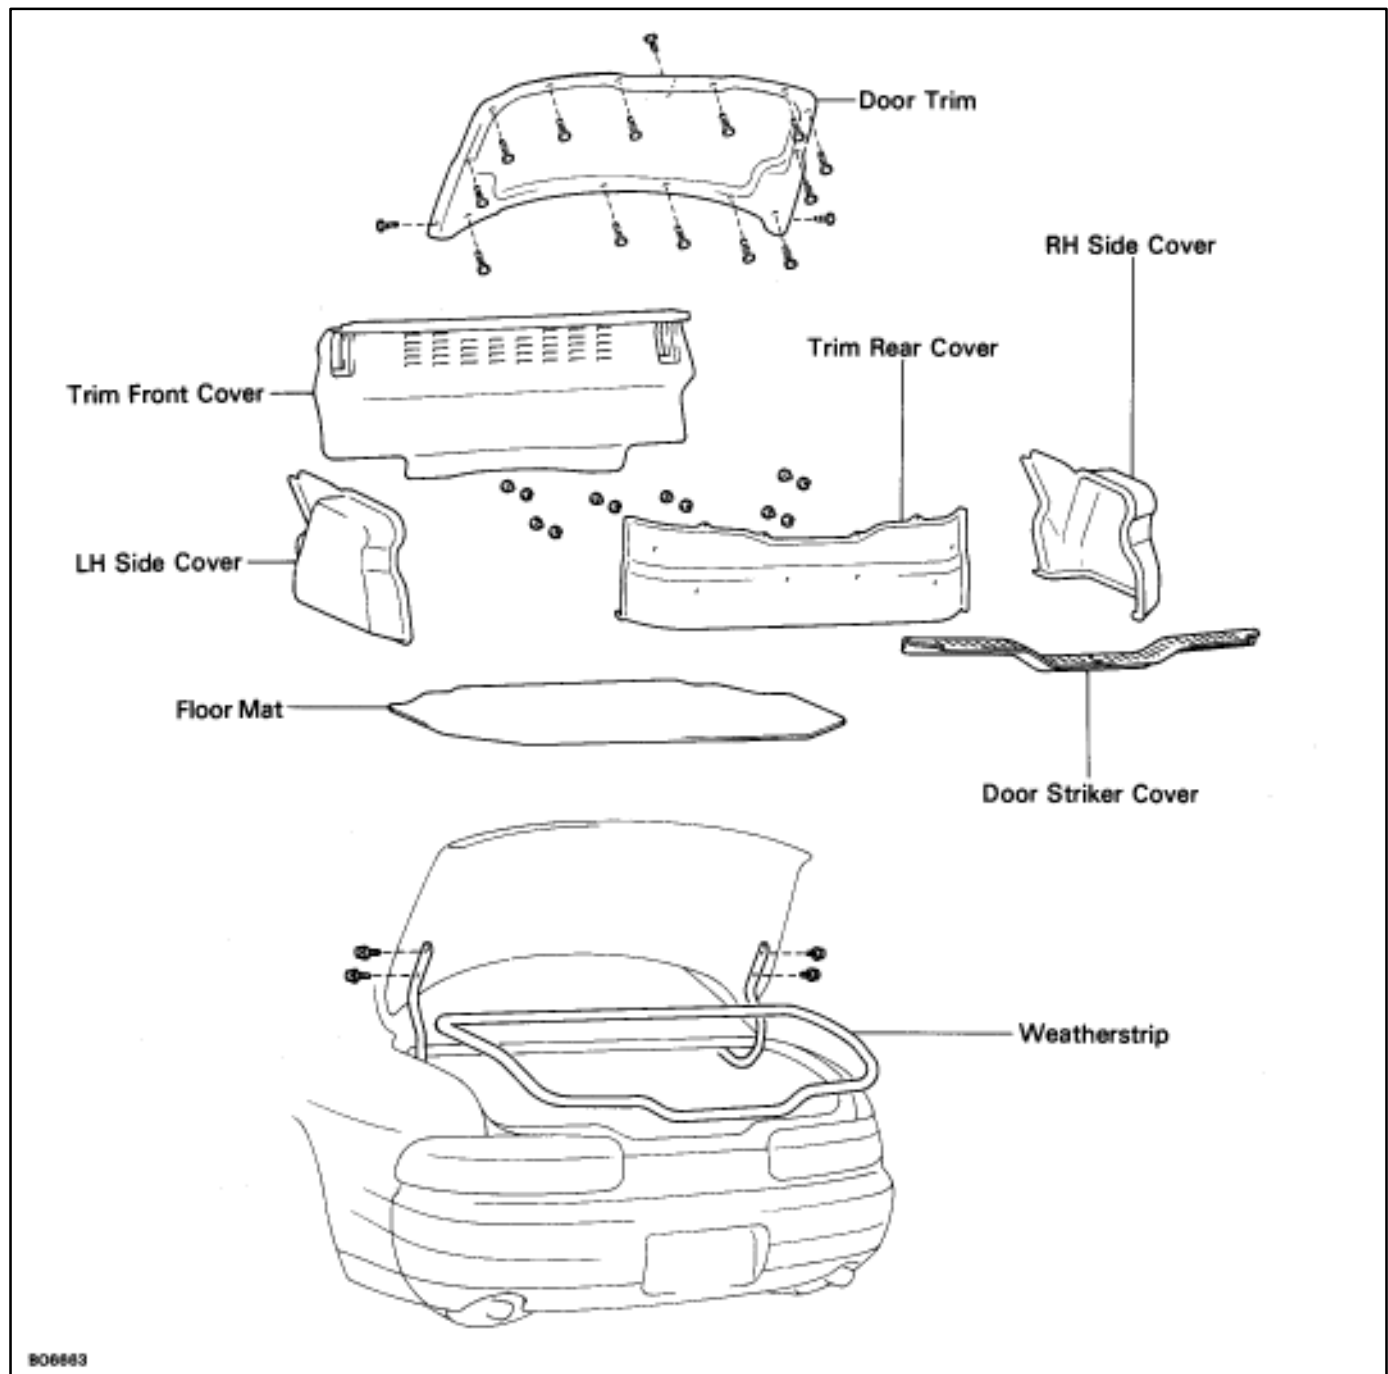


## REMOVAL OF TRIM AND WEATHERSTRIP

1. REMOVE FLOOR MAT
2. REMOVE DOOR STRIKER COVER  
Pull up the cover and remove it.

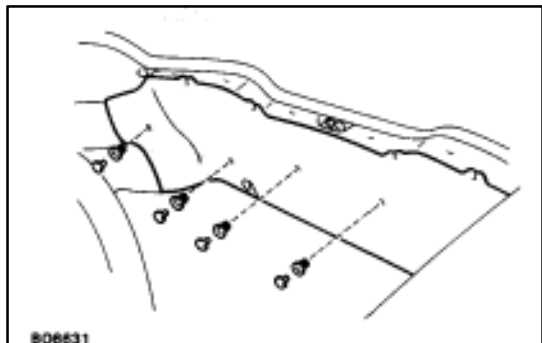


### 3. REMOVE TRIM REAR COVER

- (a) Using a clip remover, remove six clips.
- (b) Pull up the cover to remove it.

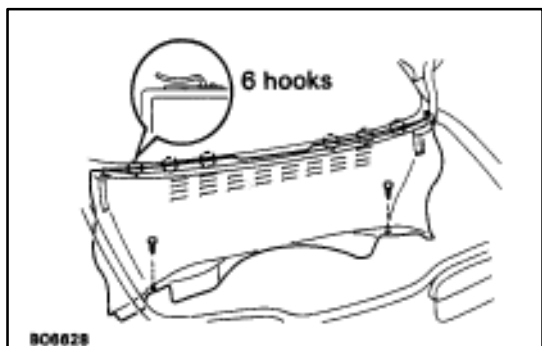


### 4. REMOVE TRIM FRONT COVER

Remove two screws and the cover.

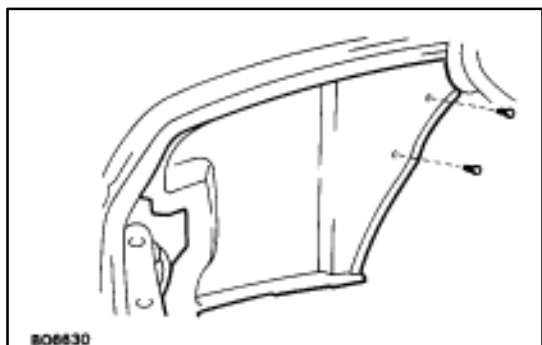


### 5. REMOVE LH SIDE COVER

Using a clip remover, remove two clips and the cover.

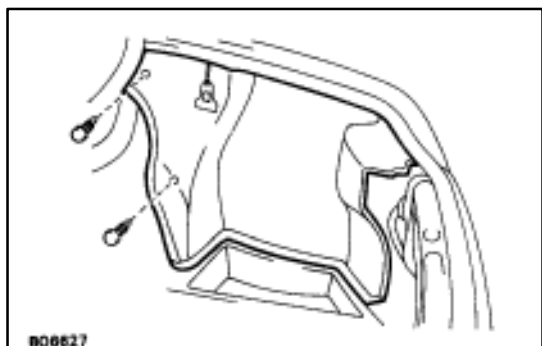


### 6. REMOVE RH SIDE COVER

- (a) Push the plate through to the back of the cover.
- (b) Using a clip remover, remove two clips and the cover.

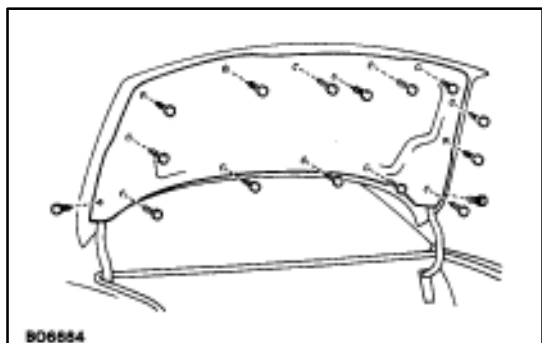

### 7. REMOVE DOOR TRIM

- (a) Using a clip remover, remove sixteen clips.
- (b) Pull the trim to remove it.

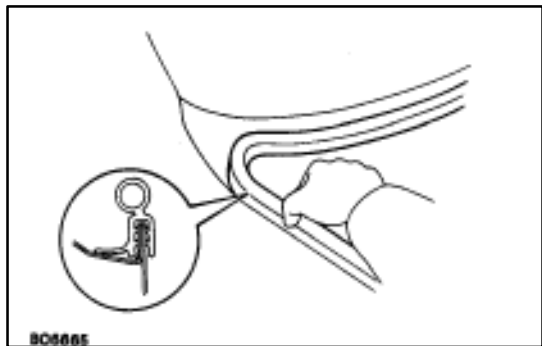

**8. REMOVE LUGGAGE COMPARTMENT DOOR**  
(See step 2 on page [BO-76](#))

**9. REMOVE WEATHERSTRIP**  
Pull out the weatherstrip by hand and remove it.

## **INSTALLATION OF TRIM AND WEATHERSTRIP**

(See page [BO-78](#))

**INSTALL TRIM AND WEATHERSTRIP PARTS BY FOLLOWING  
REMOVAL SEQUENCE IN REVERSE**