


Inner Rear View Mirror COMPONENTS

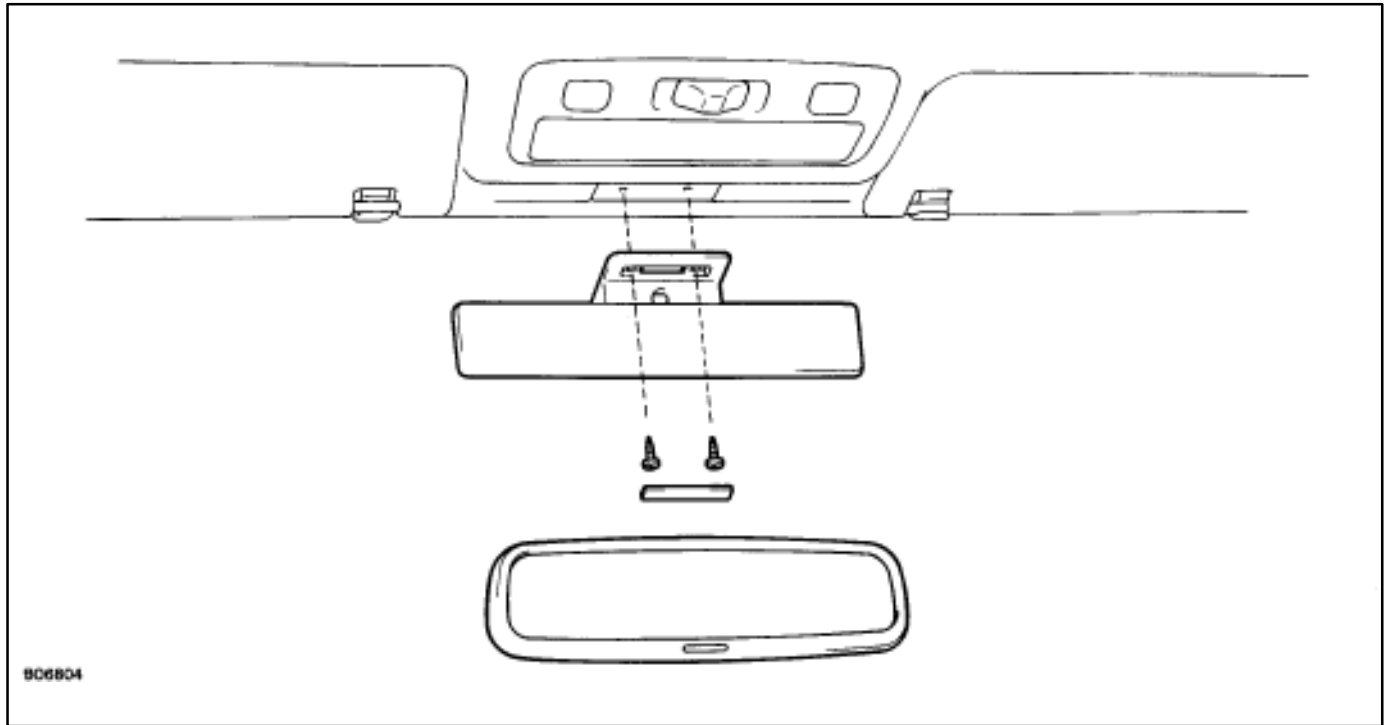

REMOVAL AND INSTALLATION OF INNER REAR VIEW MIRROR

HINT: Install the mirror following removal sequence in reverse.

1. **REMOVE CENTER VISOR**
(See step 4 on page [BO-123](#))
2. **REMOVE INNER REAR VIEW MIRROR**
 - (a) Remove the mirror from the mirror base.
 - (b) Disconnect the connector.