


## MIRROR

### Outside Rear View Mirror

## COMPONENTS

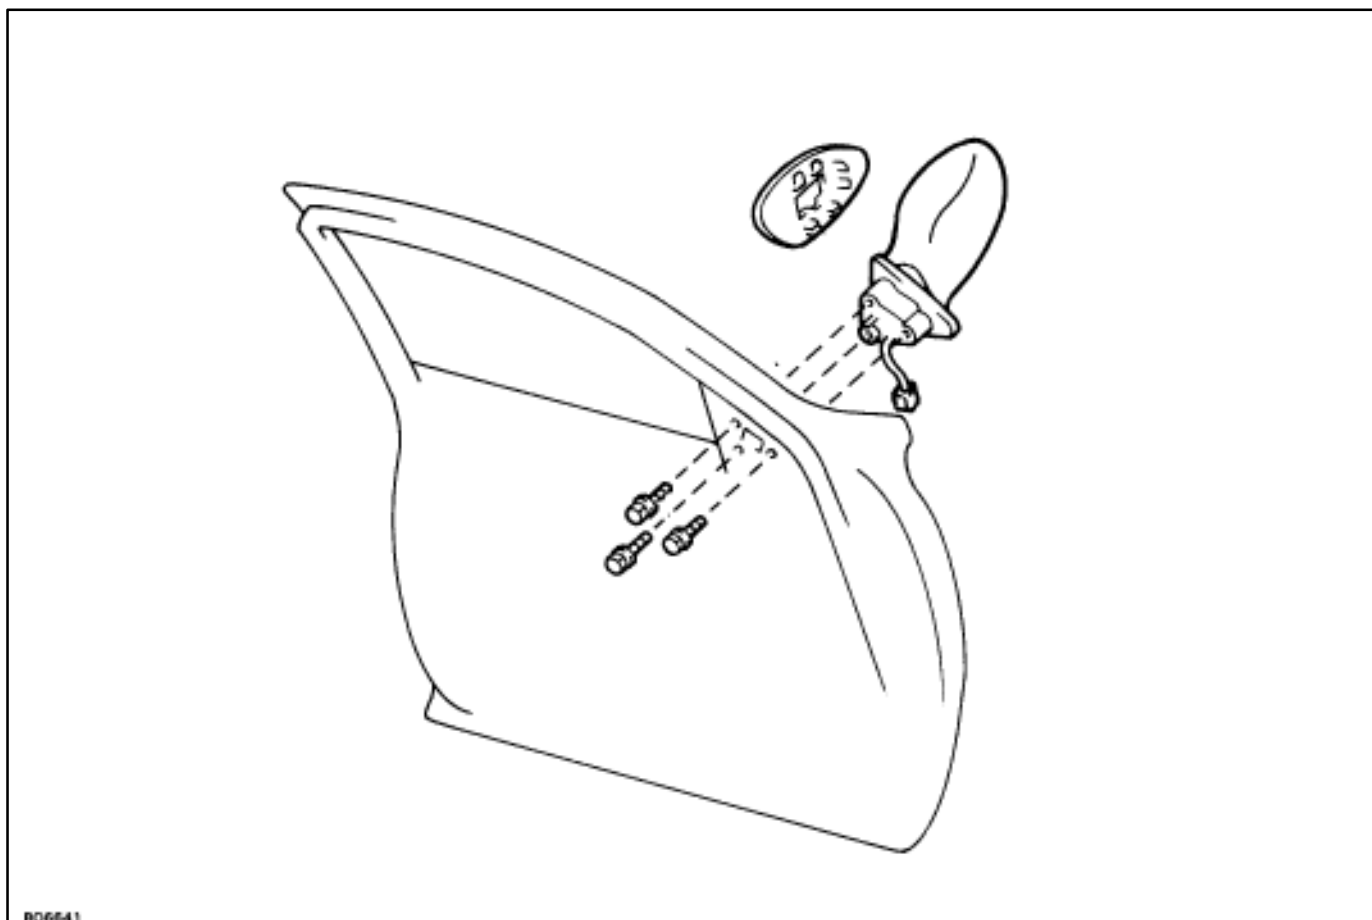

## REMOVAL AND INSTALLATION OF OUTSIDE REAR VIEW MIRROR

HINT: Install the mirror by following the removal sequence in reverse.

### 1. DISCONNECT BATTERY CABLE FROM NEGATIVE TERMINAL

**CAUTION:** Work must be started after approx. 20 seconds or longer from the time the ignition switch is turned to the "LOCK" position and the negative (-) terminal cable is disconnected from the battery.


### 2. REMOVE DOOR TRIM UPPER PANEL

Removal: (See step 5 on page [BO-34](#))

Installation: (See step 16 on page [BO-40](#))

### 3. REMOVE MIRROR



- (a) Connect the connector, install the mirror with two bolts.
- (b) Connect the connector, install the speaker with two bolts.

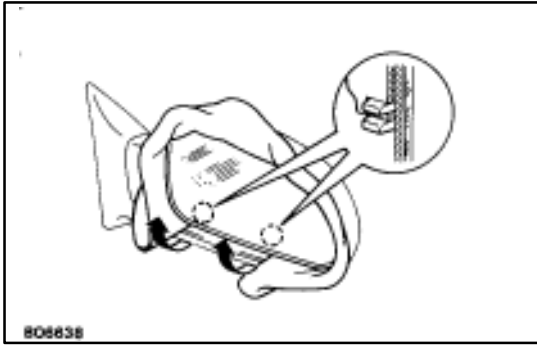

## REPLACEMENT OF OUTSIDE REAR VIEW MIRROR

### 1. IF NECESSARY, DISCONNECT MIRROR

- (a) Insert the shop rag between the mirror and the mirror body to wrap up the mirror in the shop rag.
- (b) Pull up the lower side of the shop rag to disconnect the mirror joint.
- (c) Pull up the mirror and disconnect it.

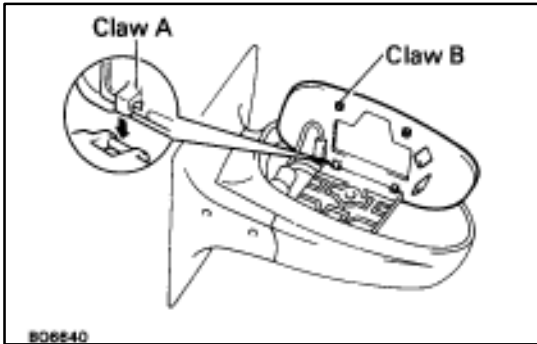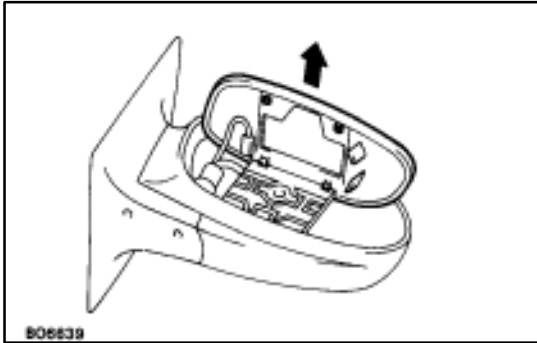

### 2. CONNECT MIRROR

- (a) Connect the claws (A) and set the mirror to the mirror body.
- (b) Push the mirror to connect the claws (B) and connect it.