




QUARTER WINDOW GLASS COMPONENTS

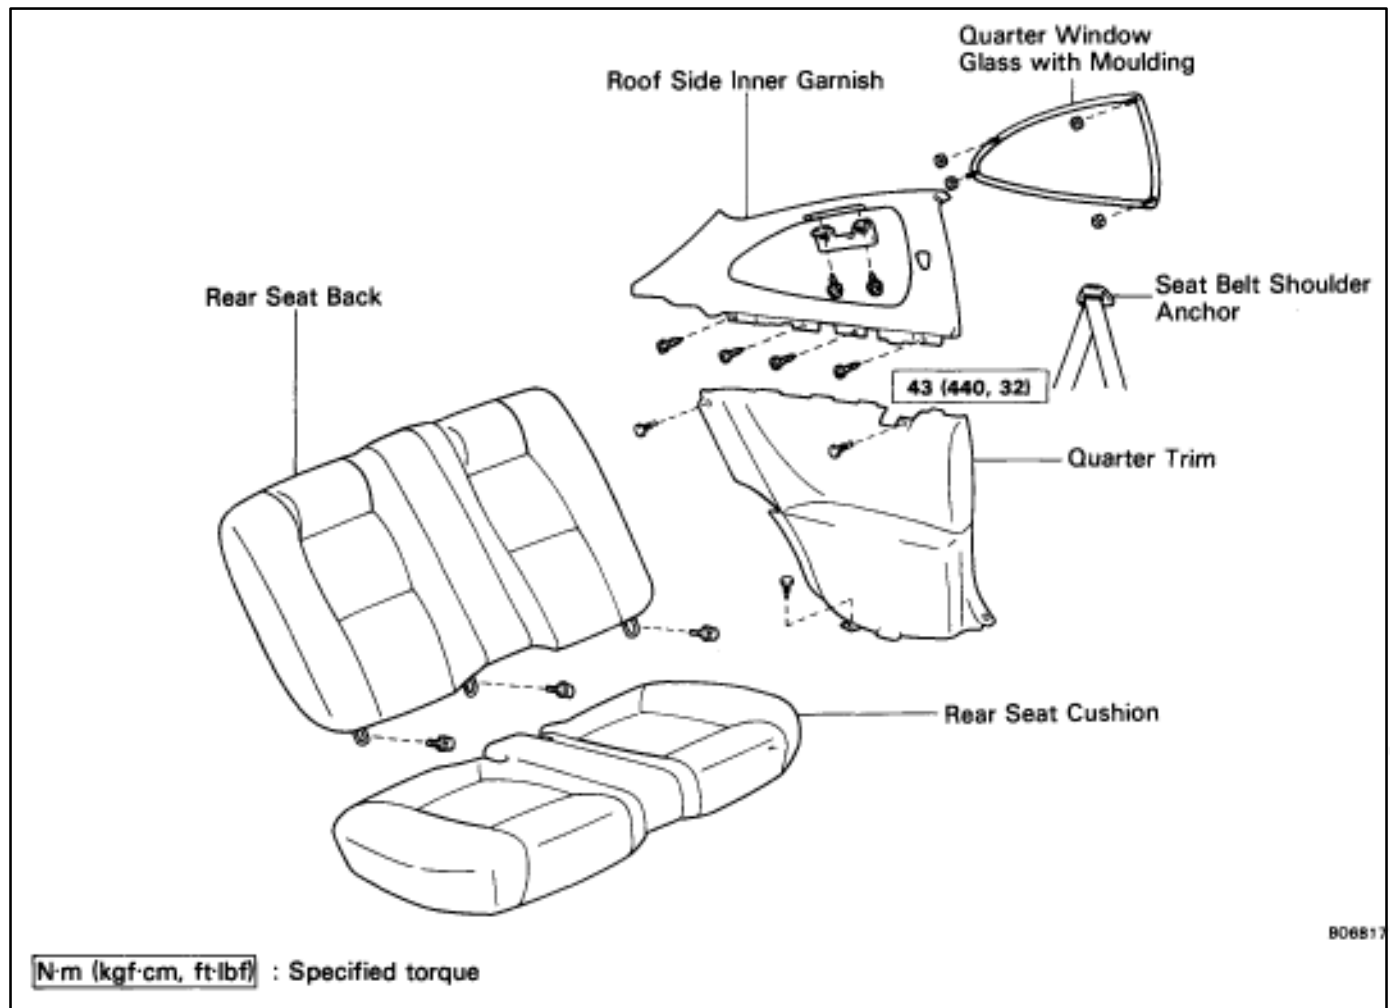


REMOVAL OF QUARTER WINDOW GLASS

1. REMOVE FOLLOWING PARTS:
 - (a) Rear seat cushion and back
 - (b) Seat belt shoulder anchor
 - (c) Quarter trim and roof side inner garnish
2. REMOVE QUARTER WINDOW GLASS
 - (a) Remove four nuts.
 - (b) Remove roof side rail weatherstrip.

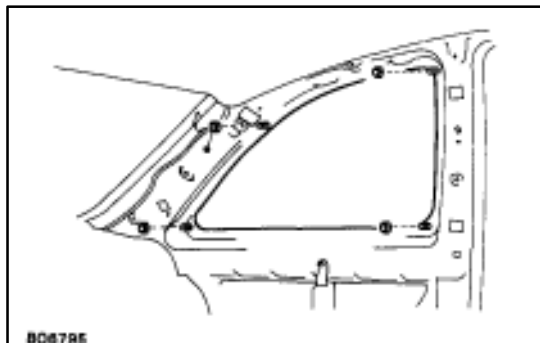

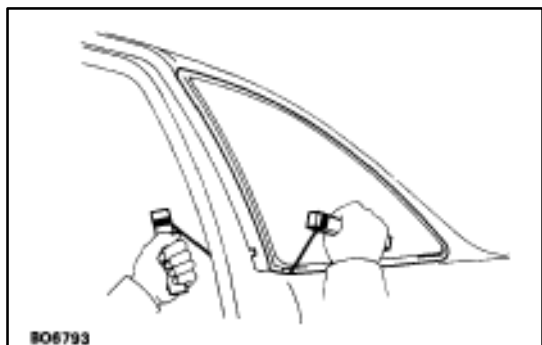

- (c) Push the piano wire through from the interior.
 - (d) Cut loose the adhesive and remove the glass.
- HINT: Do not damage the body.

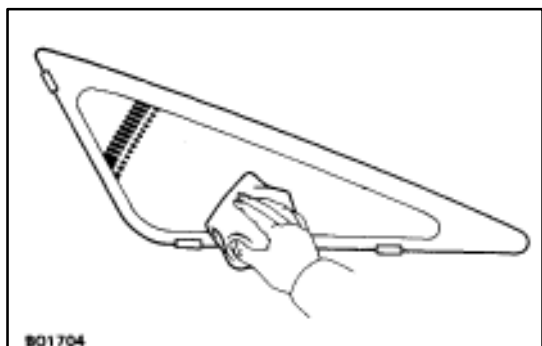


INSTALLATION OF QUARTER WINDOW GLASS

(See page [BO-52](#))


1. CLEAN BODY OR GLASS

Wipe off any adhesive left on the body or glass with cleaner.

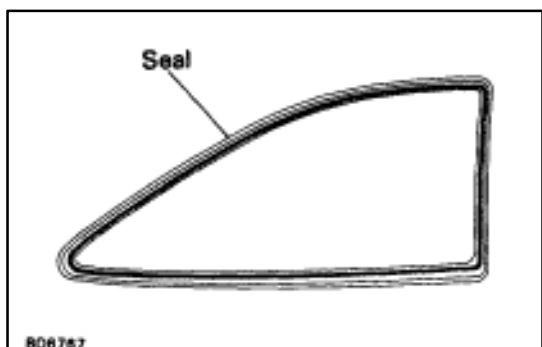

2. INSTALL QUARTER WINDOW GLASS

- (a) Apply the primer around the entire ceramic application area.
- (b) Install the seal to the glass.

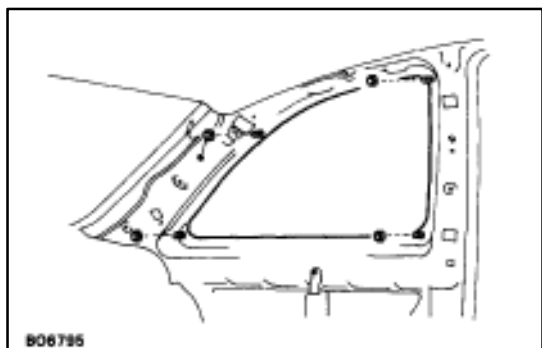

- (c) Install the window glass to the body with four bolts.

3. INSTALL FOLLOWING PARTS:

- (a) Quarter trim and roof side inner garnish
 - (b) Seat belt shoulder anchor
- Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)**
- (c) Rear seat cushion and back
- (See page [BO-67](#))