


ROOF HEADLINING COMPONENTS

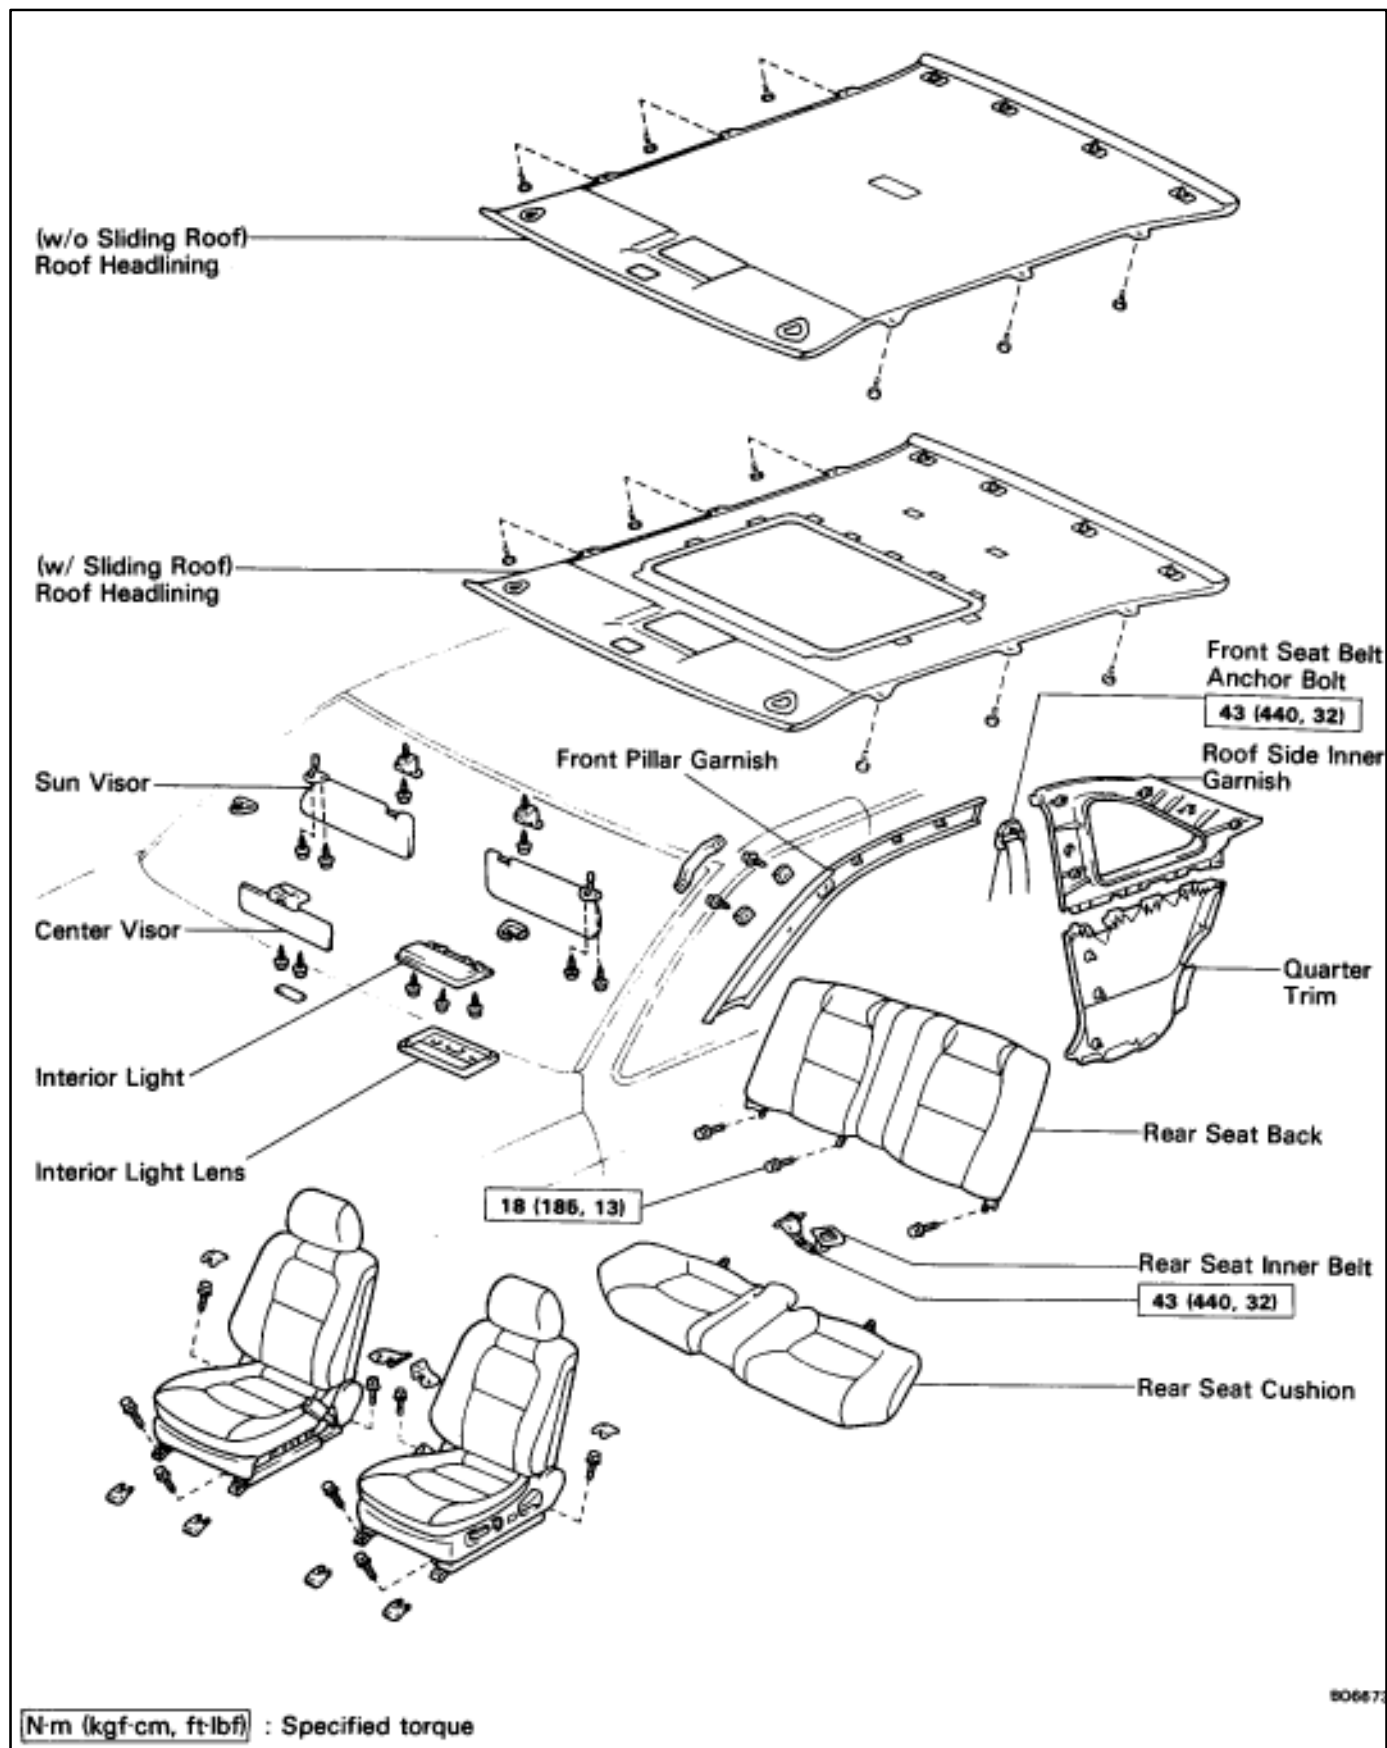


REMOVAL OF ROOF HEADLINING

(See page [BO-120](#))

1. REMOVE FOLLOWING PARTS:


- Front pillar garnish
- Sun visor
- Rear seat back and cushion
- Roof side inner garnish
- Quarter trim
- Interior Light
- Center visor

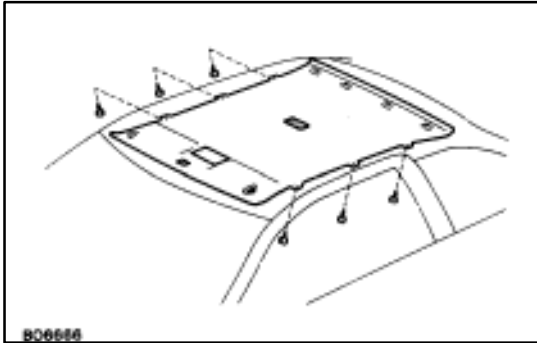

2. REMOVE ROOF HEADLINING

- (a) Disconnect four clips from the roof panel rear end.
- (b) Using a clip remover, remove six clips.
- (c) Release the fastener tapes, then remove the headlining.
- (d) Fully recline the front seat back.
- (e) Bring out the headlining as shown.

NOTICE: Do not fold down the headlining.

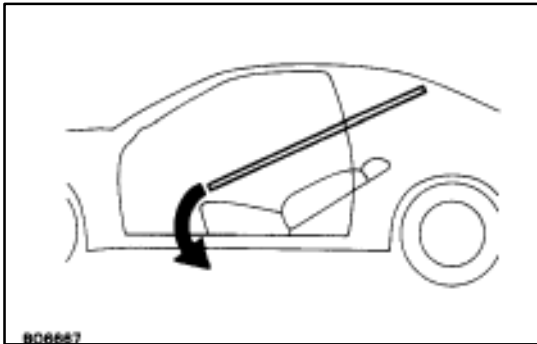

INSTALLATION OF ROOF HEADLINING

(See page [BO-120](#))

INSTALL ROOF HEADLINING PARTS BY FOLLOWING REMOVAL SEQUENCE IN REVERSE

HINT: Torque following parts:

- (a) Rear seat back
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)
- (b) Rear seat belt inner belt
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)
- (c) Front seat belt shoulder anchor bolt
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)