

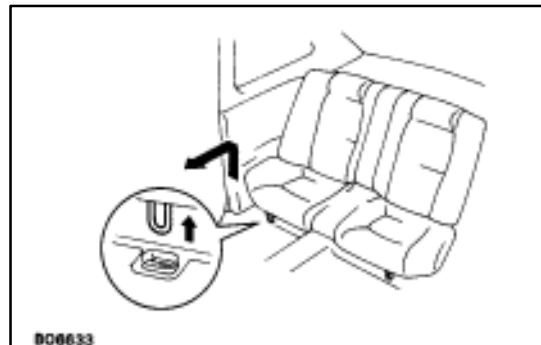


Rear Seat

REMOVAL OF REAR SEAT

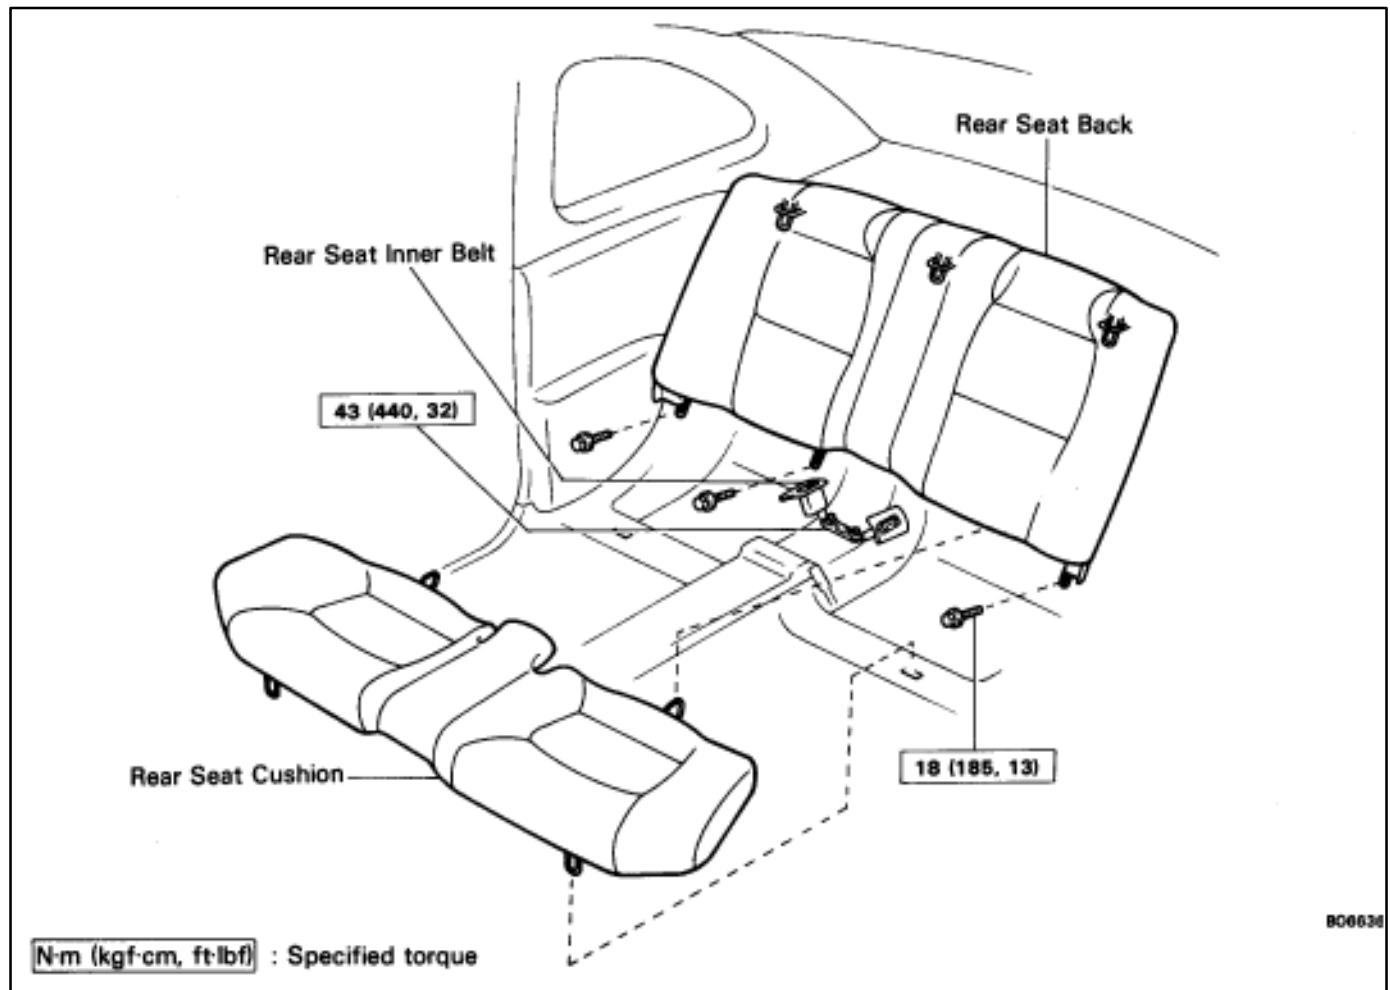

1. **REMOVE REAR SEAT CUSHION**
Pull up the seat cushion to remove it.

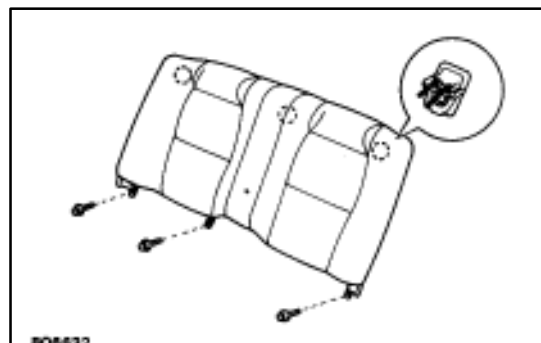

2. **REMOVE REAR SEAT BACK**
 - (a) Remove three bolts.
 - (b) Pull up the seat back to remove it.


INSTALLATION OF REAR SEAT

(See page [BO-66](#))

1. INSTALL REAR SEAT BACK


Push down the rear seat back and install three bolts.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

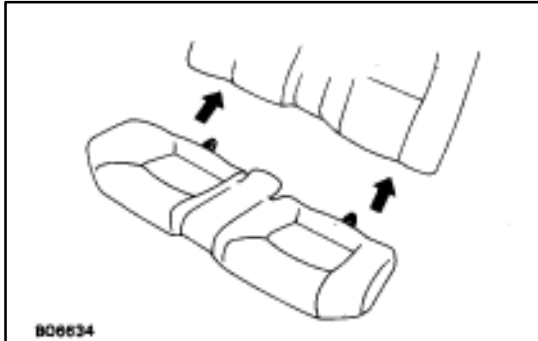

2. INSTALL REAR SEAT CUSHION

(a) Insert the seat cushion wire to seat back.


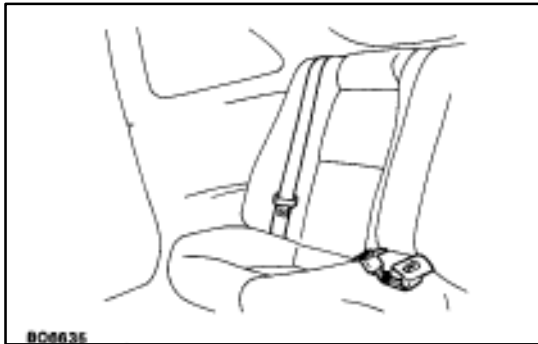


HINT: Before installation, confirm that the rear seat belts are positioned shown.


(b) Push down the cushion to install the hook to the body panel.

HINT: Confirm that the seat is installed firmly.


DISASSEMBLY OF REAR SEAT

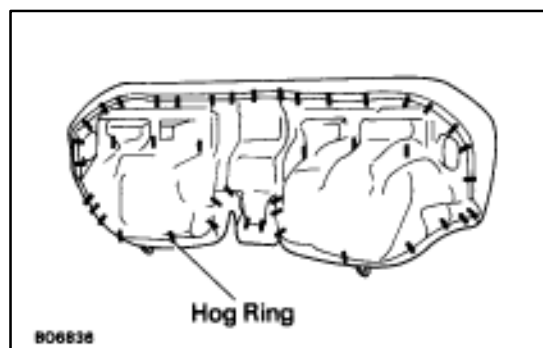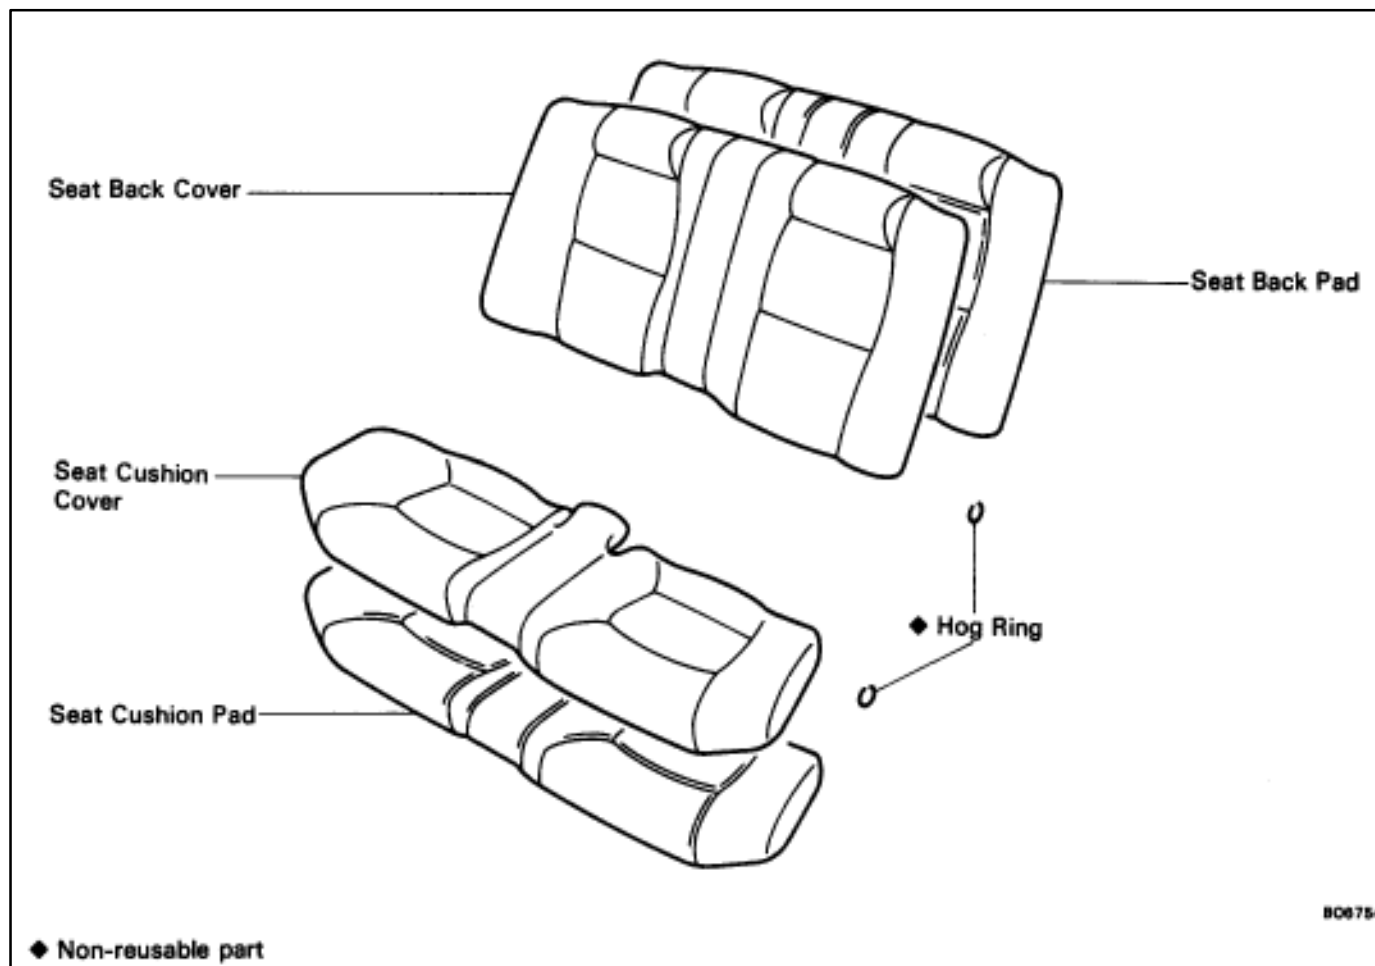

- 1. REMOVE SEAT CUSHION COVER**
Remove hog rings and the cover.

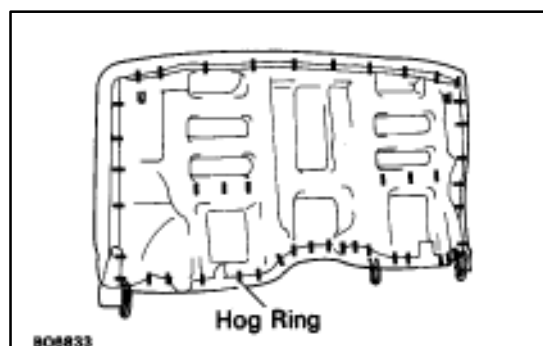

- 2. REMOVE SEAT BACK COVER**
Remove hog rings and the cover.

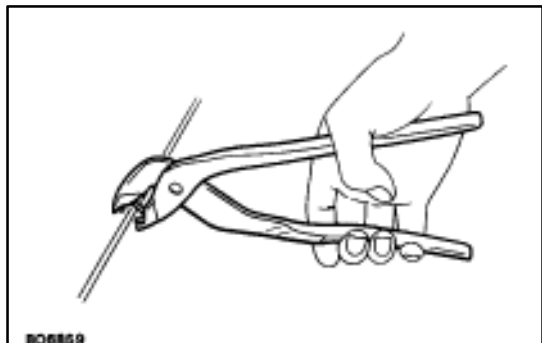

ASSEMBLY OF REAR SEAT

(See page [BO-68](#))

**ASSEMBLE THE REAR SEAT PARTS BY FOLLOWING DIS-
ASSEMBLY SEQUENCE IN REVERSE**

HINT:

- Using a hog ring pliers install the new hog ring.
- If creases occur in the front seat, stretch out the creases by heating then with a dryer, etc.

If the creases still cannot be removed, spray them lightly with a vaporizer before applying the hair dryer again.