


806648

## Rear Seat Belt

### REMOVAL OF REAR SEAT BELT

(See page [BO-70](#))

1. REMOVE REAR SEAT BACK AND CUSHION
2. REMOVE PACKAGE TRAY TRIM
  - (a) Using a clip remover, remove two clips.
  - (b) Pull the belt guide forward to remove it.
  - (c) Pull the trim forward to remove it.
3. REMOVE REAR SEAT OUTER BELT
  - (a) Remove the outer belt floor anchor bolt.
  - (b) Remove the bolt and the retractor.

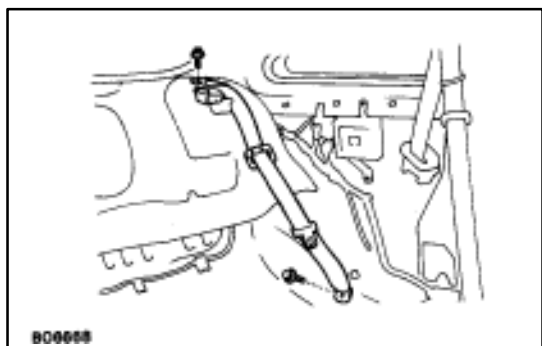


806658

4. REMOVE REAR SEAT INNER BELT


### INSTALLATION OF REAR SEAT BELT

(See page [BO-70](#))

1. INSTALL REAR SEAT INNER BELT  
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)
2. INSTALL REAR SEAT OUTER BELT  
Torque:  
Retractor bolt 43 N·m (440 kgf·cm, 32 ft·lbf)  
Anchor bolt 43 N·m (440 kgf·cm, 32 ft·lbf)
3. INSTALL PACKAGE TRAY TRIM
4. INSTALL REAR SEAT BACK AND CUSHION  
(See step 1 to 2 on page [BO-67](#))  
HINT: After installation, check that the seat belts are positioned as shown.

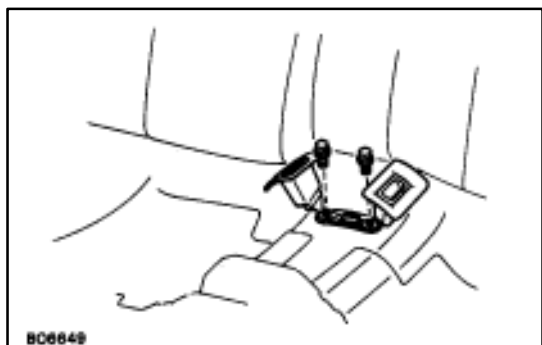

806649

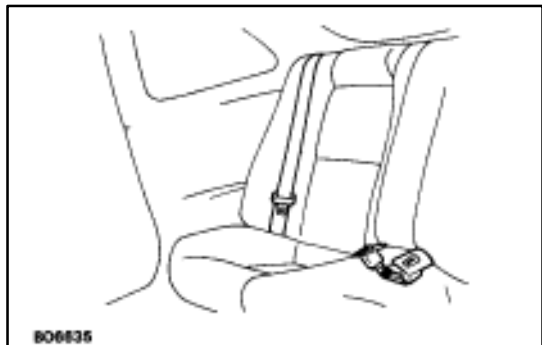

806635

### INSPECTION OF REAR SEAT BELT

#### Emergency Locking Retractor (ELR)

1. RUNNING TEST (IN SAFE AREA)  
(See step 1 on page [BO-72](#))
2. STATIC TEST  
(See step 2 on page [BO-72](#))