



TRIM, ASSIST GRIP AND VISOR COMPONENTS

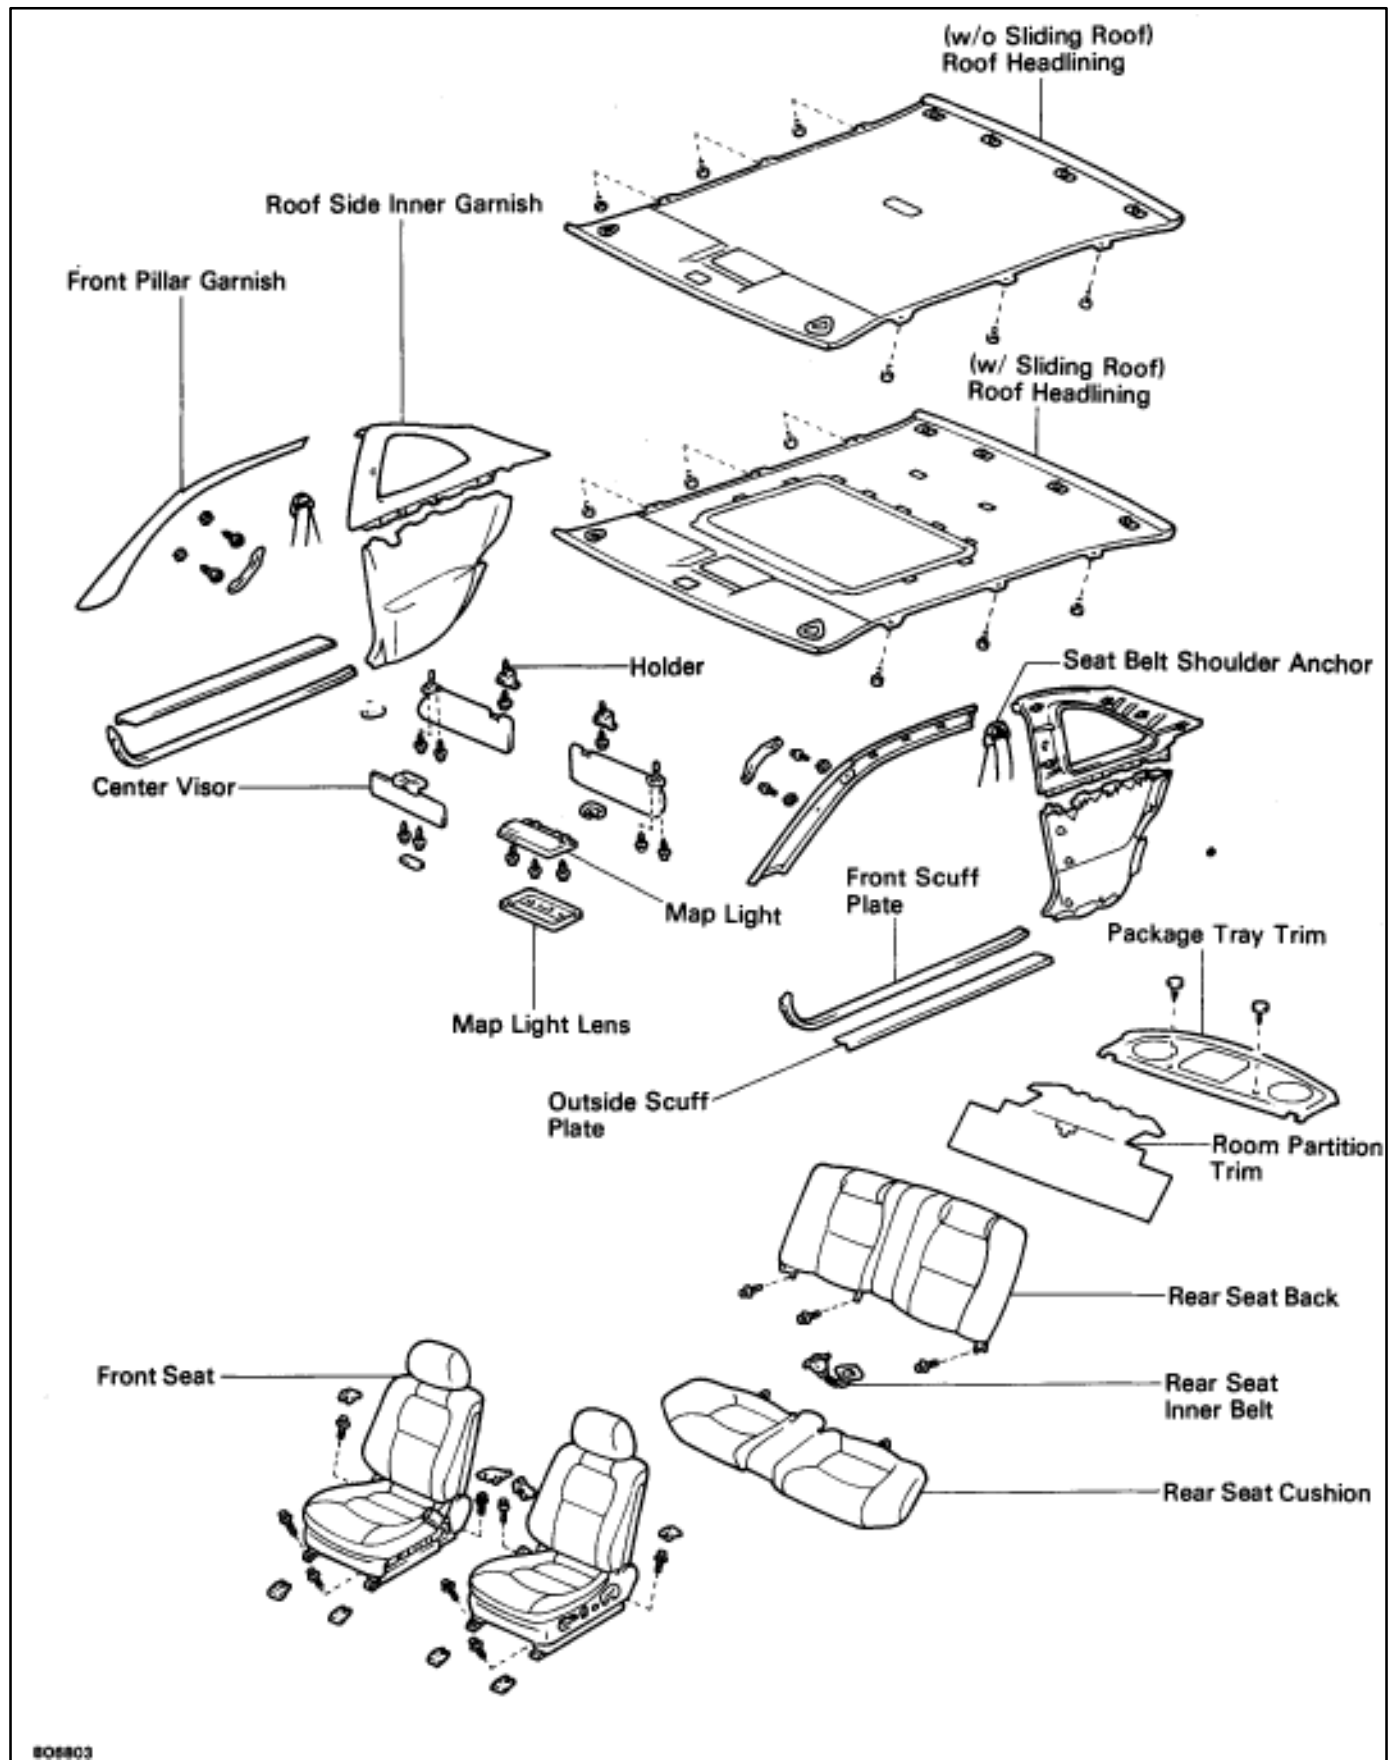

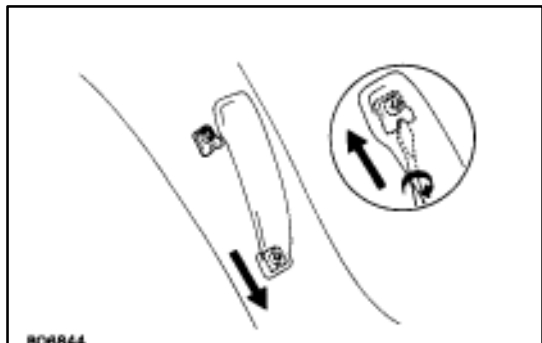


REMOVAL OF TRIM, ASSIST GRIP AND VISOR

(See page [BO-122](#))


1. REMOVE ASSIST GRIP

- Lift up the grip so that the screwdriver can be inserted.
- Insert the screwdriver into the groove in the cushion.
- Turn the screwdriver while pulling the assist grip upward.
- After the top of the assist grip is freed, pull the lower part downward.

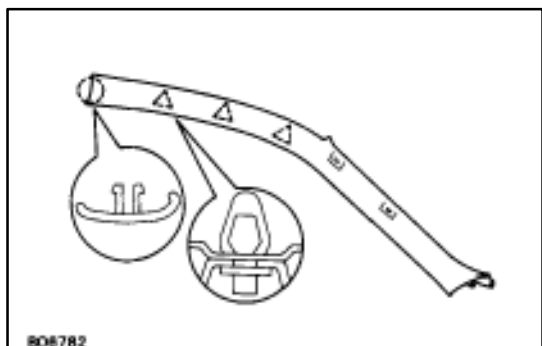


2. REMOVE FRONT PILLAR GARNISH

- Remove two screws and the assist grip.
- Pry out clips by your hand.
- Pull the garnish upward to remove it.

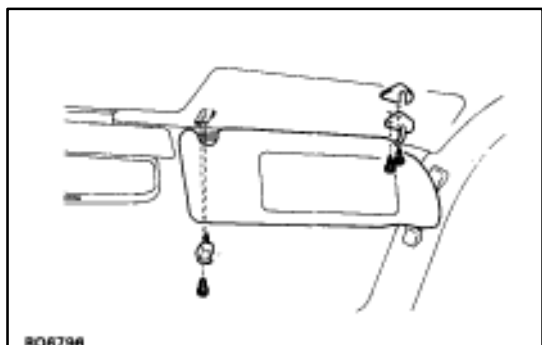

3. REMOVE SUN VISOR

- Pry out the cover.
- Remove two screws, disconnect the connector and the sun visor.
- Remove the screw and the holder.

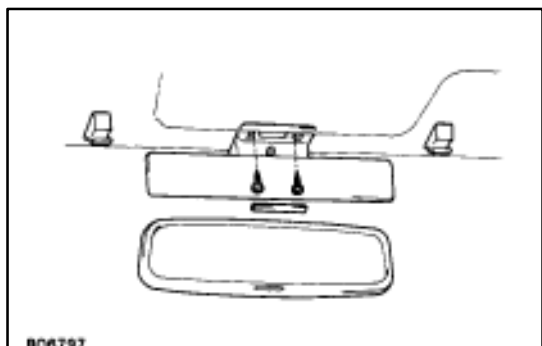


4. REMOVE CENTER VISOR

- Pry out the cover.
- Remove two screws, disconnect the connector and the visor.


5. REMOVE REAR SEAT CUSHION AND BACK

6. REMOVE FRONT SEAT OUTER BELT

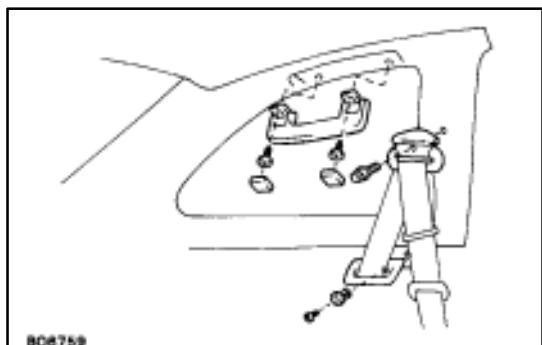


7. REMOVE QUARTER TRIM AND ASSIST GRIP

- Remove two caps, two screws and assist grip.
- Remove the clip and the belt guide.
- Remove the bolt and the front seat belt anchor.

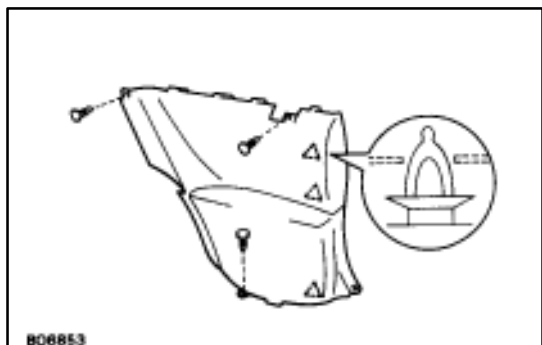


- (d) Using a clip remover, remove three clips.
- (e) Insert a screwdriver between the retainers and quarter trim to pry it loose.
- (f) Remove the quarter trim.

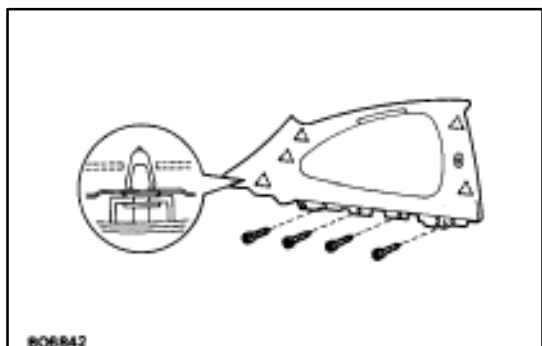

8. REMOVE ROOF SIDE INNER GARNISH


- (a) Remove four screws.
- (b) Insert a screwdriver between the retainers and inner garnish to pry it loose.
- (c) Remove the inner garnish.

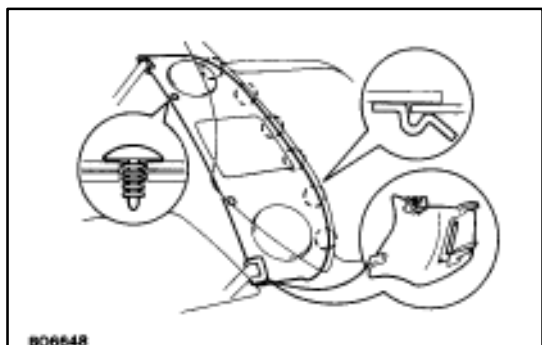

9. REMOVE PACKAGE TRAY TRIM


- (a) Using a clip remover, remove two clips.
- (b) Pull the belt guide forward to remove it.
- (c) Pull the trim forward to remove it.

10. REMOVE ROOM PARTITION TRIM

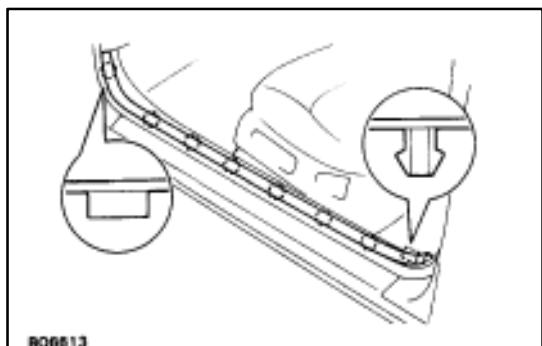


11. REMOVE FRONT SCUFF PLATE

Using a screwdriver, remove the plate.
HINT: Tape the screwdriver tip before use.

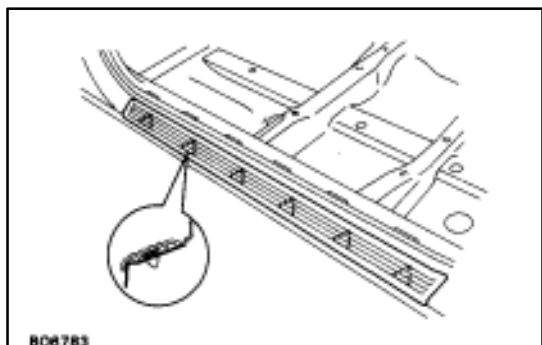

12. REMOVE OUTSIDE SCUFF PLATE


Insert a screwdriver between the retainers and the plate to pry it loose.
HINT: Tape the screwdriver tip before use.

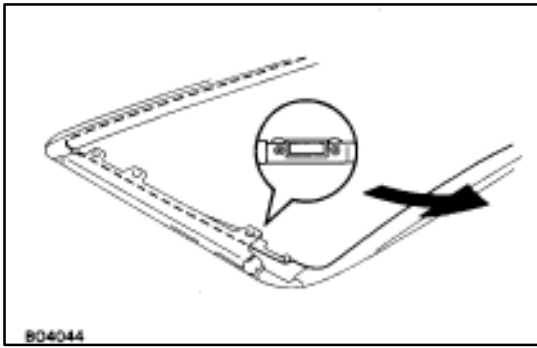


- 13. (W/ SLIDING ROOF)**
REMOVE SUN SHADE TRIM
 (See steps 1 to 10 on pages [BO-85](#) to 86)

INSTALLATION OF TRIM, ASSIST GRIP AND VISOR


(See page [BO-122](#))

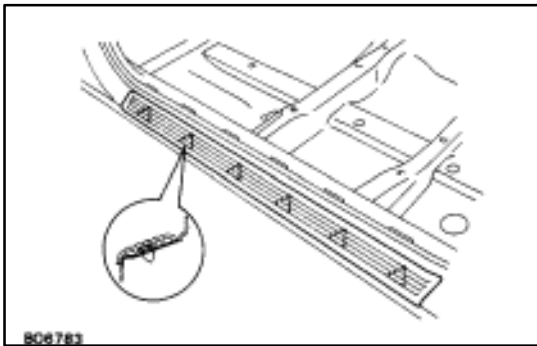


- 1. (W/ SLIDING ROOF)**
INSTALL SUN SHADE TRIM
2. INSTALL OUTSIDE SCUFF PLATE
 Place the plate on the body and install it by tapping.

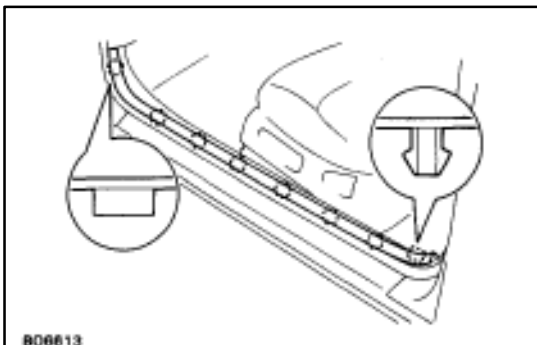


- 3. INSTALL FRONT SCUFF PLATE**
 Place the plate on the body and install it by tapping.

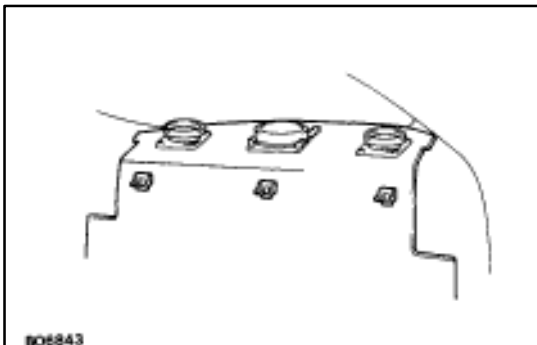

- 4. INSTALL ROOM PARTITION TRIM**
 Install the trim as shown.

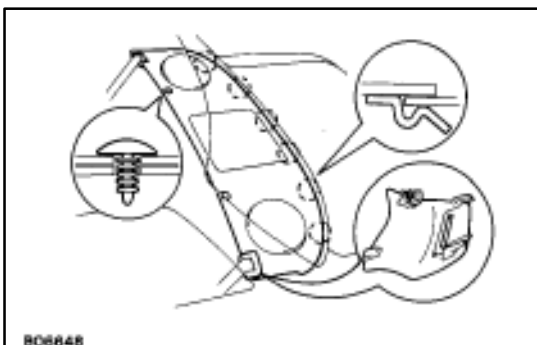


- 5. INSTALL PACKAGE TRAY TRIM**
 (a) Align the six retainers with the holes of the panel, then push the trim backward.
 (b) Install two clips.
 (c) Install the belt guide to the trim.

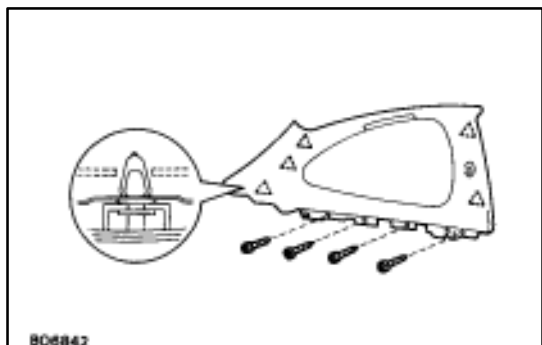


6. INSTALL ROOF SIDE INNER GARNISH

- Place the inner garnish on the quarter panel and install it by tapping it in.
- Install four screws.

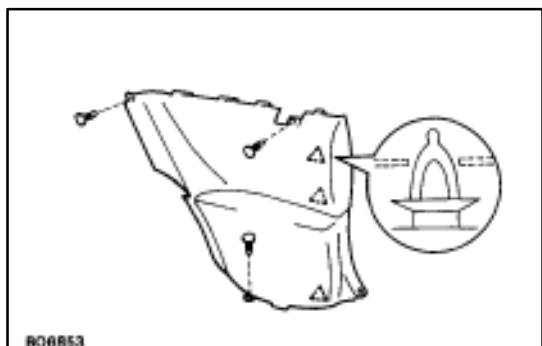

7. INSTALL QUARTER TRIM AND ASSIST GRIP

- Place the trim on the quarter panel and install it by tapping it in.

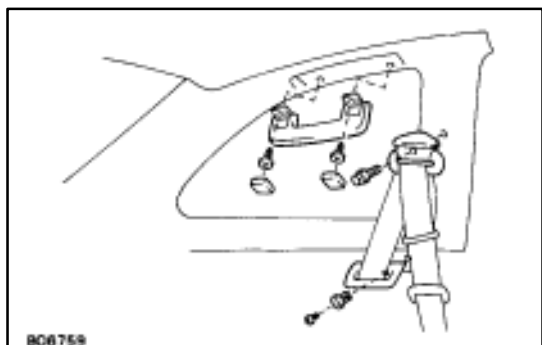


- Install the belt guide with the clip.
- Install the front seat belt anchor with the bolt.

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

- Install the assist grip with two screws and two caps.


8. INSTALL REAR SEAT CUSHION AND BACK (See page [BO-67](#))

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

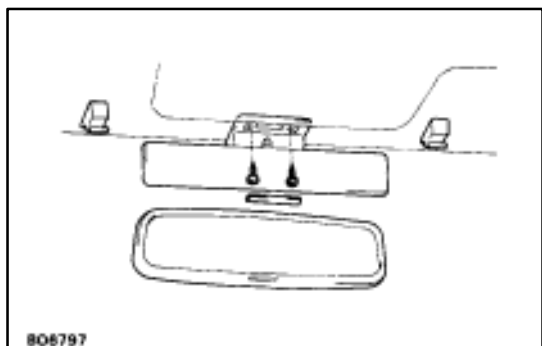


9. INSTALL CENTER VISOR

- Connect the connector.
- Install the visor with two screws and the cover.

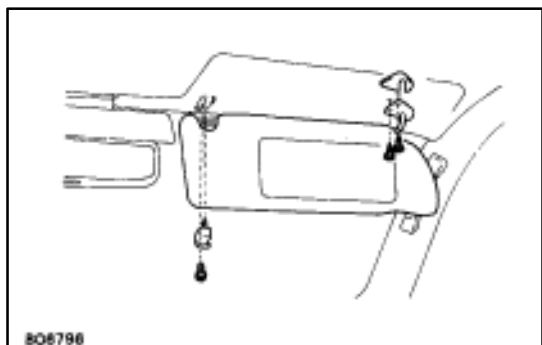


10. INSTALL SUN VISOR

- Install the holder with the screw.
- Install the sun visor with two screws and the cover.

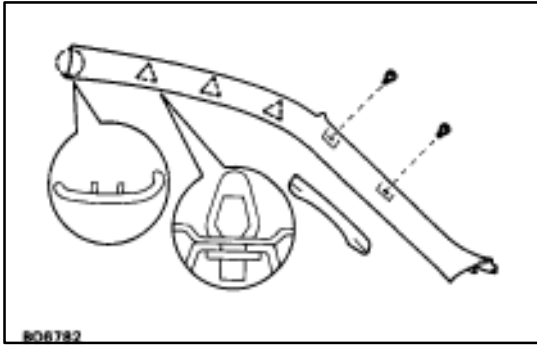**11. INSTALL FRONT PILLAR GARNISH**

- (a) Insert front side of the garnish to the pillar to install the clip.
- (b) Install the garnish by tapping.
- (c) Install two screws and the assist grip.

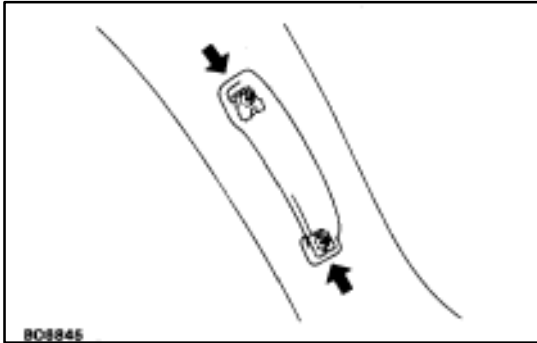**12. INSTALL ASSIST GRIP**