


LOCATION OF CONNECTORS

Location of Connectors in Engine Compartment

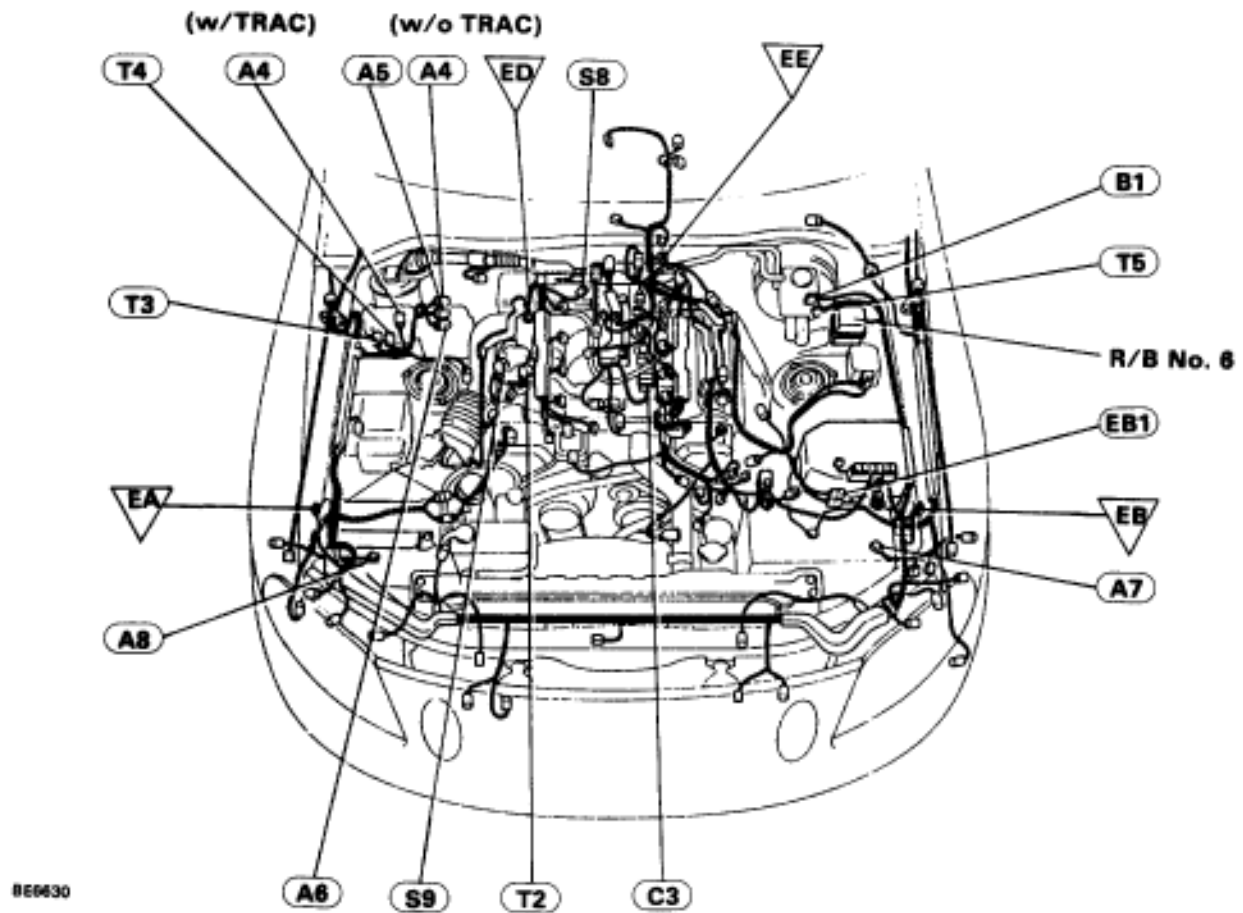

A4**ABS Actuator**

IS-6-1-B

A5**ABS Actuator**

Ig-1-1

A6**ABS Actuator**

ID-2-1

A7**ABS Speed Sensor Front LH**

Ie-2-1-T

A8**ABS Speed Sensor Front RH**

Ie-2-1-T

B1**Brake Fluid Level SW**

Ie-2-1-d

C3**Check Connector**

Iej-23-1

S8**Sub-Throttle Actuator**

Ie-6-1-D

S9**Sub-Throttle Position Sensor**

IV-4-1

T2**Throttle Position Sensor**

IV-4-1-A

T3**TRAC Brake Actuator**

Ie-6-1-E

T4**TRAC Brake Actuator**

IS-4-1-B

T5**TRAC Pump and Motor**


Ig-3-1-A

EB1

Ie-8-1-A




Ie-8-2-A

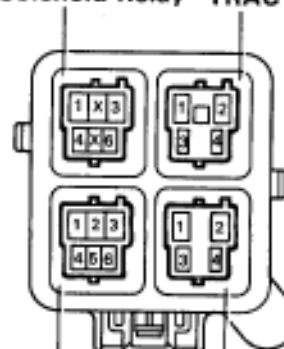R/B No. 6**TRAC Solenoid Relay TRAC Motor Relay****ABS Solenoid Relay ABS Motor Relay**

BE6143

Location of Connectors in Instrument Panel

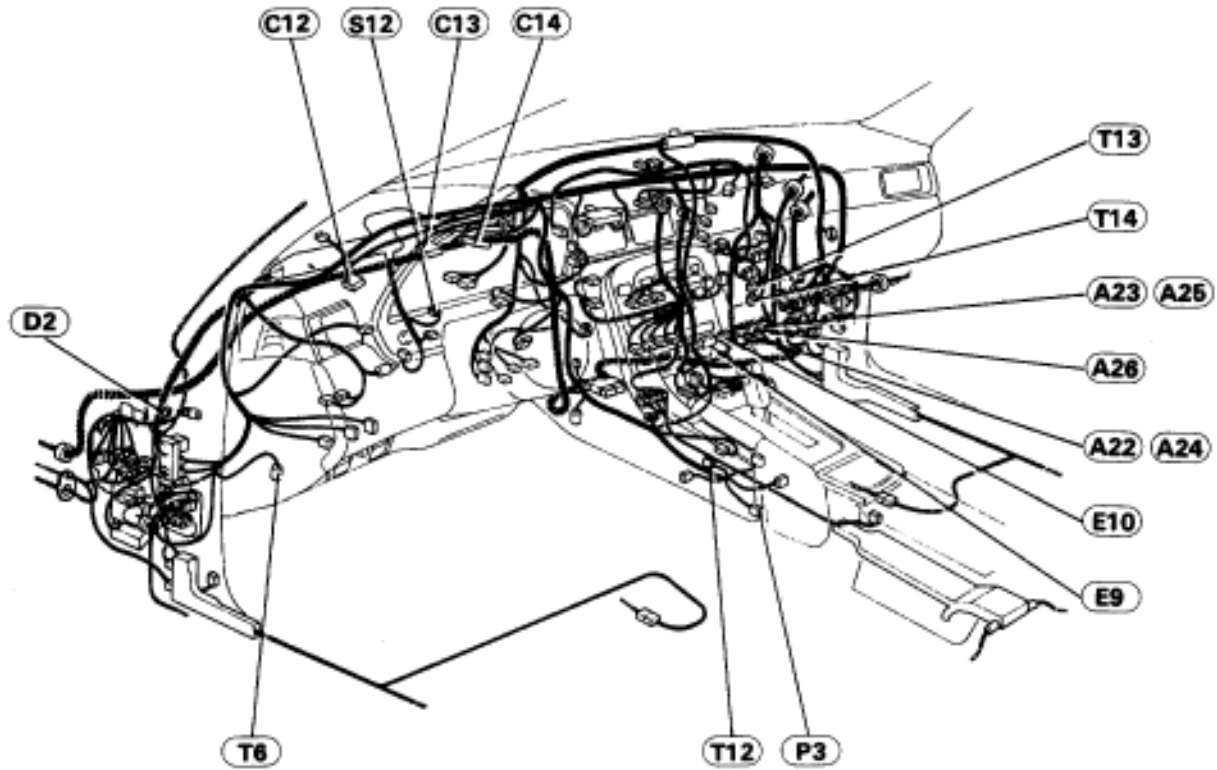


8E0631

A22
ABS ECU
(w/o TRAC)




V-12-1-B

A23
ABS ECU
(w/o TRAC)

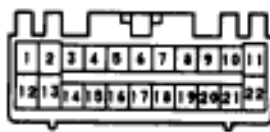


Vd-22-1

A24
ABS and TRAC
ECU

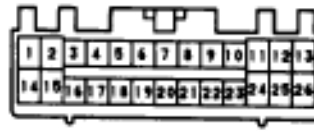


Vd-26-1

A25
ABS and TRAC
ECU

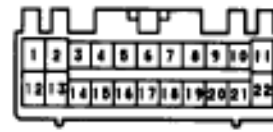

Vd-22-1

A26
ABS and TRAC
ECU

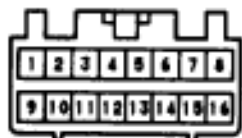

Vd-16-1

C12
ABS Warning Light
Brake Warning Light



eh-23-1

C13
ABS Warning Light



e-18-1

C14
Brake Warning Light




h-21-1

D7
Diode
(for Parking Brake)




e-2-1-1

E9
Engine and ECT ECU

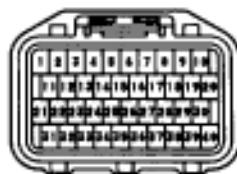

Id-40-1

E10
Engine and ECT ECU

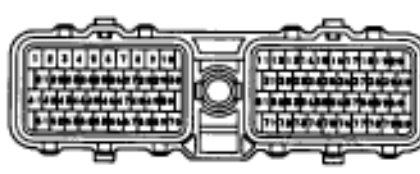


Id-80-1

P3
Parking Brake Switch



e-1-1

S12
Stop Light Switch

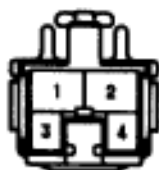


eq-4-1

T6
TDCL (Total Diagnostic
Communication Link)




S-17-1

T12
TRAC Cut Switch

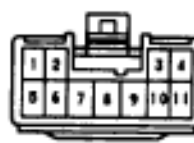


e-11-1

 T13
TRAC ECU




Vd-16-1

T14
TRAC ECU

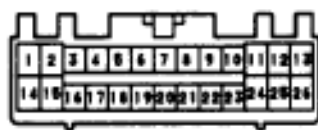

Vd-26-1


Location of Connectors in Instrument Panel

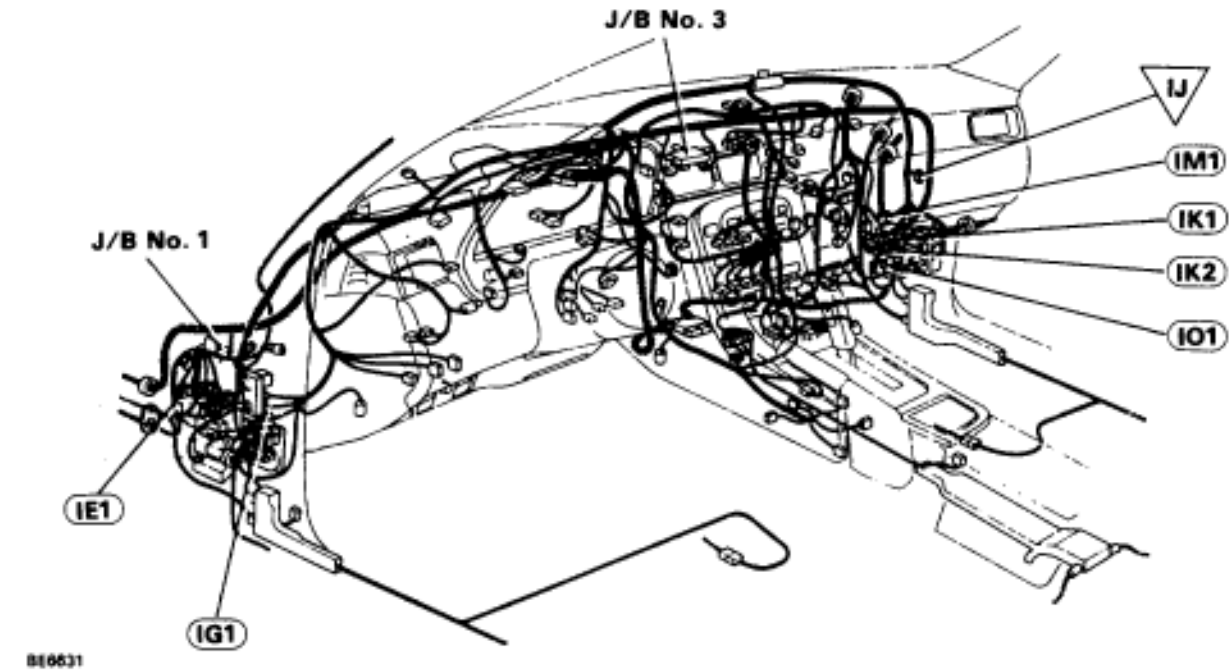

IE1



eg-19-1

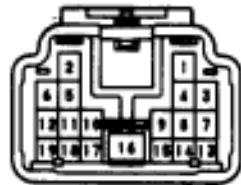


eg-19-2

IG1




eh-23-1

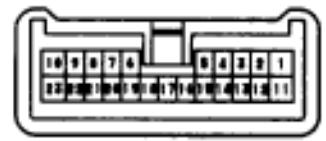


eh-23-2

IK1

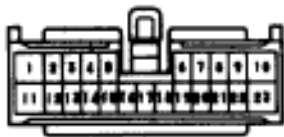


eh-23-1

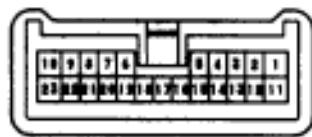

eh-23-2

IK2

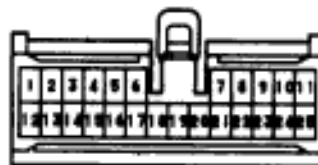

h-25-1-A




h-25-2-A

IM1



a-14-1

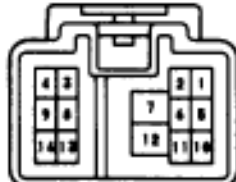


a-14-2

IO1




h-11-1-A

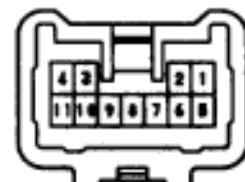

h-11-2-A


J/B No. 1

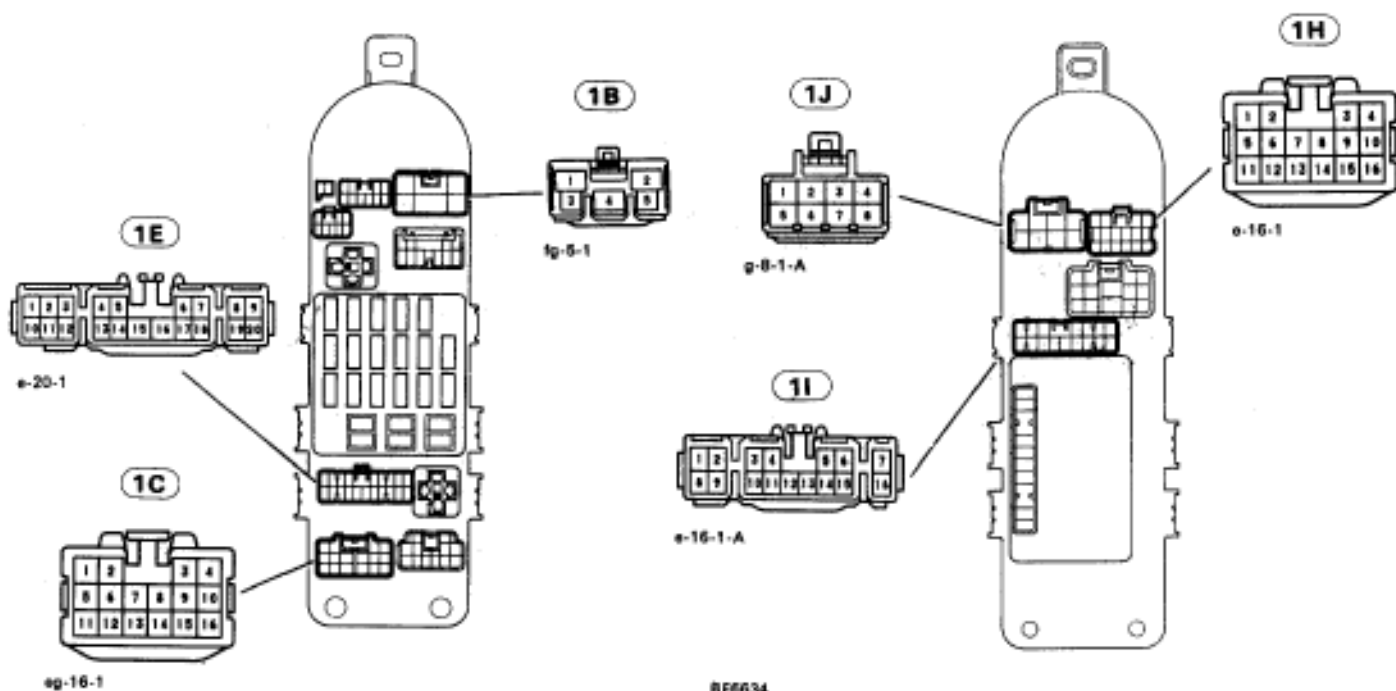

BE6634


BE6624

J/B No. 3

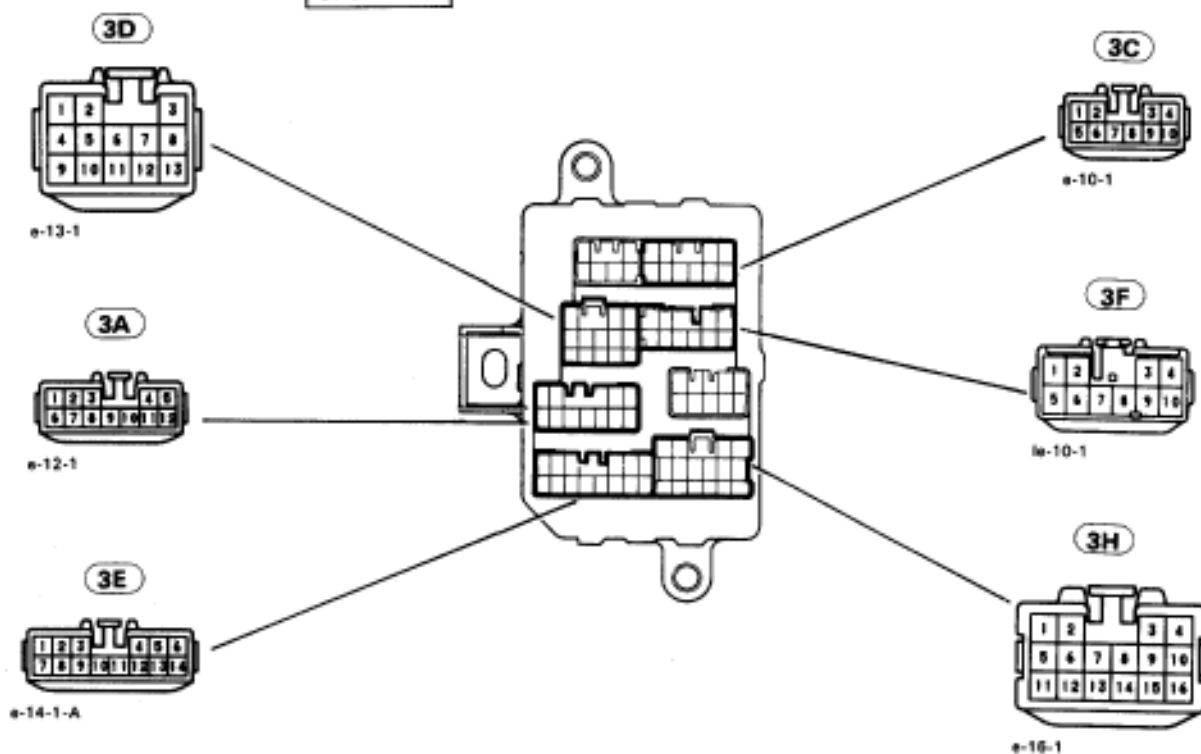

BE6635

Location of Connectors in Body

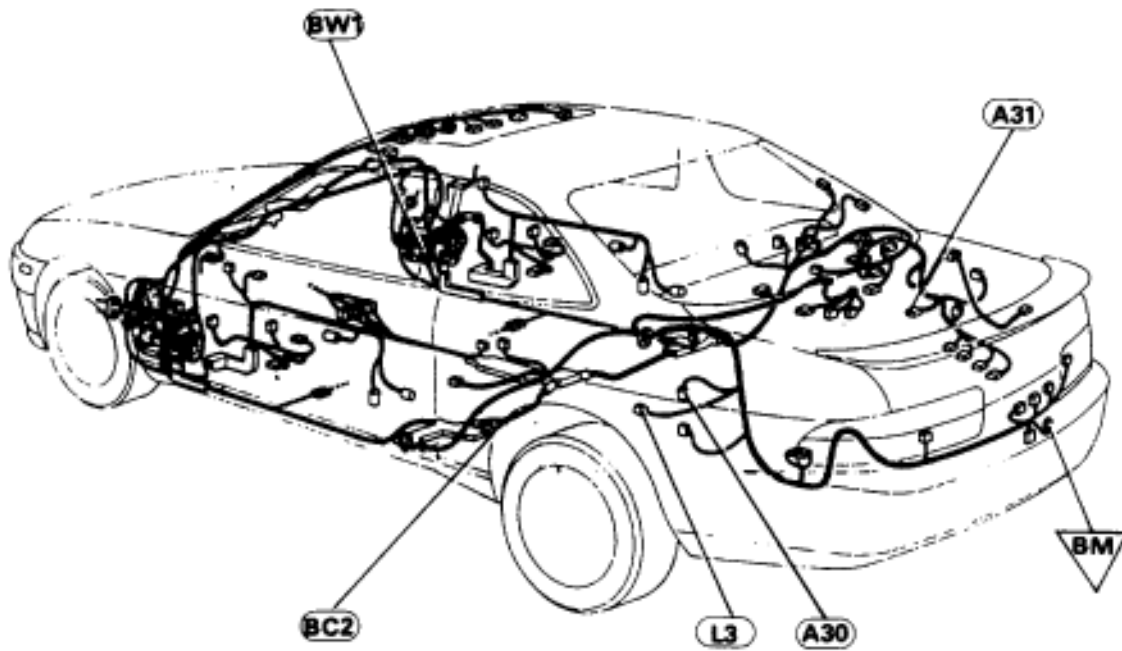

886632

A30
ABS Speed Sensor
Rear LH



le-2-2-T

A31
ABS Speed Sensor
Rear RH



le-2-2-T

L3
Light Failure Sensor



e-12-1

BW1



e-8-1




e-8-2

BC2



eg-12-1

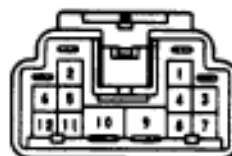

eg-12-2