



## SPEED SENSOR REMOVAL AND INSTALLATION OF SPEED SENSOR

Remove and install the parts as shown.

Front

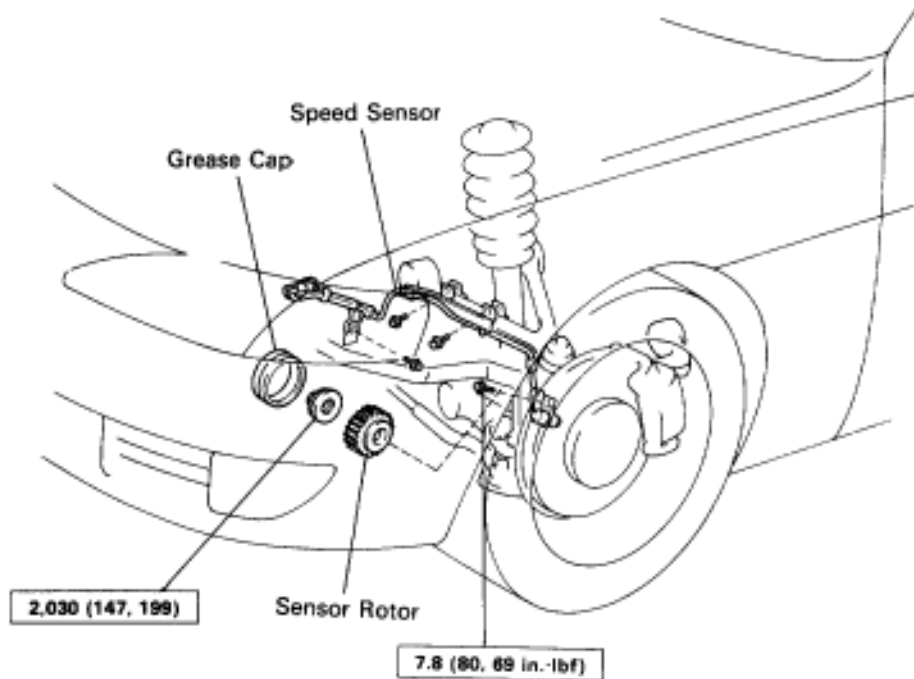

Rear

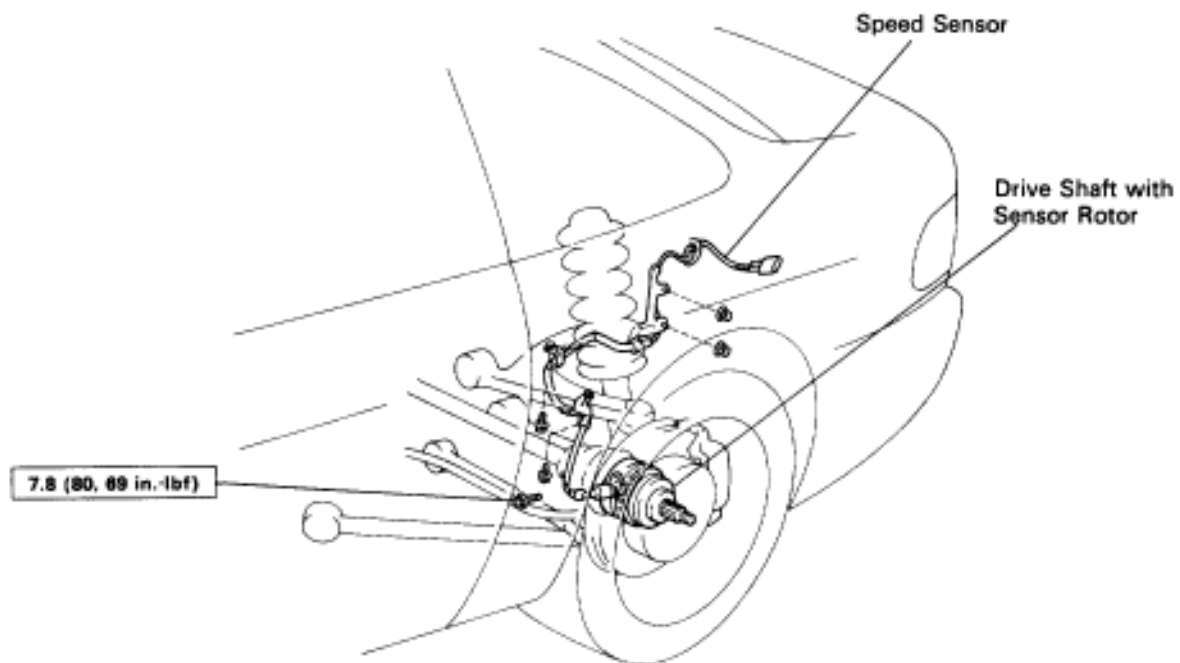

N·m (kgf-cm, ft-lbf) : Specified torque

N00851  
N00852