

STANDARD VALUE OF ECU TERMINALS (w/o TRAC)

Symbols (Terminals No.)	Wiring color	STD Voltage (V)	Condition
BAT (A23-22) – GND (A23-13)	R ↔ W-B	10-14	Always
IG (A23-11) – GND (A23-2)	B-R ↔ W-B	10-14	IG switch ON
SR (A22-5) – R- (A22-4)	R-Y ↔ V-Y	10-14	IG switch ON, ABS warning light OFF
MR (A22-11) – R- (A22-4)	Y-L ↔ V-Y	Below 1.0	IG switch ON
SFR (A23-1) – GND (A23-2)	Y ↔ W-B	10-14	IG switch ON, ABS warning light OFF
SFL (A22-6) – GND (A23-13)	B-Y ↔ W-B	10-14	IG switch ON, ABS warning light OFF
SRR (A22-12) – GND (A23-13)	P ↔ W-B	10-14	IG switch ON, ABS warning light OFF
AST (A22-8) – GND (A23-13)	Y-G ↔ W-B	10-14	IG switch ON, ABS warning light OFF
WA (A23-10) – GND (A23-13)	L ↔ W-B	Below 1.0	IG switch ON, ABS warning light ON
		10-14	IG switch ON, ABS warning light OFF
PKB (A23-16) – GND (A23-13)	R-W ↔ W-B	Below 1.0	IG switch ON, PKB switch ON
		10-14	IG switch ON, PKB switch OFF
STP (A23-7) – GND (A23-2)	G-W ↔ W-B	Below 1.0	Stop light switch OFF
		10-14	Stop light switch ON
DG (A23-21) – GND (A23-13)	V-W ↔ W-B	10-14	IG switch ON, ABS warning light OFF
Tc (A23-17) – GND (A23-13)	P-B ↔ W-B	10-14	IG switch ON
Ts (A23-6) – GND (A23-2)	V ↔ W-B	10-14	IG switch ON
FR+ (A22-1) – FR- (A22-7)	O-L ↔ W-L	AC generation	IG switch ON Slowly turn right front wheel
FL+ (A22-3) – FL- (A22-10)	W ↔ B	AC generation	IG switch ON Slowly turn left front wheel
RR+ (A23-19) – RR- (A23-20)	L-G ↔ L-Y	AC generation	IG switch ON Slowly turn right rear wheel
RL+ (A23-14) – RL- (A23-3)	W ↔ O	AC generation	IG switch ON Slowly turn left rear wheel