


## TERMINALS OF ECU (w/ TRAC)

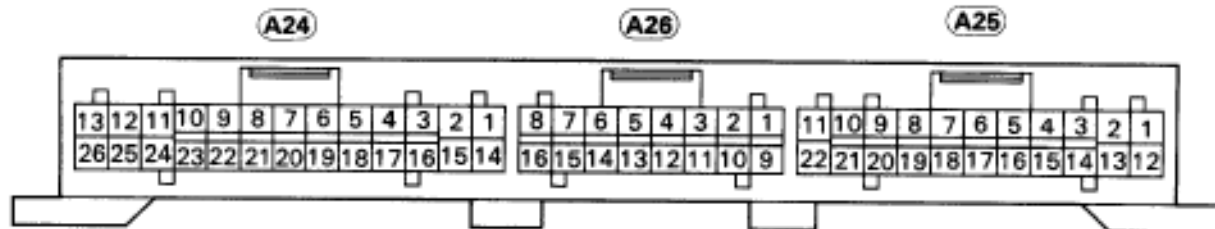

BR5387

Terminal No.	Symbol	Connection	Terminal No.	Symbol	Connection
A24 – 1	TSR	TRAC solenoid relay	A26 – 7	THFA	TRAC ECU
2	SMC	M/C cut solenoid	8	BRC	TRAC ECU
3	—	—	9	—	—
4	FR–	Right front speed sensor	10	P	Neutral start switch
5	FL+	Left front speed sensor	11	BRFA	TRAC ECU
6	—	—	12	BRP	TRAC ECU
7	MT	ABS motor relay monitor	13	RRO	TRAC ECU
8	AST	ABS solenoid relay monitor	14	TRCO	TRAC ECU
9	TMR	TRAC motor relay	15	FRO	TRAC ECU
10	PR	Accumulator pressure switch	16	—	—
11	—	—	A25 – 1	SFR	Right front solenoid
12	SAC	Accumulator cut solenoid	2	GND	Ground
13	SFL	Left front solenoid	3	RR–	Right rear speed sensor
14	—	—	4	RL +	Left rear speed sensor
15	SRC	Reservoir cut solenoid	5	RSS	Sealed wiring harness
16	FSS	Sealed wiring harness	6	LBL	Brake fluid level warning switch
17	FR+	Right front speed sensor	7	ABSO	TRAC ECU
18	FL–	Left front speed sensor	8	ALT	Alternator
19	VC	Accumulator pressure switch	9	WA	ABS warning light
20	E2	Pressure switch ground	10	STP	Stop light switch
21	—	—	11	—	—
22	SR	ABS solenoid relay	12	SRL	Left rear solenoid
23	MTT	Trac pump motor relay monitor	13	GND	Ground
24	IG	Iginition switch	14	RR+	Right rear speed sensor
25	R–	Relay ground	15	RL–	Left rear speed sensor
26	SRR	Right rear solenoid	16	MR	ABS motor relay
A26 – 1	Ts	Check connector	17	PKB	Parking brake switch
2	—	—	18	—	—
3	Tc	TDCL	19	—	—
4	RLO	TRAC ECU	20	DG	TDCL
5	N	Neutral start switch	21	BAT	Battery
6	FLO	TRAC ECU	22	GND	Ground