


TERMINALS OF ECU (w/o TRAC)

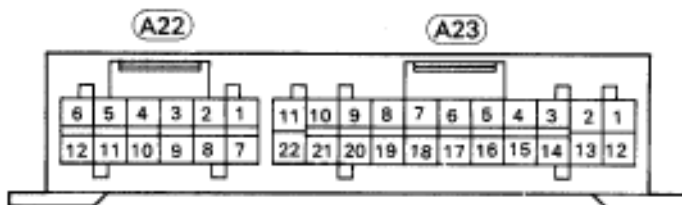

BR5385

Terminal No.	Symbol	Connection	Terminal No.	Symbol	Connection
A22 – 1	FR+	Right front speed sensor	A23 – 1	SFR	Right front solenoid
2	FSS	Sealed wiring harness	2	GND	Ground
3	FL+	Left front speed sensor	3	RL–	Left rear speed sensor
4	R–	Relay ground	4	—	—
5	SR	ABS solenoid relay	5	—	—
6	SFL	Left front solenoid	6	Ts	Check connector
7	FR–	Right front speed sensor	7	STP	Stop light switch
8	AST	ABS solenoid relay monitor	8	RSS	Sealed wiring harness
9	MT	ABS motor relay monitor	9	—	—
10	FL–	Left rear speed sensor	10	WA	ABS warning light
11	MR	ABS motor relay	11	IG	Ignition switch
12	SRR	Rear solenoid	12	—	—
			13	GND	Ground
			14	RL+	Left rear speed sensor
			15	—	—
			16	PKB	Parking brake switch
			17	Tc	TDCL
			18	—	—
			19	RR+	Right rear speed sensor
			20	RR–	Right rear speed sensor
			21	DG	TDCL
			22	BAT	Battery