


## Ts Terminal Circuit

### — CIRCUIT DESCRIPTION —


The sensor check circuit detects abnormalities in the speed sensor signal which can not be detected with the diagnostic code check.

Connecting terminals Ts and E1 of the check connector in the engine compartment starts the check.


### — DIAGNOSTIC CHART —

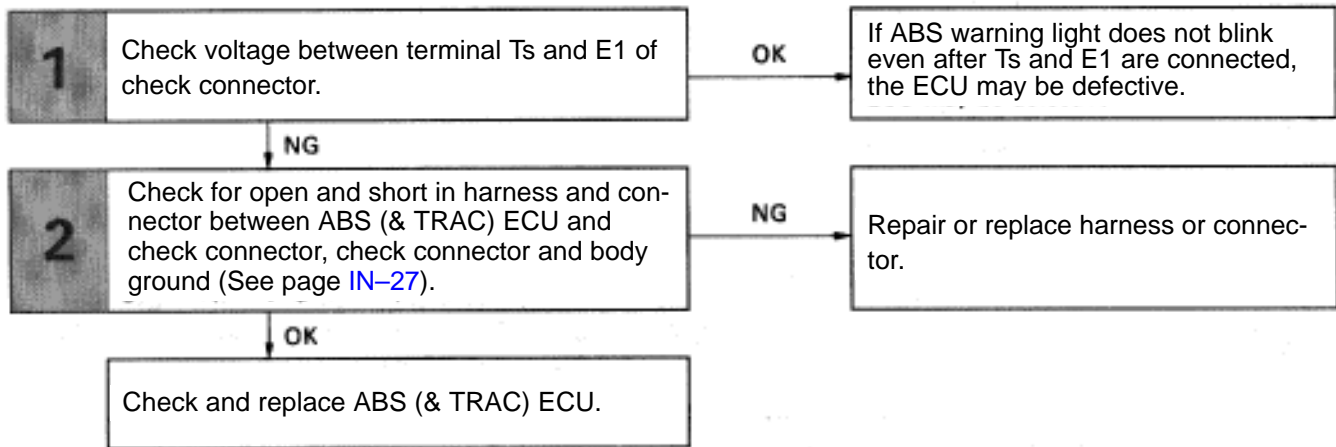

### WIRING DIAGRAM

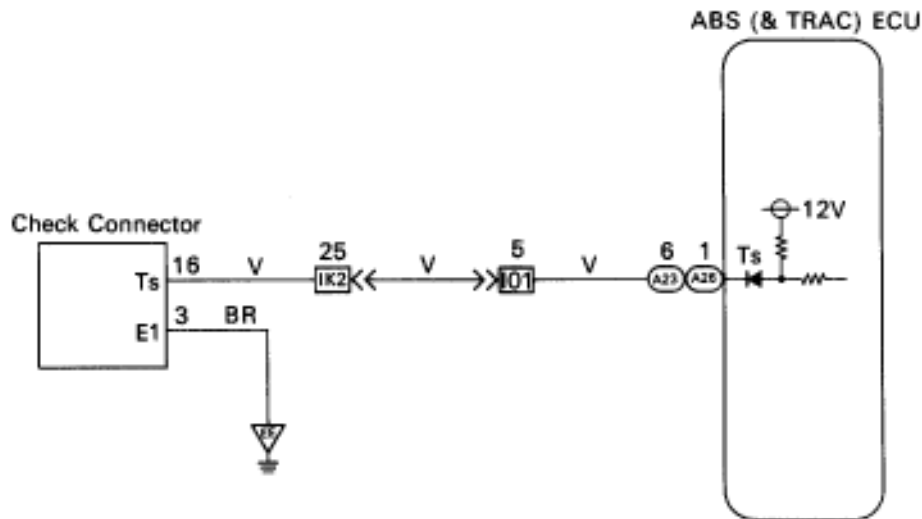

## INSPECTION PROCEDURE

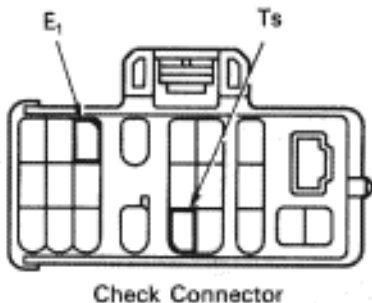**1****Check voltage between terminals Ts and E1 of check connector.**

lej-23-1

**C**

Turn ignition switch ON.

**C**

Measure voltage between terminals Ts and E1 of check connector.

**OK****Voltage: 10 – 14V****NG****OK**

If ABS warning light does not blink even after Ts and E1 are connected, the ECU may be defective.

**2****Check for open and short in harness and connector between ABS (& TRAC) ECU and check connector, check connector and body ground (See page [IN-27](#)).****OK****NG****Repair or replace harness or connector.****Check and replace ABS (& TRAC) ECU.**