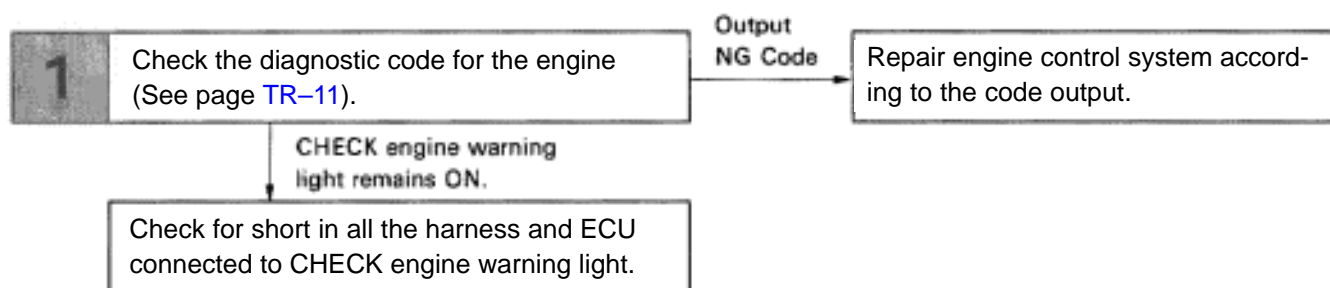


Diag. Code 51**Engine Malfunction Detection Circuit****— CIRCUIT DESCRIPTION —**

If trouble (trouble which causes the CHECK engine warning light to light up) occurs in the engine control system, this circuit senses the trouble and prohibits TRAC control.

Code No.	Diagnostic Code Detecting Condition	Trouble Area
51	Either of the following (1) or (2) continues for more than 1 sec.: (1): Engine speed: 500 rpm or more (2): Voltage of TRAC ECU terminal TR5: 0 V	<ul style="list-style-type: none"> •Short in TR5 circuit •Engine & ECT system •TRAC ECU

— DIAGNOSTIC CHART —**WIRING DIAGRAM**