


LOCATION OF CONNECTORS

Location of Connectors in Engine Compartment

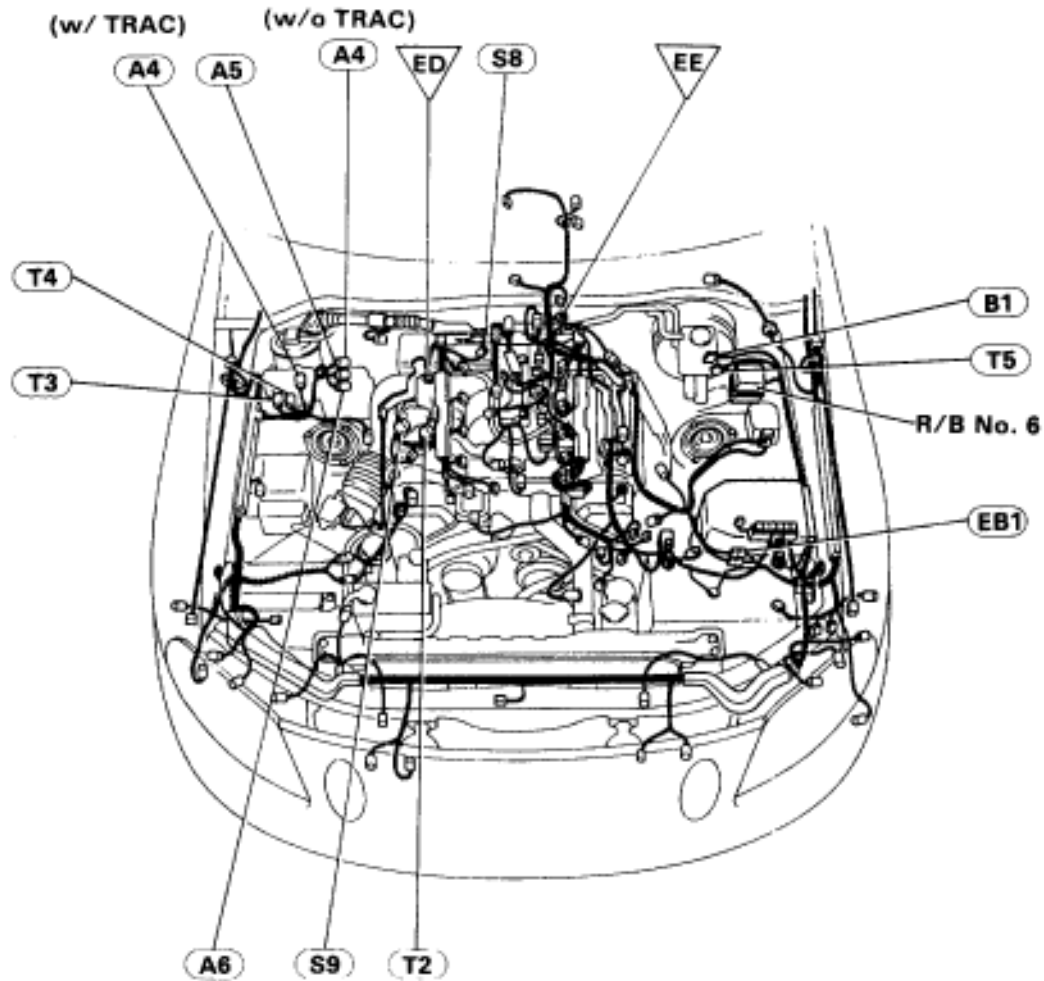

BE0630

A4
ABS Actuator



IS-6-1-B

A5
ABS Actuator



Iq-1-1

A6
ABS Actuator



ID-2-1

B1
Brake Fluid Level SW



Ie-2-1-d

S8
Sub-Throttle Actuator



Ia-6-1-D

S9
Sub-Throttle Position Sensor



IV-4-1

T2
Throttle Position Sensor



IV-4-1-A

T3
TRAC Brake Actuator



Ia-6-1-E

T4
TRAC Brake Actuator



IS-4-1-B

T5
TRAC Pump and Motor



Iq-3-1-A



Ia-8-1-A

EB1




Ia-8-2-A

R/B No. 6

TRAC Solenoid Relay

TRAC Motor Relay

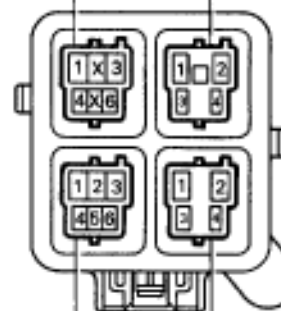


ABS Motor Relay


ABS Solenoid Relay

BE6143


Location of Connectors in Instrument Panel

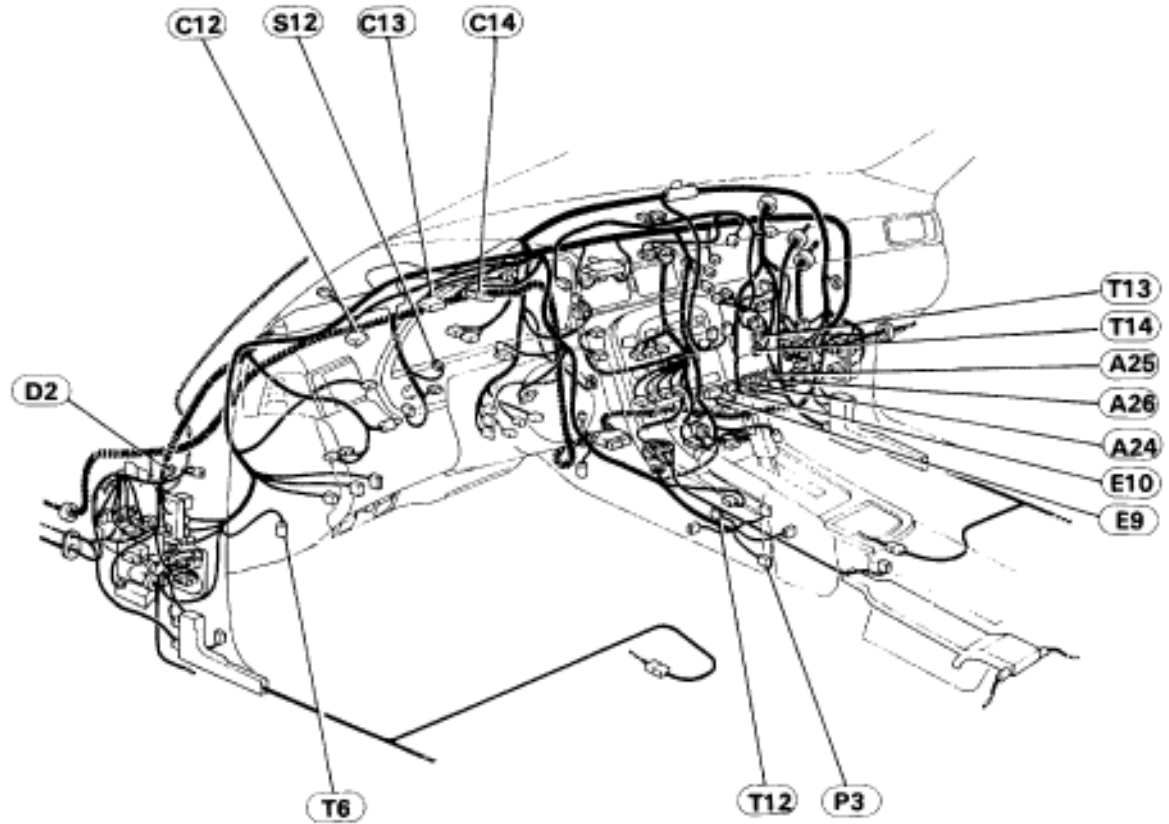

BE6631

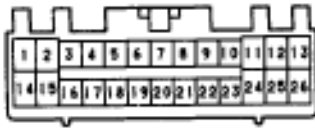A24**ABS and TRAC ECU**

Vd-26-1

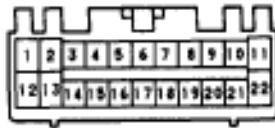A25**ABS and TRAC ECU**

 
Vd-22-1

A26**ABS and TRAC ECU**


Vd-16-1

C12**Brake Warning Light
TRAC Indicator Light
TRAC OFF Indicator Light
Check Engine Warning Light**

eh-23-1

C13**Check Engine Warning Light
TRAC OFF Indicator Light
TRAC Indicator Light**


e-18-1

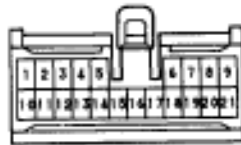C14**Brake warning Light**

h-21-1

D7**Diode
(for Parking Brake)**

e-2-1-1

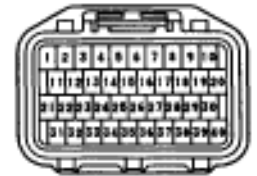E9**Engine and ECT ECU**


Id-40-1

E10**Engine and ECT ECU**


Id-80-1

P3**Parking Brake Switch**


e-1-1

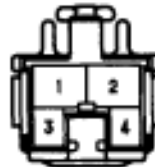S12**Stop Light Switch**


eg-4-1

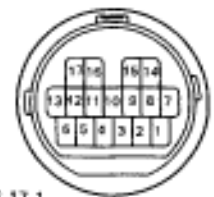T6**TDCL (Total Diagnostic
Communication Link)**


S-17-1

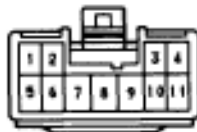T12**TRAC Cut Switch**

e-11-1

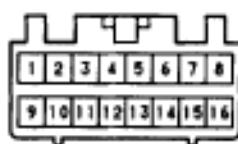
T13**TRAC ECU**

Vd-18-1

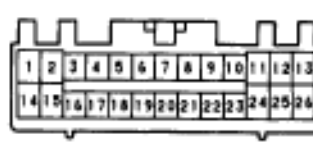T14**TRAC ECU**

Vd-26-1

Location of Connectors in Instrument Panel

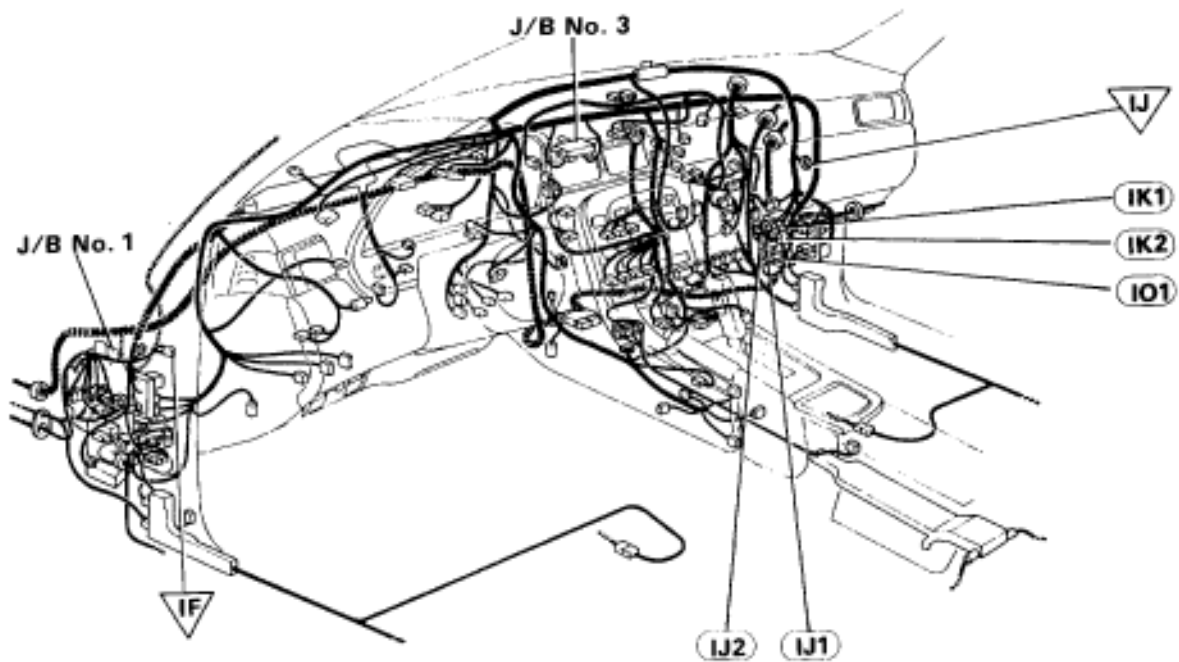


BE6631

IJ1




e-14-1

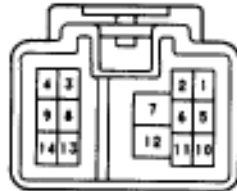


e-14-2

IJ2

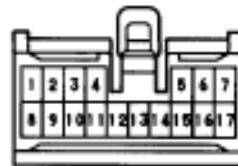

h-17-1

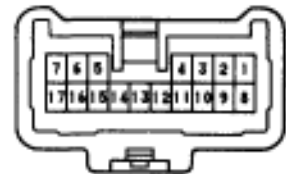


h-17-2

IK1




eh-23-1

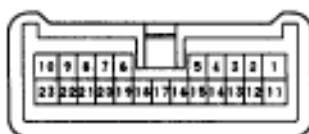


eh-23-2

IK2

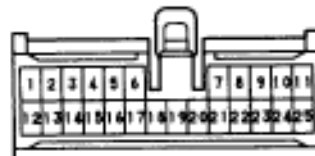

h-25-1-A

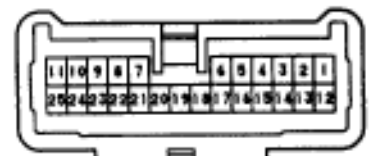

h-25-2-A

IO1





h-11-1-A




h-11-2-A

J/B No. 1

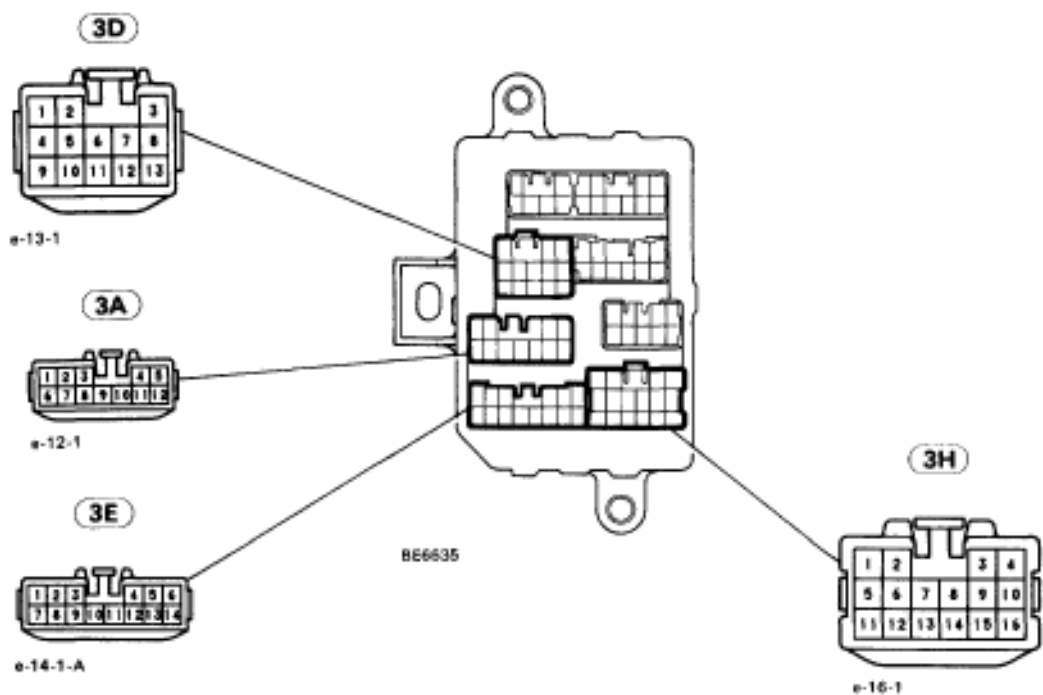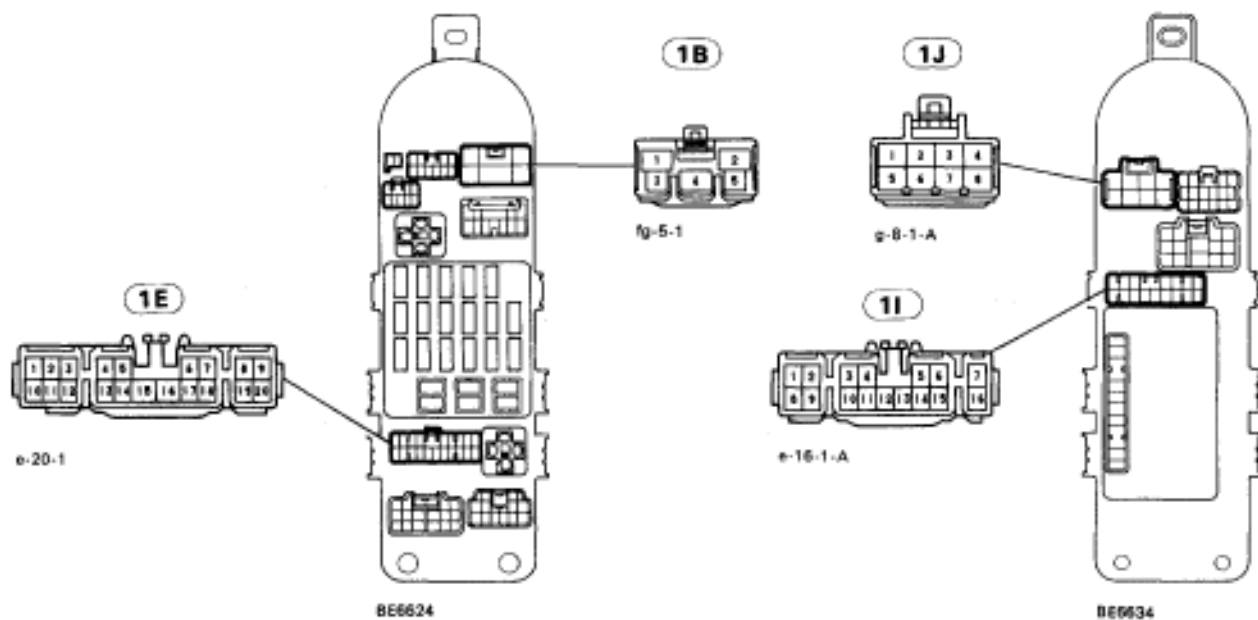

Location of Connectors in Body

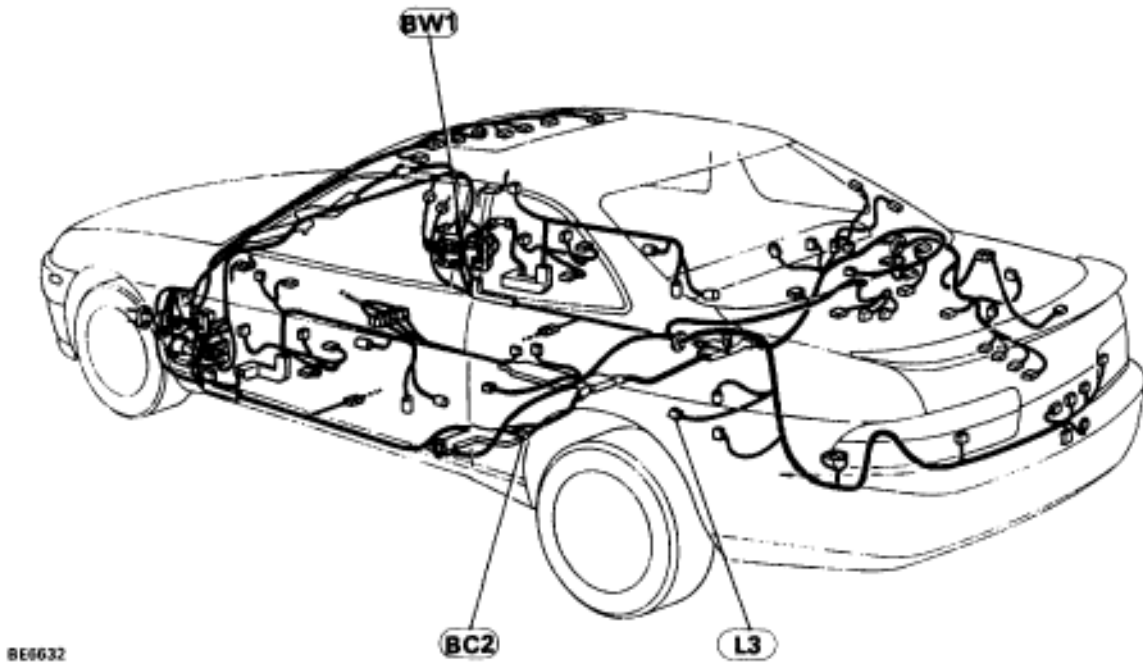

L3**Light Failure Sensor**

e-12-1

BW1


e-8-1



e-8-2

BC2

eg-12-1

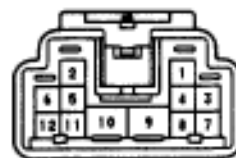

eg-12-2