

PROBLEM SYMPTOMS CHART

If a normal code is displayed during the diagnostic code check but the problem still occurs, check the circuits for each problem symptom in the order given in the table below and proceed to the page for troubleshooting.

Symptoms	Inspection Circuit	See page
TRAC does not operate.	1. Check the diagnostic code, reconfirming that the normal code is output. 2. IG Power Source Circuit. 3. Check the hydraulic circuit for leakage. 4. Speed Sensor Circuit. If 1. ~ 4. are all normal and the problem is still occurring, replace the TRAC ECU.	BR-150 BR-176 BR-204 BR-174
TRAC indicator light abnormal.	1. TRAC Indicator Light Circuit. 2. TRAC ECU.	BR-200
TRAC OFF indicator light abnormal.	1. TRAC OFF Indicator Light Circuit. 2. TRAC ECU.	BR-198
Diagnostic code check cannot be performed.	1. TRAC Indicator Light Circuit. 2. Tc terminal Circuit. 3. TRAC ECU.	BR-200 BR-202