



## TERMINALS OF ECU

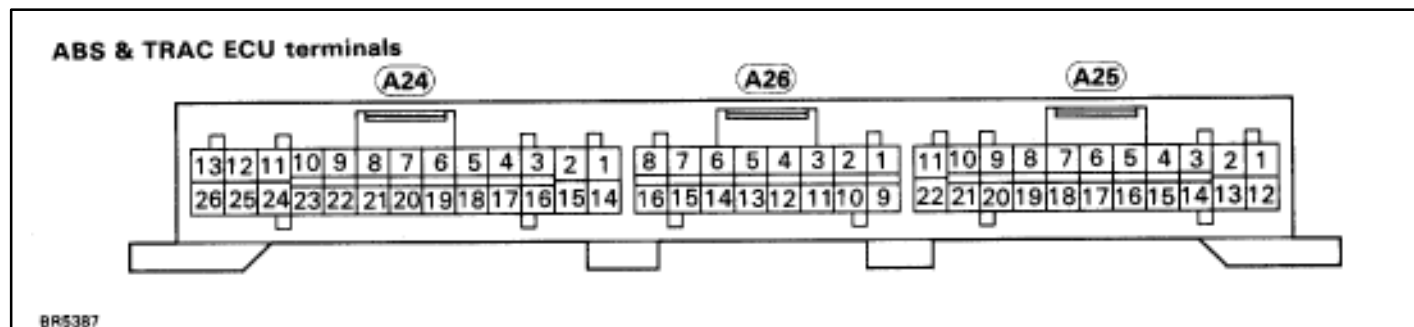

Terminal No.	Symbol	Connection	Terminal No.	Symbol	Connection
A24 – 1	TSR	TRAC solenoid relay	A26 – 2	——	
2	SMC	M/C cut solenoid	3	Tc	TDCL
3	——		4	RLO	TRAC ECU
4	FR –	Front right speed sensor	5	N	Neutral start switch
5	FL +	Front left speed sensor	6	FLO	TRAC ECU
6	——		7	THFA	TRAC ECU
7	MT	ABS motor relay monitor	8	BRC	TRAC ECU
8	AST	ABS solenoid relay monitor	9	——	
9	TMR	TRAC motor relay	10	P	Neutral start switch
10	PR	Accumulator pressure switch	11	BRFA	TRAC ECU
11	——		12	BRP	TRAC ECU
12	SAC	Accumulator cut solenoid	13	RRO	TRAC ECU
13	SFL	Left front solenoid	14	TRCO	TRAC ECU
14	——		15	FRO	TRAC ECU
15	SRC	Reservoir cut solenoid	16	——	
16	FSS	Sealed wiring harness	A25 – 1	SFR	Right front solenoid
17	FR +	Right front speed sensor	2	GND	Ground
18	FL –	Left front speed sensor	3	RR –	Right rear speed sensor
19	VC	Accumulator pressure switch	4	RF +	Left rear speed sensor
20	E2	Pressure switch ground	5	RSS	Sealed wiring harness
21	——		6	LBL	Brake fluid level warning switch
22	SR	ABS solenoid relay	7	ABSO	TRAC ECU
23	MTT	Trac pump motor relay monitor	8	ALT	Alternator
24	IG	Iginition switch	9	WA	ABS warning light
25	R –	Relay ground	10	STP	Stop light switch
26	SRR	Right rear solenoid	11	——	
A26 – 1	Ts	Check connector	12	SRL	Left rear solenoid

## TRAC ECU terminals

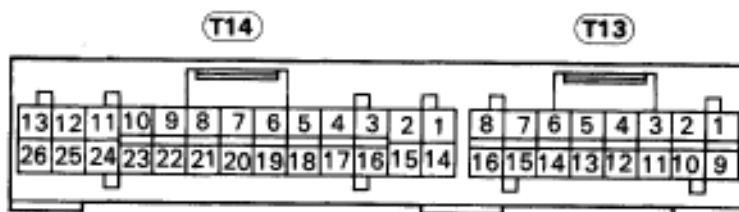

BR5386

Terminal No.	Symbol	Connection	Terminal No.	Symbol	Connection
A25 – 13	GND	Ground	T14 – 18	——	
14	RR +	Right rear speed sensor	19	VSH	Engine & ECT ECU
15	RL –	Left rear speed sensor	20	E1	Ground
16	MR	ABS motor relay	21	TR2	Engine & ECT ECU
17	PKB	Parking brake switch	22	IDL2	Sub-throttle idle switch
18	——		23	BRP	ABS & TRAC ECU
19	——		24	B	Sub-throttle actuator
20	DG	TDCL	25	$\bar{B}$	Sub-throttle actuator
21	BAT	Battery	26	BCM	Sub-throttle actuator
22	GND	Ground	T13 – 1	BRC	ABS & TRAC ECU
T14 – 1	PKB	Parking brake switch	2	STP	Stop light switch
2	IG	Ignition switch	3	FLO	ABS & TRAC ECU
3	——		4	BRFA	ABS & TRAC ECU
4	TRCO	ABS & TRAC ECU	5	RLO	ABS & TRAC ECU
5	THFA	ABS & TRAC ECU	6	Tc	TDCL
6	NEO	Engine & ECT ECU	7	P	Neutral start switch
7	——		8	BAT	Battery
8	VTH	Engine & ECT ECU	9	——	
9	——		10	FRO	ABS & TRAC ECU
10	IDL1	Main throttle idle switch	11	IND	TRAC indicator light
11	A	Sub-throttle actuator	12	RRO	ABS & TRAC ECU
12	$\bar{A}$	Sub-throttle actuator	13	CSW	TRAC cut switch
13	ACM	Sub-throttle actuator	14	WT	TRAC OFF indicator
14	GND	Ground	15	ABSO	ABS & TRAC ECU
15	BM	Battery	16	N	Neutral start switch
16	TR5	Engine & ECT ECU			
17	——				