

You will find the troubles easier using the table well shown below. In this table, each number shows the priority of causes in troubles. Check each part in order. If necessary, replace these parts.

	Trouble	Part Name	See page
Low pedal or spongy pedal	1	Brake system (Fluid leaks)	-
Brake drag	2	Brake system (Air in)	-
Brake pull	3	Brake pads (Worn)	BR-19, 27
Hard pedal but brake inefficient	4	Piston seals (Worn or damaged)	BR-17, 27
Noise from brakes	1	Brake pedal (Freeplay minimal)	BR-5
	2	Master cylinder (Faulty)	BR-10
	3	Parking brake (Shoe clearance out of adjustment)	BR-41
	4	Parking brake (Lever travel out of adjustment)	BR-9
	5	Parking brake wire (Sticking)	-
	6	Booster push rod (Out of adjustment)	BR-17
	7	Tension or return spring (Faulty)	BR-35
	8	Pad (Cracked or distorted)	BR-19, 27
	9	Piston (Stuck)	BR-19, 27
	10	Pad (Oily)	BR-19, 27
	11	Piston (Frozen)	BR-19, 27
	12	Booster system (Vacuum leaks)	BR-6
	13	Pad support plate (Loose)	BR-19, 27
	14	Installation bolt (Loose)	BR-19, 27
	15	Sliding pin (Worn)	BR-19, 27
	16	Rotor (Scored)	BR-19, 27
	17	Pad (Dirty)	BR-19, 27
	18	Pad (Hardened)	BR-19, 27
	19	Anti-squeal shim (Damaged)	BR-19, 27
	20	Hold-down spring (Damaged)	BR-35