


## ENGINE SPEED SENSOR COMPONENTS FOR REMOVAL AND INSTALLATION

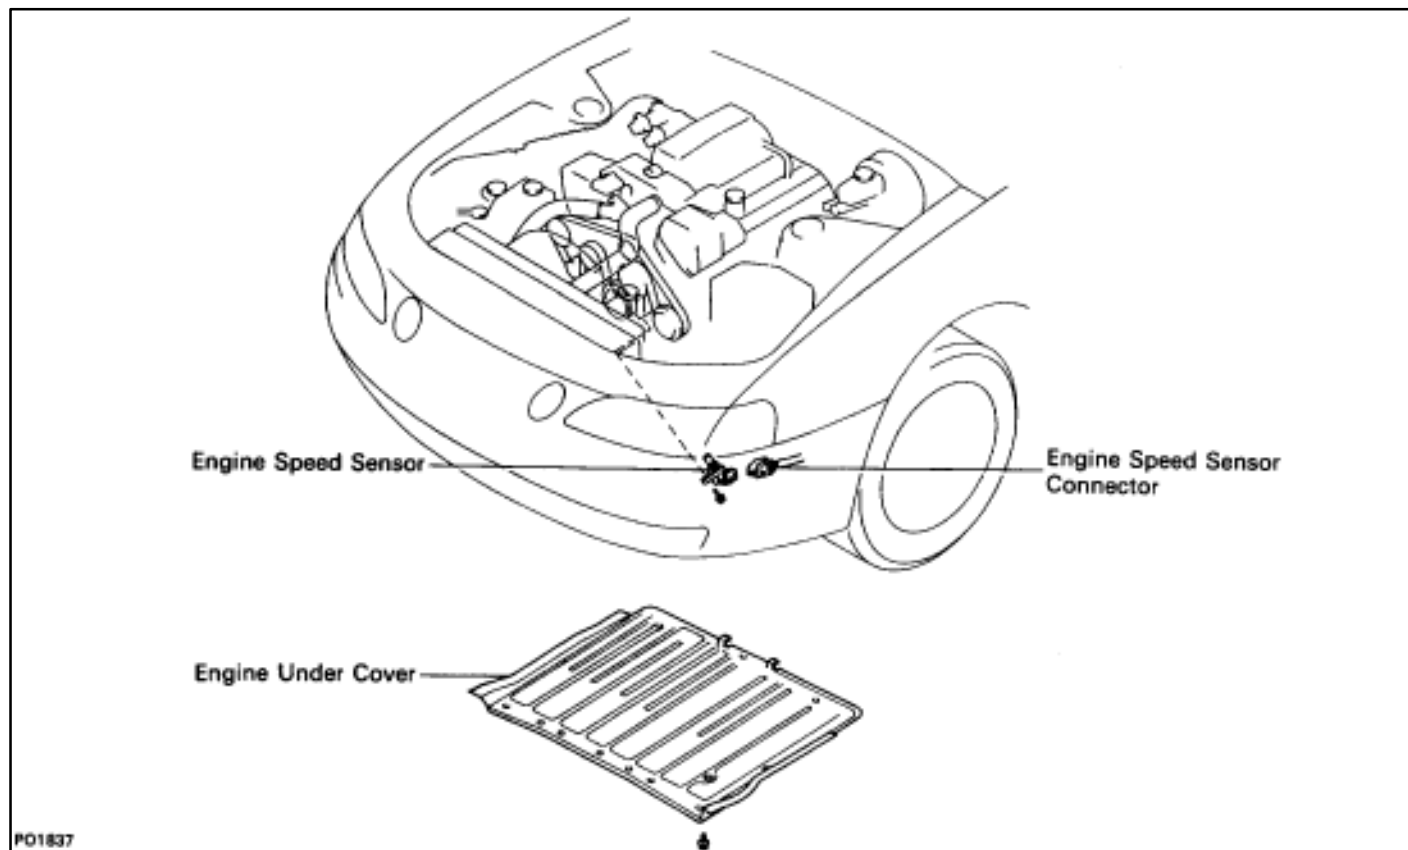


### REMOVAL OF ENGINE SPEED SENSOR

1. DISCONNECT CABLE FROM NEGATIVE TERMINAL OF BATTERY

**CAUTION:** Work must be started after approx. 20 seconds or longer from the time the ignition switch is turned to the "LOCK" position and the negative (-) terminal cable is disconnected from the battery.

2. REMOVE ENGINE UNDER COVER
3. DISCONNECT ENGINE SPEED SENSOR CONNECTOR
4. REMOVE ENGINE SPEED SENSOR

Remove the bolt and engine speed sensor.

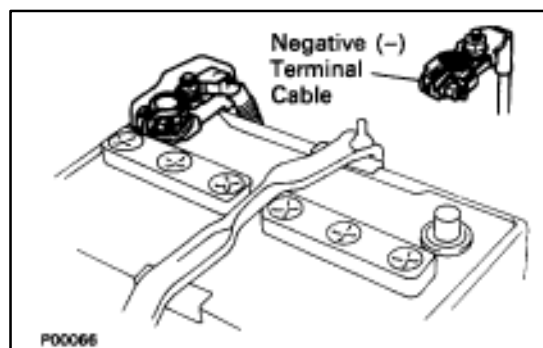

### INSTALLATION OF ENGINE SPEED SENSOR

1. INSTALL ENGINE SPEED SENSOR  
Torque: 6.4 N·m (65 kgf·cm, 56 in·lbf)
2. CONNECT ENGINE SPEED SENSOR CONNECTOR
3. INSTALL ENGINE UNDER COVER
4. CONNECT CABLE TO NEGATIVE TERMINAL OF BATTERY

