


## SYSTEM CIRCUIT

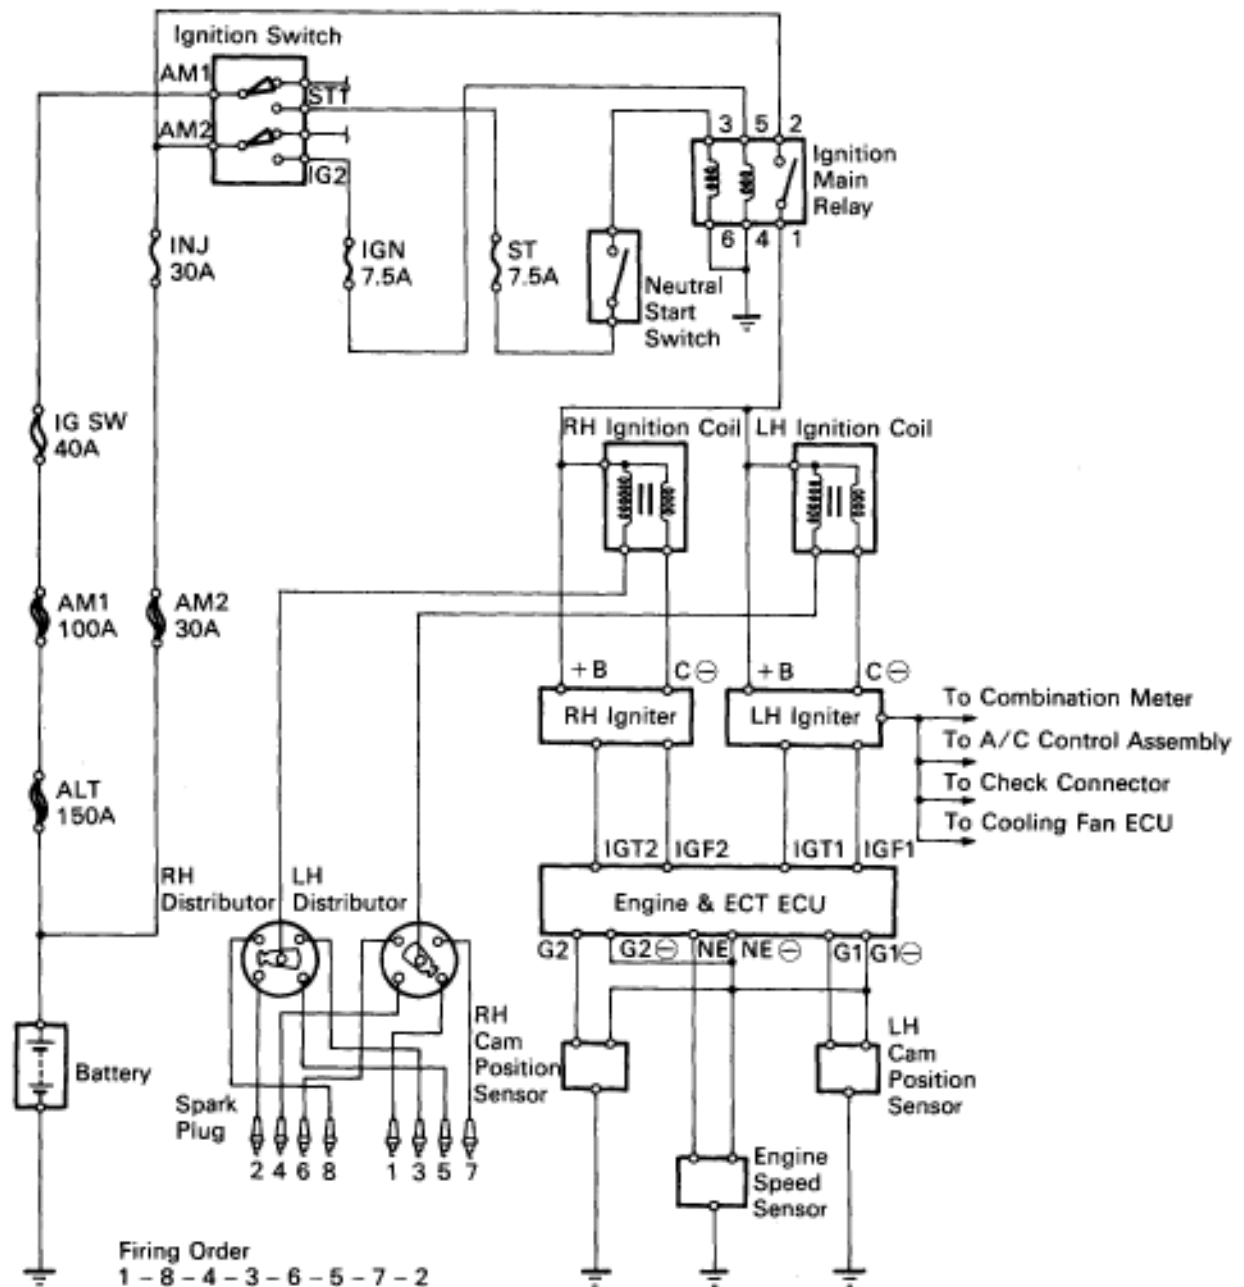

P01581

## OPERATION

To maintain the most appropriate ignition timing, the ECU sends a control signal so that the igniter sends current to the ignition coil and the spark plugs produce a spark.