

ABBREVIATIONS USED IN THIS MANUAL

| | | | |
|----------|------------------------------------|---------|---|
| ABS | Anti-Lock Brake System | J/B | Junction Block |
| A/C | Air Conditioner | LED | Light Emitting Diode |
| ALR | Automatic Locking Retractor | LH | Left-Hand |
| APPROX. | Approximation | LHD | Left-Hand Drive |
| A/T, ATM | Automatic Transmission | LLC | Long Life Coolant (Year Around Coolant) |
| ATF | Automatic Transmission Fluid | Max. | Maximum |
| BTDC | Before Top Dead Center | Min. | Minimum |
| BVSV | Bimetal Vacuum Switching Valve | MP | Multipurpose |
| CALIF. | Vehicles Sold in California | N | Neutral |
| CB | Circuit Breaker | OD, O/D | Overdrive |
| DOHC | Double Over Head Cam | O/S | Oversize |
| DP | Dash Pot | P & BV | Proportioning and Bypass Valve |
| ECT | Electronic Controlled Transmission | PCV | Positive Crankcase Ventilation |
| ECU | Electronic Controlled Unit | PS | Power Steering |
| EFI | Electronic Fuel Injection | RH | Right-Hand |
| EGR | Exhaust Gas Recirculation | RL | Rear Left |
| ELR | Emergency Locking Retractor | RR | Rear Right |
| EPR | Evaporator Pressure Regulator | RR, Rr | Rear |
| ESA | Electronic Spark Advance | SRS | Supplemental Restraint System |
| EVAP | Evaporative (Emission Control) | SSM | Special Service Materials |
| EX | Exhaust (manifold, valve) | SST | Special Service Tools |
| Ex. | Except | STD | Standard |
| FIPG | Formed in Place Gasket | SW | Switch |
| FL | Front Left | TDC | Top Dead Center |
| FL | Fusible Link | TDCL | Total Diagnostic Communication Link |
| FPU | Fuel Pressure Up | Temp. | Temperature |
| FR | Front Right | TRAC | Traction Control System |
| FR, Fr | Front | TWC | Three-Way Catalyst |
| HAC | High Altitude Compensation | VSV | Vacuum Switching Valve |
| IG | Ignition | VTV | Vacuum Transmitting Valve |
| IN | Intake (manifold, valve) | w/ | With |
| INT | Intermittent | w/o | Without |
| ISC | Idle Speed Control | | |