
MAINTENANCE

GENERAL NOTES:

- The maintenance schedule for the vehicle consists of separate A and B schedules which are applicable depending on the conditions the vehicle is used in. Confirm the vehicle's usage conditions, select the appropriate schedule and service the vehicle accordingly.
- Every service item in the periodic maintenance list must be performed.
- Next to the columns of periods in the schedule, reference, pages have been added for easy access to service data and procedures necessary for each operation.
- Periodic maintenance service must be performed according to whichever interval in the periodic maintenance list occurs first, the odometer reading (miles or km) or the time interval (months).
- Maintenance service after the last period should be performed at the same interval as before unless otherwise noted.
- Failure to do even one item can cause the engine to run poorly and increase exhaust emissions.

MAINTENANCE SCHEDULE

SCHEDULE A

Maintenance operations: A = Check and adjust if necessary;
R = Replace, change or lubricate;
I = Inspect and correct or replace if necessary

CONDITIONS:

- Towing a trailer, using a camper or car top carrier.
- Repeated short trips less than 5 miles (8 km) and outside temperature remains below freezing.
- Extensive idling and/or low speed driving for a long distance such as police, taxi or door-to-door delivery use.
- Operating on dusty, rough, muddy or salt spread roads.

System	Service interval (Odometer reading or months, whichever comes first)	Maintenance services beyond 60,000 miles (96,000 km) should continue to be performed at the same intervals shown for each maintenance schedule.																		See page (item No.)
		Miles x 1,000	1	3.75	7.5	11.25	15	18.75	22.5	26.25	30	33.75	37.5	41.25	45	48.75	52.5	56.25	60	
	Maintenance items	km x 1,000	1.6	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	Months
ENGINE	Timing belt ⁽¹⁾																		R	MA-4 (item 1)
	Valve clearance																		A	MA-8 (item 12)
	Drive belt		I: First period, 60,000 miles (96,000 km) or 72 months. I: After that every 7,500 miles (12,000 km) or 12 months																	MA-4 (item 2)
	Engine oil and oil filter *		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	MA-6 (item 6)
	Engine coolant		R: First period, 45,000 miles (72,000 km) or 36 months. R: After that every 30,000 miles (48,000 km) or 24 months																	MA-6 (item 7)
FUEL	Exhaust pipes and mountings					I					I				I				I	MA-7 (item 11)
	Air filter ⁽²⁾ *			I	I	I	I	I	I	I	R	I	I	I	I	I	I	I	R	MA-5 (item 3, 4)
	Fuel lines and connections ⁽³⁾										I								I	MA-7 (item 10)
IGNITION	Fuel tank cap gasket																		R	MA-7 (item 9)
	Spark plugs (Platinum tipped type)																		R	MA-5 (item 5)
EVAP	Charcoal canister																		I	MA-7 (item 8)
BRAKES	Brake linings and drums ⁽⁴⁾				I		I		I		I		I		I		I		I	MA-9 (item 15)
	Brake pads and discs (Front and rear)				I		I		I		I		I		I		I		I	MA-8 (item 14)
	Brake fluid ⁽⁵⁾		I				I				R				I				R	MA-9 (item 16)
	Brake line pipes and hoses						I				I				I				I	MA-8 (item 13)
CHASSIS	Steering linkage				I		I		I		I		I		I		I		I	MA-9 (item 17)
	SRS airbag		I: First period, 10 years. I: After that every 2 years.																	MA-10 (item 18)
	Ball joints and dust covers				I		I		I		I		I		I		I		I	MA-10 (item 20)
	Automatic transmission, and differential oil		I				R				R				R				R	MA-11 (item 21, 22)
	Steering gear housing oil ⁽⁶⁾		I				I				I				I				I	MA-10 (item 19)
	Bolts and nuts on chassis and body ⁽⁷⁾		I		I		I		I		I		I		I		I		I	MA-12 (item 23)
	Body inspection		I		I		I		I		I		I		I		I		I	MA-13 (item 24)
	Road test		I		I		I		I		I		I		I		I		I	MA-13 (item 25)

* Mark indicate maintenance which is part of the warranty conditions for the Emission Control System. The warranty period is in accordance with the owner's guide or the warranty booklet. (*: California specification vehicles)

- (1) Applicable to vehicles operated under conditions of extensive idling and/or low speed driving for long distances such as police, taxi or door-to-door delivery use.
- (2) Applicable when operating mainly on dusty road.
- (3) Includes inspection of fuel tank band and vapor vent system.
- (4) Also applicable to lining drum for parking brake.
- (5) Check for leakage.
- (6) Check for oil leaks from steering gear housing.
- (7) Applicable only when operating mainly on rough, muddy roads. The applicable parts are listed below. For other usage conditions, refer to SCHEDULE B.
 - Front and rear suspension member to cross body
 - Bolts for sheet installation

SCHEDULE B**CONDITIONS: Conditions other than those listed for SCHEDULE A.**

System	Service interval (Odometer reading or months, whichever comes first)		Maintenance service beyond 60,000 miles (96,000 km) should continue to be performed at the same intervals shown for each maintenance schedule.																See page (item No.)
	Maintenance items		Months																
	Miles x 1,000	km x 1,000	1	7.5	15	22.5	30	37.5	45	52.5	60	96	A						
ENGINE	Valve clearance																	A: Every 72 months	MA-8 (item 12)
	Drive belt																	I: After that every 7,500 miles (12,000 km) or 12 months	MA-4 (item 2)
	Engine oil and oil filter *																	R: Every 12 months	MA-6 (item 6)
	Engine coolant																	R: After that every 30,000 miles (48,000 km) or 24 months	MA-6 (item 7)
FUEL	Exhaust pipes and mountings																	I: Every 36 months	MA-7 (item 11)
	Air filter *																	R: Every 36 months	MA-5 (item 4)
	Fuel lines and connections ⁽¹⁾																	I: Every 36 months	MA-7 (item 10)
	Fuel tank cap gasket																	R: Every 72 months	MA-7 (item 9)
IGNITION	Spark plugs (Platinum tipped type)																	R: Every 72 months	MA-5 (item 5)
EVAP	Charcoal canister																	I: Every 72 months	MA-7 (item 8)
BRAKES	Brake linings and drums ⁽²⁾																	I: Every 24 months	MA-9 (item 15)
	Brake pads and discs (Front and rear)																	I: Every 24 months	MA-8 (item 14)
	Brake fluid ⁽³⁾																	R: Every 36 months	MA-9 (item 16)
	Brake line pipes and hoses																	I: Every 24 months	MA-8 (item 13)
CHASSIS	Steering linkage																	I: Every 24 months	MA-9 (item 17)
	SRS airbag																	I: First period, 10 years. I: After that every 2 years.	MA-10 (item 18)
	Ball joints and dust covers																	I: Every 24 months	MA-10 (item 20)
	Automatic transmission and differential oil ⁽³⁾																	I: Every 24 months	MA-11 (item 21)
	Steering gear housing oil ⁽⁴⁾																	I: Every 24 months	MA-10 (item 19)
	Bolts and nuts on chassis and body ⁽⁵⁾																	I: Every 24 months	MA-12 (item 23)
	Body inspection																	I: Every 12 months	MA-13 (item 24)
	Road test																	I: Every 12 months	MA-13 (item 25)

* Mark indicate maintenance which is part of the warranty conditions for the Emission Control System. The warranty period is in accordance with the owner's guide or the warranty booklet. (*: California specification vehicles)

(1) Includes inspection of fuel tank band and vapor vent system.

(2) Also applicable to lining drum for parking brake.

(3) Check for leakage.

(4) Check for oil leaks from steering gear housing.

(5) The applicable parts are listed below.

- Front and rear suspension member to cross body
- Bolts for sheet installation