



## Differential Mounting Cushion REPLACEMENT OF DIFFERENTIAL MOUNT CUSHION

### 1. REMOVE DIFFERENTIAL

(See page [SA-79](#))

### 2. REMOVE DIFFERENTIAL MOUNT CUSHION

Using SST, remove the differential mount cushion.

SST 09316-12010

#### NOTICE:

- When driving out the mount cushion, be careful not to touch the member with the SST.
- Align the SST straight so that the bolt of the SST parallels the center line of the mount cushion.
- When installing the bolts to the LH and RH differential mount cushions, make sure the bolts are passed through the correct holes in the SST as shown in the illustration.

### 3. INSTALL DIFFERENTIAL MOUNT CUSHION

Using SST, install the cushion so that the marks are positioned as shown in the illustration.

SST 09570-24010

#### NOTICE:

- Do not make a mistake with left and right sides or top and bottom.
- Set the SST after temporarily installing the differential mount cushion into the member so as not to be installed at an angle.
- To confirm that the differential mount cushion is aligned straight in relation to the member, check that the SST is fully in contact with all of the cushion.

### 4. INSTALL DIFFERENTIAL

(See page [SA-80](#))