






























# Preparation





## SST (SPECIAL SERVICE TOOLS)

Illustration	Part No.	Part Name	Note
	09043-38100	Hexagon 10 mm Wrench	Drive Shaft
	09223-63010	Crankshaft Rear Oil Seal Replacer	Side oil seal
	09229-55010	Oil Cooler Relief Valve Wrench	Companion flange lock nut
	09250-10011	Replacer Set "A"	
	(09252-10010)	No. 1 Replacer Handle	
	(09255-10011)	Crankshaft Rear Bearing Remover & Replacer	
	09308-00010	Oil Seal Puller	
	09316-12010	Transfer Bearing Replacer	
	09316-60010	Transmission & Transfer Bearing Replacer	
	(09316-00010)	Replacer Pipe	Driver pinion front bearing
	09330-00021	Companion Flange Holding Tool	
	09502-12010	Differential Bearing Replacer	
	09502-24010	Bearing Replacer	
	09520-24010	Differential Side Gear Shaft Puller	

 
**SST (SPECIAL SERVICE TOOLS) (Cont'd)**

Illustration	Part No.	Part Name	Note
	<b>95550-10012</b>	Replacer Set "B"	
	<b>(09252-10010)</b>	No. 1 Replacer Handle	
	<b>(09558-10010)</b>	Rear Axle Shaft Oil Seal Replacer	
	<b>09570-24010</b>	Remover & Replacer Differential Mount Cushion	
	<b>09608-30012</b>	Front Hub & Drive Pinion Bearing Tool Set	
	<b>(09608-04020)</b>	Handle	
	<b>(09608-04030)</b>	Front Hub Inner Bearing Cone Replacer	
	<b>(09608-04100)</b>	Drive Pinion Front Bearing Cup Replacer	
	<b>09608-32010</b>	Steering Knuckle Oil Seal Replacer	
	<b>09608-35014</b>	Axle Hub & Drive Pinion Bearing Tool Set	
	<b>(09608-06020)</b>	Handle	
	<b>(09608-06040)</b>	Front Hub Inner Bearing Cone Replacer	
	<b>(09608-06090)</b>	Front Hub Outer & Steering Worm Bearing Replacer	
	<b>(09608-06110)</b>	Front Hub Inner & Drive Pinion Front Bearing Cup Replacer	
	<b>(09608-06120)</b>	Front Hub Outer Bearing Cup Replacer	

**SST (SPECIAL SERVICE TOOLS) (Cont'd)**

Illustration	Part No.	Part Name	Note
	<b>(09608-06180)</b>	Drive Pinion Rear Bearing Cup Replacer	
	<b>(09608-06210)</b>	Rear Axle bearing Replacer	
	<b>09950-00020</b>	Bearing Remover	Dust deflector and dust cover
	<b>09950-20017</b>	Universal Puller	

**RECOMMENDED TOOLS**

Illustration	Part No.	Part Name	Note
	<b>09025-00010</b>	Small Torque Wrench	

**EQUIPMENT**

Part Name	Note
Dial indicator	Ring gear runout and gear backlash
Torque wrench	
Micrometer	

**LUBRICANT**

Item	Capacity			Classification
	Liters	US qts	Imp. qts	
Differential oil	1.35	1.43	1.19	API GL-5 Above-18°C (0°F) SAE 90 Below-18°C (0°F) SAE 80W-90 or 80W