











Preparation

SST (SPECIAL SERVICE TOOLS)

Illustration	Part No.	Part Name	Note
	09308-00010	Oil Seal Puller	Steering knuckle oil seal
	09608-32010	Steering Knuckle Oil Seal Replacer	
	09608-35014	Axle Hub & Drive Pinion Bearing Tool Set	
	(09608-06040)	Front Hub Inner Bearing Cone Replacer	
	(09608-06100)	Front Hub Outer Replacer	
	(09608-06200)	Rear Axle Bearing Replacer	
	09628-10011	Ball Joint Puller	
	09628-62011	Ball Joint Puller	
	09950-20017	Universal Puller	

RECOMMENDED TOOLS

Illustration	Part No.	Part Name	Note
	09905-00013	Snap Ring Pliers	Front axle hub bearing

EQUIPMENT

Part Name	Note
Dial indicator	
Torque wrench	