














Preparation

SST (SPECIAL SERVICE TOOLS)

Illustration	Part No.	Part Name	Note
	09223-41020	Crankshaft Rear Oil Seal Replacer	Oil Seal
	09308-00010	Oil Seal Puller	Axle hub oil seal
	09309-36010	Transmission Rear Bearing Replacer	Wheel bearing
	09608-32010	Steering Knuckle Oil Seal Replacer	
	09608-35014	Axle Hub & Drive Pinion Bearing Tool Set	
	(09608-06020)	Handle	
	(09608-06100)	Front Hub Outer Replacer	
	(09608-06160)	Rear Hub Inner Bearing Cup Replacer	
	09610-20012	Pitman Arm Puller	
	09628-10011	Ball Joint Puller	
	09628-62011	Ball Joint Puller	
	09950-20017	Universal Puller	

RECOMMENDED TOOLS

Illustration	Part No.	Part Name	Note
	09905-00013	Sanp Ring Pliers	Rear axle hub hearing

EQUIPMENT

Part Name	Note
Dial indicator	Rear axle hub
Torque wrench	